

Bella Depot Model 81

Bella Depot 72-Inch Modern Wood Ceiling Fan with Remote Control

Model: 81 | Brand: Bella Depot

INTRODUCTION

 
This manual provides detailed instructions for the safe installation, operation, and maintenance of your Bella Depot 72-inch Modern Wood Ceiling Fan. Please read all instructions carefully before beginning installation and retain this manual for future reference. Proper installation and use are essential for optimal performance and safety.

SAFETY INFORMATION


- Ensure the power supply is disconnected before installation, cleaning, or maintenance.
- All electrical connections must comply with local codes and national electrical codes. If you are unfamiliar with electrical wiring, consult a qualified electrician.
- The mounting structure must be capable of supporting the weight of the fan (approximately 20 lbs).
- Do not bend the blade holders during installation or cleaning.
- Maintain a minimum clearance of 7 feet from the floor to the fan blades.
- Do not operate the fan if any part is damaged.
- This fan is designed for indoor use only.

PACKAGE CONTENTS

Carefully unpack all components and ensure all items are present before discarding packaging materials. Refer to the installation video for a visual guide to the parts.

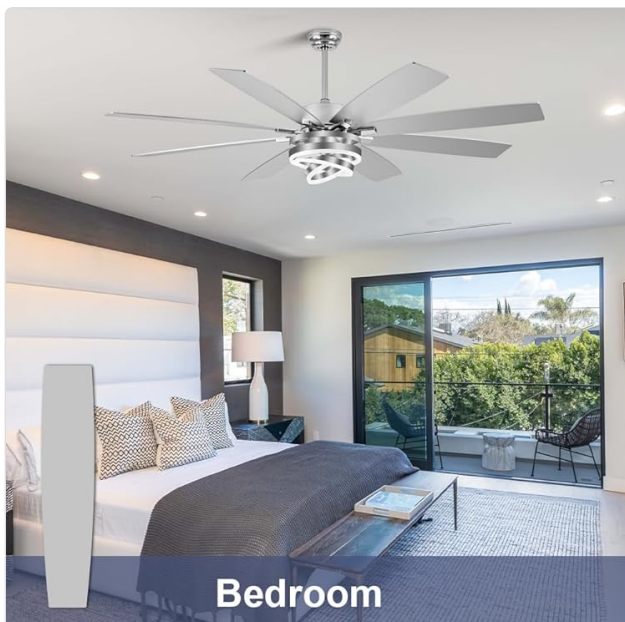


Bedroom

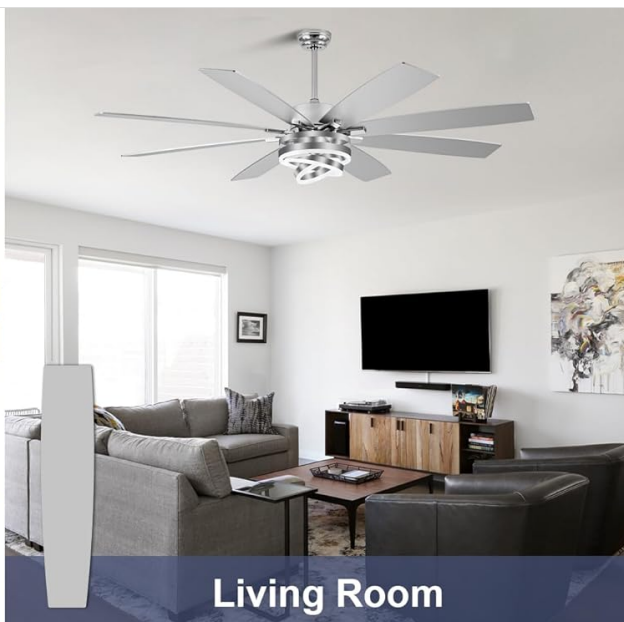 

Living Room



 office

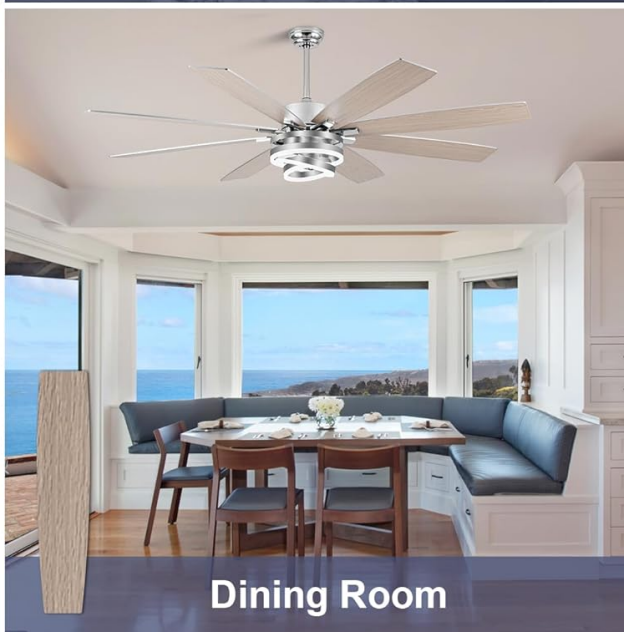

Dining Room

Image: All components of the Bella Depot 72-inch ceiling fan laid out for inspection.

- Motor Housing Assembly
- Fan Blades (8 pieces)
- Blade Holders (8 pieces)
- Downrod and Canopy
- Mounting Bracket
- LED Light Kit
- Remote Control and Receiver
- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual

INSTALLATION INSTRUCTIONS

For a visual step-by-step guide, please watch the official installation video below. Ensure all safety precautions are followed.

Your browser does not support the video tag.

Video: Official installation guide for the Bella Depot 72-inch ceiling fan.

Step-by-Step Guide:

1. **Prepare the Mounting Location:** Turn off power at the circuit breaker. Secure the mounting bracket to the ceiling junction box using appropriate screws and washers. Ensure the bracket is firmly attached and can support the fan's weight.
2. **Assemble the Fan Blades:** Attach each fan blade to its respective blade holder using the provided screws. Then, attach the blade holder assemblies to the motor housing. Ensure all screws are tightened securely.
3. **Install the Downrod:** Feed the electrical wires from the motor through the downrod. Insert the downrod into the motor housing and secure it with the provided pin and screws.
4. **Hang the Fan:** Carefully lift the fan assembly and hang it on the mounting bracket. Ensure the downrod ball is properly seated in the bracket's groove.
5. **Make Electrical Connections:** Connect the fan's electrical wires to the house wiring according to the wiring diagram in the full manual (Live to Live, Neutral to Neutral, Ground to Ground). Connect the remote receiver wires as instructed.
6. **Install the Light Kit:** Connect the light kit wires to the corresponding wires from the fan motor. Secure the light kit to the bottom of the motor housing.
7. **Secure the Canopy:** Slide the canopy up the downrod and secure it to the mounting bracket with screws, covering the electrical connections.

OPERATING INSTRUCTIONS

Your Bella Depot ceiling fan comes with a remote control for convenient operation of all functions.



Image: Remote control for the Bella Depot 72-inch ceiling fan.

Remote Control Functions:

- **Power On/Off:** Press the power button to turn the fan and light on or off.
- **Fan Speed:** Use the '1' through '6' buttons to select one of six fan speeds.
- **Light Control:**
 - **Light On/Off:** Press the light button to toggle the light.
 - **Color Temperature:** Cycle through Warm, Neutral, and Cool white light options.
 - **Dimming:** Use the brightness adjustment buttons to increase or decrease light intensity.
- **Reversible Motor:** Press the reverse button to change the direction of blade rotation. This allows for downdraft cooling in summer and updraft air circulation in winter.
- **Timer Function:** Set the fan to automatically turn off after 1, 2, 4, or 8 hours.

Your browser does not support the video tag.

Video: Demonstration of the Bella Depot 72-inch ceiling fan's remote control functions, including speed, light, and reversible motor.

FEATURES

- **Large & Stylish Design:** 72-inch fan with two-tone fan blades, suitable for large living rooms, garages, and covered patios.
- **Whisper-Quiet Efficiency:** Features a reversible DC motor operating silently below 36 dB for year-round comfort.
- **Versatile Blade Rotation:** Offers forward rotation for cooling in summer and reverse function for enhanced air circulation in winter.
- **Convenient Remote Control:** Allows easy adjustment of fan speed, light color temperature (Warm/Neutral/Cool), and timing options (1/2/4/8H).
- **Customizable Ambiance:** Integrated 24W LED light with 3 color temperatures and dimming capability.

SPECIFICATIONS

Feature	Detail
Brand	Bella Depot
Model Name	81
Size	72 inches
Color	Chrome (with wood-look blades)
Material	Metal, Wood
Power Source	DC
Installation Type	Semi Flush Mount
Special Features	Remote Controlled, Reversible Motor, LED Light with Color Temperatures
Control Method	Remote
Light Source Type	LED
Light Color Options	Warm White, Neutral White, Cool White
Wattage	60 watts
Brightness	2550 Lumen
Product Dimensions	72 x 72 x 10 inches

MAINTENANCE

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.
- **Blade Balance:** If the fan wobbles, check that all blade screws are tight and that blades are evenly balanced. A balancing kit (not included) may be used if necessary.
- **Light Source:** The integrated LED light source is designed for long life and is not user-replaceable.

TROUBLESHOOTING

- **Fan Does Not Start:** Check power connections, ensure the remote control batteries are fresh, and verify the circuit breaker is on.
- **Light Does Not Work:** Check light connections, ensure the remote control batteries are fresh, and verify the light button is pressed.
- **Excessive Wobbling:** Ensure all blade screws are tight and the mounting bracket is securely fastened. Check for any bent blades.
- **Remote Control Not Responding:** Replace batteries. If issues persist, re-pair the remote control with the fan according to the pairing instructions (refer to the full manual or manufacturer's website).

WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please visit the official Bella Depot store on Amazon or contact customer service directly. You can find more information and contact details at the [Bella Depot Store](#).



Image: Bella Depot brand logo.