

VEVOR QD-SSG01

VEVOR 24 ft 4000 psi Pressure Washer Telescoping Wand

Model: QD-SSG01 | Instruction Manual

[Introduction](#) [Safety](#) [Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)
& Support

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your VEVOR 24 ft 4000 psi Pressure Washer Telescoping Wand. Please read this manual thoroughly before assembly, operation, or maintenance to ensure proper function and prevent injury.

2. SAFETY INFORMATION

WARNING: High-pressure spray can cause serious injury. Always follow safety precautions.

- Always wear appropriate personal protective equipment (PPE), including eye protection, gloves, and sturdy footwear, when operating the pressure washer and telescoping wand.
- Ensure all connections are secure before operating. Leaks can reduce pressure and cause hazards.
- Never aim the spray at people, animals, or electrical equipment.
- Maintain a firm grip on the wand, especially when extended, as the recoil force can be significant.
- Use the included support harness to distribute weight and reduce fatigue, particularly when working at extended lengths.
- Do not operate the wand from a ladder. Always work from a stable ground surface.
- Ensure the working area is clear of obstacles and bystanders.
- Always turn off the pressure washer and release residual pressure before changing nozzles or accessories.
- Do not exceed the maximum rated pressure of 4000 psi for this wand.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Telescoping Wand (24 ft)
- High-Pressure Hose
- Spray Gun
- Support Harness
- Pivoting Coupler
- Brush Head
- 3 Extension Wands (15°, 90°, and Gutter Cleaner)
- 7 Spray Nozzles (3 x 0°, 15°, 25°, 40°, and Foam Nozzle)

- Adapters (M22 Female to M22-15 Male, 3/8" QC x M22-14 Male)
- Storage Bag



Figure 3.1: All components included with the VEVOR telescoping wand, including the wand, hose, spray gun, harness, various nozzles, extension wands, brush head, adapters, and storage bag.

4. SETUP

4.1 Assembling the Wand

1. Attach the high-pressure hose to the spray gun handle. Ensure a tight, leak-free connection.
2. Connect the spray gun to the base of the telescoping wand.
3. If necessary, use the provided adapters to ensure compatibility with your pressure washer's hose and connections.

4.2 Attaching Accessories

The wand features a quick-release mechanism for attaching nozzles and extension wands.

1. Pull back the collar on the quick-release fitting at the end of the wand.
2. Insert the desired nozzle, extension wand, pivoting coupler, or brush head into the fitting.
3. Release the collar to lock the accessory in place. Tug gently to ensure it is secure.

4.3 Using the Support Harness

The support harness is designed to reduce strain during extended use.

1. Put on the harness like a backpack, adjusting the shoulder straps and chest strap for a snug fit.
2. Attach the wand to the harness using the designated clips. Adjust the attachment point to balance the wand's weight comfortably.
3. Ensure the metal buckles are securely fastened.

Work Longer with Less Fatigue

Wide Support Harness



Wide & Thick
Shoulder Straps



Adjustable Waist Belt



Chest Strap

Figure 4.1: Proper use of the support harness to reduce fatigue when operating the telescoping wand.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Wand Length

The telescoping wand features multiple locking sections for length adjustment.

1. To extend or retract, unlock the orange clamps on each section.

2. Adjust the section to the desired length.
3. Securely relock the clamps to prevent accidental retraction during use.

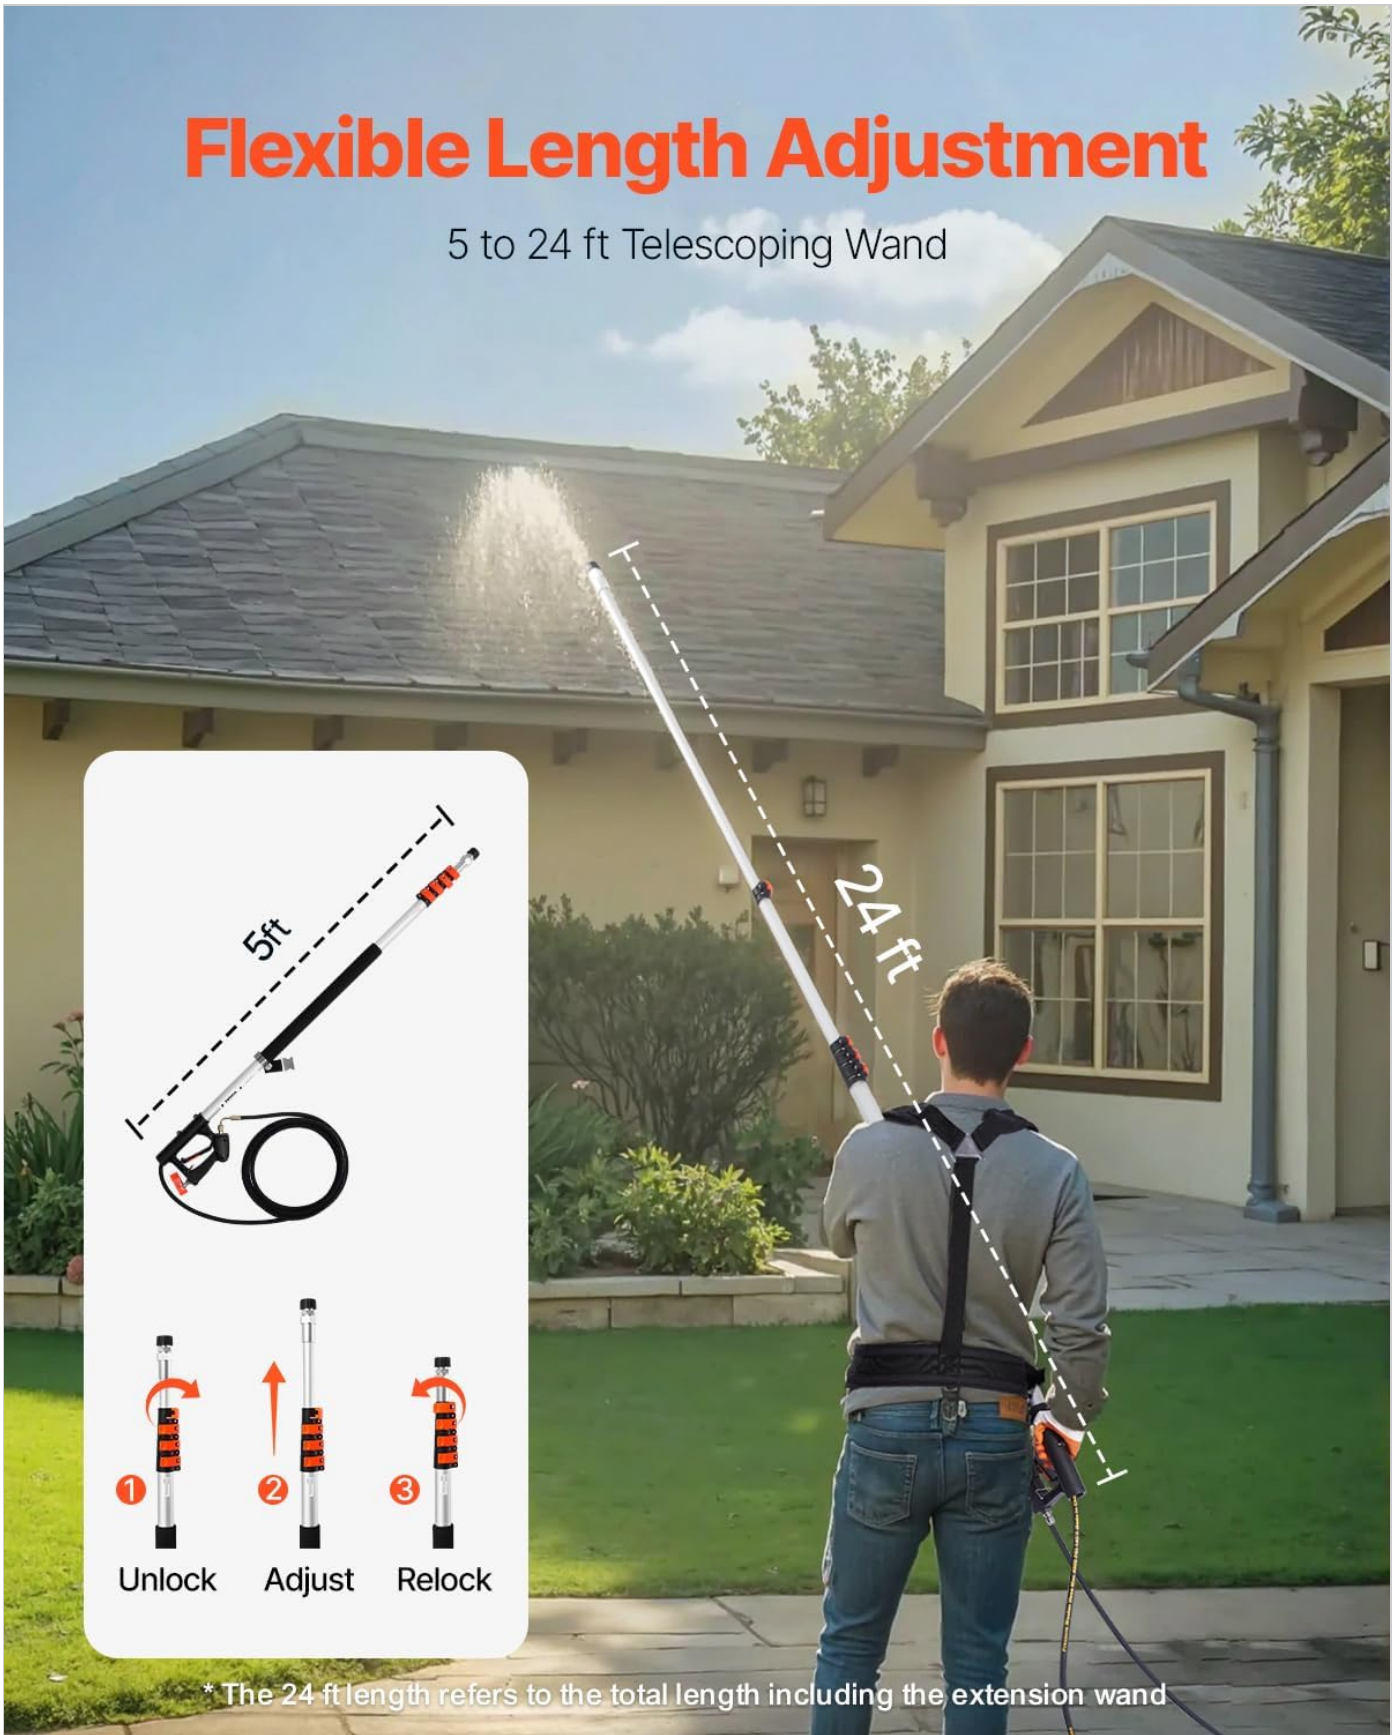


Figure 5.1: Steps for flexible length adjustment of the telescoping wand from 5 ft to 24 ft.

5.2 Selecting and Changing Spray Nozzles

The kit includes 7 color-coded spray nozzles for various cleaning tasks:

- **Red (0°):** Pin-point jet for intense cleaning of small, stubborn areas. Use with caution.

- **Yellow (15°):** Narrow spray for concentrated cleaning on hard surfaces.
- **Green (25°):** Medium spray for general cleaning of most surfaces.
- **White (40°):** Wide spray for gentle cleaning of delicate surfaces.
- **Black (Foam Nozzle):** For applying soap or detergent.
- Additional 0° nozzles (blue, pink) for specific applications.

To change nozzles, turn off the pressure washer, release pressure, then use the quick-release fitting as described in Section 4.2.

Efficient Cleaning for Various Surfaces

Equipped with 7 Spray Nozzles



Figure 5.2: The seven spray nozzles included, demonstrating various spray angles and the foam nozzle for efficient cleaning.

5.3 Using Extension Wands and Pivoting Coupler

The 15°, 90°, and gutter cleaner extension wands, along with the pivoting coupler, allow for targeted cleaning in hard-to-reach areas.

- Attach the desired extension wand or pivoting coupler to the end of the telescoping wand using the quick-release fitting.
- The pivoting coupler offers high flexibility, allowing the nozzle to rotate to various angles and directions, which is ideal for cleaning under eaves or around corners.
- The gutter cleaner extension is specifically designed to direct water into gutters for effective debris removal.

5.4 Using the Brush Head

The soft brush head is suitable for scrubbing surfaces that require agitation in addition to water pressure.

1. Attach the brush head to the telescoping wand.
2. Apply detergent using the foam nozzle, then use the brush head to scrub the surface.
3. Rinse thoroughly with a suitable spray nozzle.

5.5 Cleaning Various Surfaces

The telescoping wand is designed for cleaning high areas such as walls, pillars, windows, and gutters.

Clean High Places with Ease



Wall



Pillar



Window



Gutter

Figure 5.3: Examples of high-reach cleaning applications for the telescoping wand, including walls, pillars, windows, and gutters.

6. MAINTENANCE

- After each use, flush the wand and hose with clean water to remove any detergent or debris.
- Inspect all connections, O-rings, and nozzles for wear or damage. Replace worn parts as needed.
- Clean the brush head thoroughly after use and allow it to dry completely before storage.
- Store the telescoping wand in its storage bag in a dry, protected area to prevent damage and prolong its lifespan.

- Do not store the wand or accessories in freezing temperatures if they contain water, as this can cause damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No pressure or low pressure	Loose connections; clogged nozzle; insufficient water supply to pressure washer.	Check all connections for tightness. Clean or replace the nozzle. Ensure adequate water flow to the pressure washer.
Water leaks from connections	Loose fittings; worn O-rings; damaged threads.	Tighten all connections. Inspect and replace O-rings if worn. Check threads for damage.
Wand sections do not lock securely	Clamps are not fully engaged; debris in locking mechanism.	Ensure clamps are fully closed and locked. Clean any debris from the locking mechanisms.
Excessive fatigue during use	Harness not properly adjusted; wand extended too far without support.	Adjust the support harness for optimal weight distribution. Ensure the wand is balanced. Take frequent breaks.

8. SPECIFICATIONS

- **Brand:** VEVOR
- **Model Number:** QD-SSG01
- **Maximum Pressure:** 4000 psi
- **Adjustable Length:** 5 ft to 24 ft (total length including extension wand)
- **Item Weight:** 14.6 lbs (6.64 kg)
- **Material:** Lightweight Aluminum
- **Inlet Connection:** 3/8" Quick Plug
- **Color:** Black+Silver

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official VEVOR website or contact VEVOR customer service directly. Keep your purchase receipt for warranty claims.

