

[Manuals.plus](#) /

› [WE-VIBE](#) /

› WE-VIBE Chorus Couples Vibrator Instruction Manual

WE-VIBE Chorus

WE-VIBE Chorus Couples Vibrator

INSTRUCTION MANUAL

1. Product Overview

The WE-VIBE Chorus is a couples vibrator designed for simultaneous stimulation of the clitoris, G-spot, and penis. It features an adjustable design for comfortable wear and can be controlled via a squeeze remote or the We-Connect smartphone application.



Image: The WE-VIBE Chorus Couples Vibrator in Coral, shown with its remote control and indicating app compatibility.

Key Features:

- **Triple Stimulation:** Designed to stimulate the clitoris, G-spot, and penis simultaneously.
- **Adjustable Design:** Flexible and soft material for hands-free comfort and an adaptable fit.
- **Squeeze Remote:** Offers intuitive control, allowing intensity adjustment by squeezing.
- **Touch Sense Modes:** Features touch-sensitive receptors for responsive vibration control based on movement.
- **App Control:** Compatible with the free We-Connect phone app for remote play, custom vibration patterns, and shared control.
- **Waterproof (IPX7):** Suitable for use in the bath or shower and easy to clean.

2. What's Included

Your WE-VIBE Chorus package includes:

- WE-VIBE Chorus Couples Vibrator
- Squeeze Remote Control

- Charging Case/Base
- USB Charging Cable
- Instruction Manual

3. Setup and Charging

Initial Charge:

1. Place the Chorus vibrator and its remote into the charging case.
2. Connect the USB charging cable to the charging port on the case and plug it into a USB power source.
3. The indicator light on the charging case will illuminate to show charging status. Allow for a full charge before first use.



Image: The WE-VIBE Chorus vibrator and its remote control securely placed within their charging case.

App Connection (We-Connect):

1. Download the free We-Connect app from your smartphone's app store (available on Google Play and the App Store).

2. Ensure your Chorus device is charged and powered on.
3. Open the We-Connect app and follow the on-screen instructions to pair your device via Bluetooth.

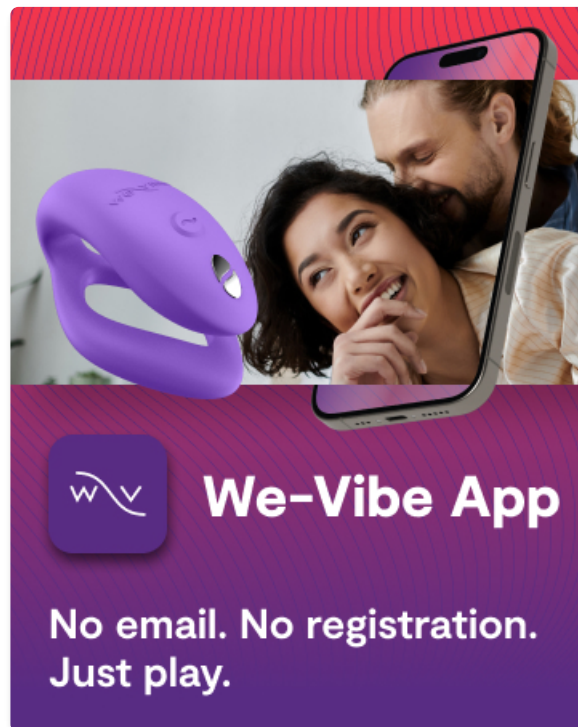


Image: A smartphone displaying the We-Connect app interface, showing various vibration control options.

4. Operating Instructions

Basic Operation:

1. Apply a water-based lubricant to the internal arm of the Chorus vibrator.
2. Insert the device comfortably.
3. Press the power button on the device or use the remote/app to turn it on and select your desired vibration pattern and intensity.

we VIBE



Triple pleasure

Chorus stimulates the G-spot, clitoris, or penis simultaneously or individually

Image: A visual guide illustrating the three steps for using the WE-VIBE Chorus vibrator during intimate activity.

Remote Control:

The squeeze remote allows for easy adjustment of intensity. Squeeze the remote to increase vibration intensity. The remote also features buttons for power and pattern selection.

App Control (We-Connect):

The We-Connect app provides advanced control options, including:

- **Touch Mode:** Individually adjustable vibrations controlled by touch.
- **Beat Mode:** Synchronizes vibrations to the rhythm of music.
- **Custom Vibes:** Create and save personalized vibration patterns.
- **Long-Distance Play:** Share control with a partner from anywhere.

we VIBE

CHORUS

Berlin

Sydney

No limits

More closeness despite long distance

VIA APP & INTERNET
Connect worldwide
VIA APP & INTERNET

Image: The We-Connect app interface on a smartphone, highlighting various control modes and the long-distance play feature.

Touch Sense Modes:

The Chorus features unique touch-sensitive receptors beneath the WE-VIBE logo. These receptors allow your movements to influence and control the vibrations, offering a dynamic experience.

5. Maintenance and Care

Cleaning:

The WE-VIBE Chorus is 100% waterproof (IPX7) for easy cleaning. After each use, clean the device with warm water and a mild soap or a specialized toy cleaner. Rinse thoroughly and pat dry with a lint-free cloth.

Storage:

Store the device in its charging case or a clean, dry place away from direct sunlight and extreme temperatures. Avoid storing with other toys made of different materials to prevent material degradation.

6. Troubleshooting

- **Device not turning on:** Ensure the device is fully charged. Connect it to the charging case and a power source for at least 2 hours.
- **Remote not responding:** Check if the remote's battery (CR2032) needs replacement. Ensure the remote is within close proximity to the device.
- **App connectivity issues:** Ensure Bluetooth is enabled on your smartphone. Try restarting the We-Connect app and the Chorus device. If issues persist, unpair and re-pair the device within the app settings.
- **Weak vibrations:** Ensure the device is fully charged. If using app control, check the intensity settings within the app.

7. Specifications

Feature	Detail
Model Name	Chorus
Brand	WE-VIBE
Material	Silicone
Color	Coral
Product Dimensions	4.72 x 4.72 x 4.33 inches
Item Weight	3.14 ounces
Batteries	1 CR2032 battery required (included)
Manufacturer	WOW Tech

8. Warranty and Support

For warranty information and customer support, please refer to the official WE-VIBE website or contact their customer service directly. Details are typically provided with your product packaging or on the manufacturer's website.

Manufacturer: WOW Tech

Brand: WE-VIBE

Website: www.we-vibe.com