

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WE-VIBE](#) /

› [WE-VIBE Chorus Couples Vibrator Instruction Manual](#)

WE-VIBE Chorus

WE-VIBE Chorus Couples Vibrator Instruction Manual

Model: Chorus

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. PRODUCT OVERVIEW

The WE-VIBE Chorus is a couples vibrator designed for shared pleasure. It features an adjustable design for comfortable, hands-free use during intimate moments. The device is made from body-safe silicone and is 100% waterproof, allowing for easy cleaning and versatile use.



Figure 1: WE-VIBE Chorus Couples Vibrator and its control options.

Key Features:

- **Triple Stimulation:** Designed to stimulate the clitoris, G-spot, and penis simultaneously during penetrative sex.
- **Adjustable Design:** Flexible and soft material ensures a comfortable and adaptable fit for hands-free use.
- **Squeeze Remote:** Offers intuitive control; squeezing increases vibration intensity.
- **Touch Sense Modes:** Unique touch-sensitive receptors allow movements to control vibrations.
- **App Control:** Connects via Bluetooth to the free We-Connect phone app for remote control, custom vibration patterns, and long-distance play.
- **Waterproof (IPX7):** Fully submersible for easy cleaning and use in various environments.

2. SETUP

2.1 Charging the Device

Before first use, fully charge your WE-VIBE Chorus. The device comes with a charging case that also serves as a discreet storage solution.

1. Place the Chorus vibrator and its remote into the designated slots in the charging case.
2. Connect the charging cable to the port on the charging case and to a USB power source.
3. An indicator light on the charging case will show the charging status. It will typically change color or turn off when fully charged.



Figure 2: WE-VIBE Chorus vibrator and remote in its charging case.

2.2 App Installation and Connection

For enhanced control and features, download the We-Connect app.

1. Download the free We-Connect app from your device's app store (available on Google Play and the App Store).
2. Ensure your phone's Bluetooth is enabled.
3. Turn on your WE-VIBE Chorus device by pressing the power button.
4. Open the We-Connect app and follow the on-screen instructions to pair your device.

Pleasure to meet you

We-Vibe created the first ever wearable couples toy to enhance the connection between partners.

We believe in the power of new experiences, so our mission is to inspire partners to explore and connect in new and fun ways

Figure 3: The We-Connect app interface for intuitive control.

3. OPERATING INSTRUCTIONS

3.1 Basic Use (Device Only)

1. Apply a water-based lubricant to the internal arm of the toy for comfortable insertion.
2. Insert the device as desired.
3. Press the power button on the device to turn it on and cycle through vibration modes.
4. Hold the power button to turn the device off.

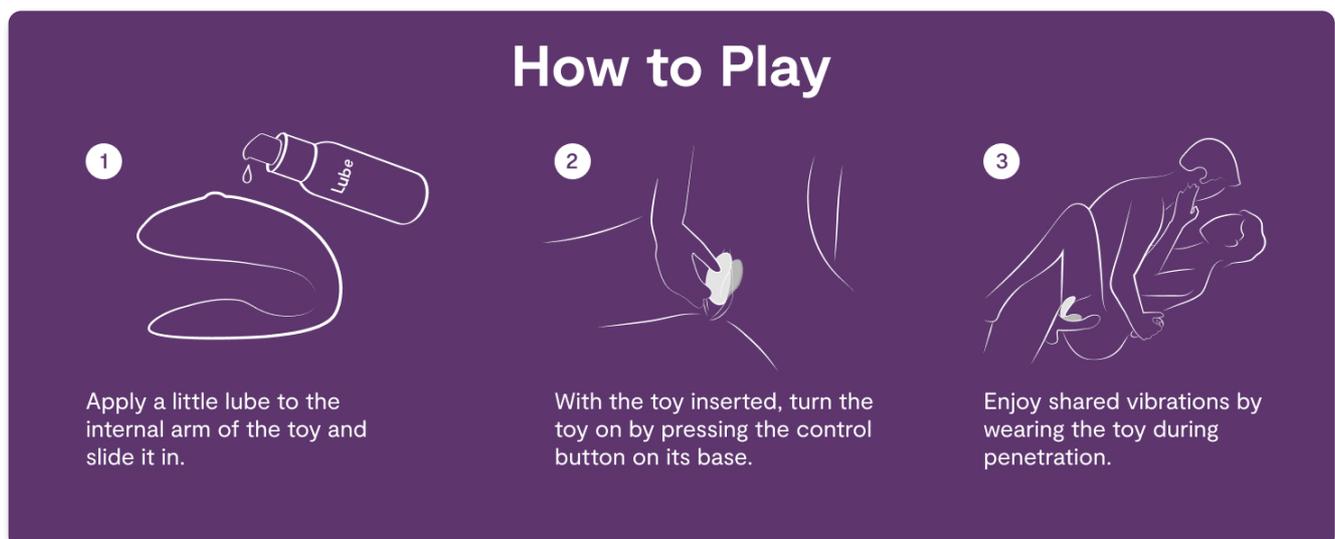


Figure 4: How to use the WE-VIBE Chorus for shared pleasure.

3.2 Using the Remote Control

The included remote control provides convenient access to the device's functions.

- **Power Button:** Turns the device on/off and cycles through modes.
- **Intensity Buttons:** Use the '+' and '-' buttons to adjust vibration intensity.

- **Squeeze Mode:** The remote features a squeeze function; applying pressure increases intensity.

The image is a promotional graphic for the WE-VIBE Chorus vibrator. It is split into two panels. The left panel shows a woman lying in bed, smiling, with a smartphone on the bed next to her. The right panel shows a man holding a smartphone. A purple banner across the middle contains icons for Berlin and Sydney, along with a Wi-Fi symbol and a smartphone icon. At the bottom, a dark purple section contains the text 'No limits More closeness despite long distance' and a circular logo that reads 'VIA APP & INTERNET Connect worldwide VIA APP & INTERNET'.

Figure 5: The WE-VIBE Chorus vibrator and its dedicated remote control.

3.3 Using the We-Connect App

The We-Connect app offers advanced control and customization.

- **Custom Vibes:** Create and save personalized vibration patterns.
- **Long-Distance Play:** Share control of your device with a partner from anywhere in the world.
- **Music Sync:** Some app modes allow vibrations to sync with music.
- **Touch Mode:** Control vibrations directly through touch on your phone screen.

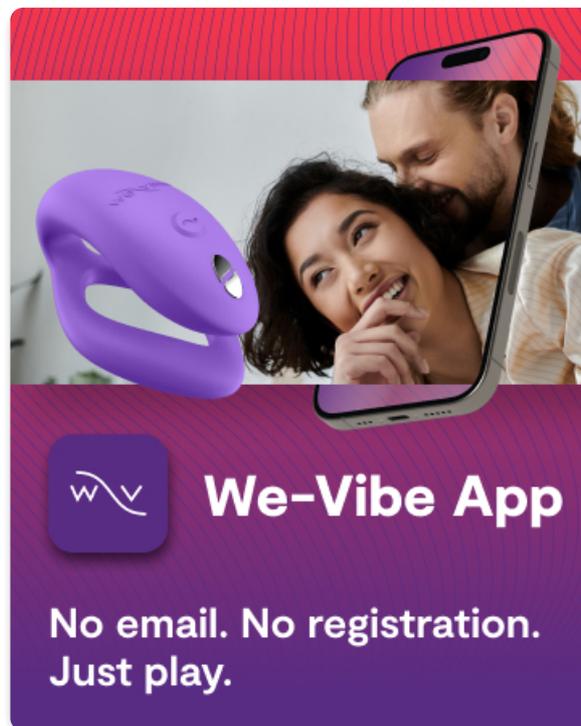


Figure 6: Long-distance control and app features for the WE-VIBE Chorus.

4. MAINTENANCE

4.1 Cleaning Instructions

Proper cleaning ensures hygiene and extends the lifespan of your device.

1. After each use, wash the device thoroughly with warm water and a mild, toy-safe soap or specialized toy cleaner.
2. Rinse completely to remove all soap residue.
3. Pat dry with a lint-free cloth or allow to air dry completely before storing.
4. Do not use harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the silicone material.

4.2 Storage

Store the WE-VIBE Chorus in its charging case or a clean, dry place away from direct sunlight and extreme temperatures. Avoid storing it with other toys made of different materials to prevent material degradation.

5. TROUBLESHOOTING

5.1 Device Not Turning On or Responding

- **Check Battery:** Ensure the device is fully charged. Place it in the charging case and verify the indicator light.
- **Power Button:** Press and hold the power button for a few seconds to ensure it registers.

5.2 App/Remote Connectivity Issues

- **Bluetooth:** Ensure Bluetooth is enabled on your phone and the device is within range.
- **Re-pair:** If connection is lost, try unpairing and re-pairing the device within the We-Connect app.
- **Obstructions:** Physical obstructions or body positioning can sometimes interfere with signal strength, especially with the remote. Try adjusting positions.

- **App Update:** Ensure your We-Connect app is updated to the latest version.
- **Restart:** Try restarting both your phone and the WE-VIBE Chorus device.

5.3 Uncomfortable Fit

- **Adjust Position:** The Chorus is designed to be adjustable. Experiment with different placements and angles to find the most comfortable fit.
- **Lubrication:** Ensure adequate water-based lubricant is used to minimize friction and improve comfort.

6. SPECIFICATIONS

Feature	Detail
Model Name	Chorus
Brand	WE-VIBE
Material	Silicone
Color	Dark Purple
Product Dimensions	4.33 x 3.84 x 4.33 inches
Weight	1.1 Pounds
Batteries	1 CR2032 batteries required (for remote)
Waterproof Rating	IPX7
Connectivity	Bluetooth (We-Connect App)

7. WARRANTY & SUPPORT

For detailed warranty information and customer support, please refer to the official WE-VIBE website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

Manufacturer: WOW Tech

Website: www.we-vibe.com (Example, please verify official site)