

Devoko 3x6

Devoko 3x6 Folding Gazebo Instruction Manual

Model: 3x6 | Brand: Devoko

1. INTRODUCTION

Thank you for choosing the Devoko 3x6 Folding Gazebo. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new gazebo. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

- **Proper Assembly:** Ensure all components are correctly assembled and securely fastened according to the instructions to prevent structural failure or injury.
- **Anchoring:** Always secure the gazebo to a stable base using the provided ropes and ground stakes, especially in windy conditions. Failure to do so may result in the gazebo being lifted or damaged, potentially causing injury.
- **Weather Conditions:** This gazebo is designed for temporary use and offers protection against sun and light rain. It is not intended for use in extreme weather conditions such as heavy winds, storms, or snow. Disassemble and store the gazebo during adverse weather.
- **Load Capacity:** Do not hang heavy objects from the gazebo frame or canopy. Respect the structural load limits.
- **Fire Safety:** Keep all flame and heat sources away from the gazebo fabric. The fabric is not fireproof.
- **Supervision:** Children should be supervised around the gazebo to prevent accidents.

3. PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- 1 x Folding Frame (Alloy Steel)
- 1 x Top Canopy (210D Silver-Coated Oxford Cloth, UV50+, Waterproof)

- 1 x Storage Bag
- 6 x Side Walls (for 3x6 style)
- Installation Instructions
- Ropes
- Ground Stakes



Figure 3.1: Included Components

This image displays the various parts that come with your Devoko folding gazebo, including the frame, canopy, storage bag, side walls, ropes, and ground stakes, along with the instruction manual.

4. SETUP INSTRUCTIONS

The Devoko folding gazebo is designed for quick and tool-free assembly. It is recommended that two people assemble the gazebo for ease and safety.

4.1 Unfolding the Frame

1. Remove the frame from the storage bag.
2. With a partner, gently pull the frame outwards from opposite corners until it is partially open.

4.2 Attaching the Canopy

3. Place the canopy over the partially opened frame, ensuring the corners align.
4. Secure the canopy to the frame using the attached Velcro straps or ties.

4.3 Extending the Frame and Legs

5. Push up on the central hub of the frame until it locks into place.
6. Extend each leg downwards until it clicks into its lowest position.
7. Adjust the height of each leg by pressing the push-button and sliding the inner leg to one of the three available height settings (175cm, 185cm, 195cm). Ensure all legs are set to the same height for stability.

4.4 Attaching Side Walls (Optional)

8. If using side walls, attach them to the frame using the integrated Velcro or hook-and-loop fasteners.

4.5 Securing the Gazebo

9. Use the provided ropes and ground stakes to anchor the gazebo firmly to the ground at each corner. This is crucial for stability, especially in outdoor environments.

/ Installation Trilogy



Figure 4.1: Gazebo Setup Steps

This image illustrates the three main stages of setting up the gazebo: unfolding the frame, attaching the canopy, and extending the legs. It also shows a close-up of the height adjustment button.



Figure 4.2: Height Adjustment Mechanism

This image highlights the adjustable height feature of the gazebo, showing how to press and pull up to select one of the three height positions (175cm, 185cm, 195cm).



Figure 4.3: Securing the Gazebo

This image demonstrates the importance of using pull ropes and ground stakes to secure the gazebo, showing how they are attached to the frame and anchored into the ground for enhanced stability.

4.6 Setup Video Guide

Your browser does not support the video tag.

Video 4.1: Devoko Gazebo Setup and Use

This video provides a visual guide to the setup process of the Devoko gazebo, demonstrating how to unfold the frame, attach the canopy, and secure the structure. It also shows the gazebo in use.

Your browser does not support the video tag.

Video 4.2: Devoko Gazebo Detailed Assembly

This video offers a more detailed step-by-step assembly guide, showing close-ups of key connection points and how to properly secure the canopy and side walls.

5. OPERATING INSTRUCTIONS

5.1 Height Adjustment

The gazebo features three adjustable height settings. To change the height, locate the push-button on each leg. Press the button and slide the inner leg up or down to the desired position until it locks into place. Ensure all four legs are adjusted to the same height for optimal stability.

5.2 Usage Scenarios

This folding gazebo is suitable for various outdoor activities and events, including:

- Garden parties and family gatherings
- Camping trips
- Outdoor markets and fairs
- Beach outings
- Temporary shelter for events



Figure 5.1: Versatile Usage

This image showcases the versatility of the Devoko gazebo, illustrating its use in different settings such as markets, outdoor activities, backyard gatherings, and beaches.

6. MAINTENANCE

6.1 Cleaning

Clean the canopy and side walls with a mild soap and water solution. Do not use harsh chemicals or abrasive cleaners, as these can damage the fabric's waterproof and UV-protective coatings. Rinse thoroughly and allow to air dry completely before storage.

6.2 Storage

When not in use, disassemble the gazebo and store it in its original storage bag in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the canopy and frame are completely dry before packing to prevent mold or corrosion.

6.3 Frame Care

The alloy steel frame is designed for durability and corrosion resistance. Periodically inspect the frame for any signs of damage or wear. Lubricate moving parts if necessary to ensure smooth operation.

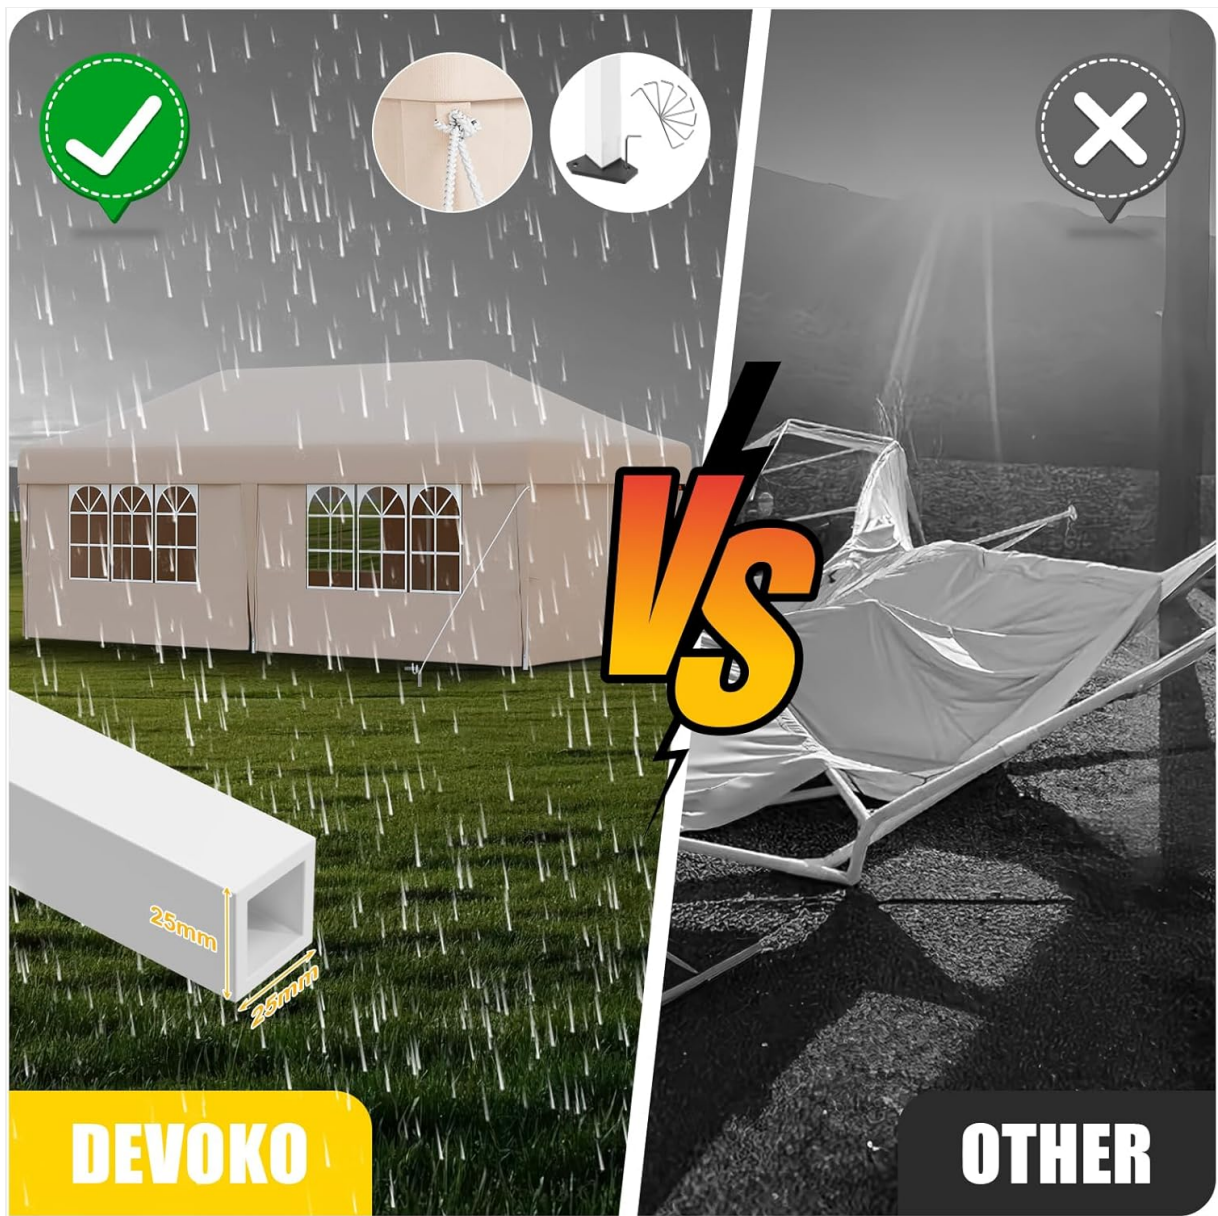


Figure 6.1: Durability and Waterproofing

This image contrasts the robust, waterproof design of the Devoko gazebo with a damaged, non-waterproof alternative, emphasizing the quality of materials and construction for long-term use.



Figure 6.2: UV and Waterproof Features

This image illustrates the UV30+ protection and waterproof capabilities of the gazebo's 210D silver-coated oxford cloth canopy, showing how it repels water effectively.

7. TROUBLESHOOTING

7.1 Gazebo Instability

- **Issue:** Gazebo feels wobbly or unstable.
- **Solution:** Ensure all legs are fully extended and locked into place at the same height. Verify that the frame's central hub is securely locked. Always use the provided ropes and ground stakes to anchor the gazebo firmly to the ground.

7.2 Water Accumulation on Canopy

- **Issue:** Water is pooling on the canopy during rain.
- **Solution:** While the canopy is waterproof, prolonged heavy rain can cause pooling if the canopy is not taut or if the height is not optimal. Ensure the canopy is stretched tightly over the frame. Adjust the leg height if necessary to create better water runoff. Do not allow water to accumulate, as this can damage the frame.

7.3 Difficulty Folding/Unfolding

- **Issue:** The frame is stiff or difficult to fold/unfold.
- **Solution:** Ensure no fabric is caught in the frame's moving parts. Lightly lubricate the joints with a silicone-based spray if stiffness persists. Always use two people for folding and unfolding to apply even pressure.

8. SPECIFICATIONS

Brand	Devoko
Product Type	Folding Gazebo
Model Style	3x6 with 6 side walls
Dimensions (L x W x H)	6L x 3W x 2.58H meters (600cm x 300cm x 258cm)
Adjustable Height	3 positions (175cm, 185cm, 195cm)
Frame Material	Alloy Steel
Canopy Material	210D Silver-Coated Oxford Cloth
Water Resistance Level	Waterproof
UV Protection	UV 50+
Color	Beige
Assembly Required	Yes

Product Dimension



Figure 8.1: Product Dimensions

This image provides a visual representation of the gazebo's dimensions when fully assembled (600cm length, 300cm width, 258cm height) and its compact size when folded and stored in its carrying bag (128cm length, 33cm width, 23.5cm height).

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Devoko gazebo comes with a **3-year warranty** from the date of purchase, covering manufacturing defects. Additionally, we offer a **30-day free return and replacement service** for quality issues from the date of sale.

9.2 Customer Support

If you encounter any problems or have questions regarding your Devoko gazebo, please do not hesitate to contact our customer support team. We are committed to providing satisfactory solutions within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official Devoko website.

