

## Beautiful EK-60X121

# Beautiful 3-Quart Digital Air Fryer (Model EK-60X121) Instruction Manual

This manual provides essential information for the safe and efficient operation of your Beautiful 3-Quart Digital Air Fryer. Please read thoroughly before first use and retain for future reference.

## 1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the appliance during use.

## 2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Beautiful 3-Quart Digital Air Fryer.



This image displays the Beautiful 3-Quart Digital Air Fryer from the front. It features a sleek white casing, a prominent gold-colored handle for the air fryer basket, and a digital control panel with touch-sensitive buttons for time, temperature, and four preset cooking functions (Air Fry, Roast, Reheat, Bake). The brand logo 'B' is visible at the top of the control panel.

### Components:

- **Control Panel:** Digital interface for setting time, temperature, and selecting presets.
- **Air Fryer Basket:** Removable non-stick basket for holding food during cooking.
- **Handle:** Ergonomic handle for safely pulling out and inserting the air fryer basket.
- **Air Inlet:** Located on the top of the unit, allows air to enter for circulation.
- **Air Outlet Vent:** Located at the rear of the unit, releases hot air during operation.

## 3. SETUP AND FIRST USE

---

### Before First Use:

1. **Unpack:** Carefully remove all packaging materials and any promotional labels or stickers from the air fryer.
2. **Clean:** Wash the air fryer basket and removable parts with hot, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, ensuring at least 6 inches of clear space around the back and sides for proper air circulation.
4. **Initial Run:** It is recommended to run the air fryer empty for about 10-15 minutes at 400°F (200°C) before first use to eliminate any manufacturing odors. A slight odor or smoke may be present during this process; this is normal.

## 4. OPERATING INSTRUCTIONS

---

### Control Panel Overview:

- **Time Controls (+/-):** Adjust cooking time.
- **Temperature Controls (+/-):** Adjust cooking temperature (90°F-400°F).
- **Preset Buttons:** Select from 4 convenient cooking modes: Air Fry, Roast, Reheat, Bake.
- **Start/Pause Button:** Begin or temporarily stop the cooking cycle.
- **Power Button:** Turn the appliance on or off.

### Basic Operation:

1. **Power On:** Plug the air fryer into a grounded electrical outlet. The display will illuminate.
2. **Prepare Food:** Place food into the air fryer basket. Do not overfill the basket to ensure even cooking.
3. **Set Temperature:** Use the Temperature +/- buttons to set the desired cooking temperature (range 90°F-400°F).
4. **Set Time:** Use the Time +/- buttons to set the desired cooking time.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
6. **Check Food:** During cooking, you can pull out the basket to shake or turn food. The air fryer will automatically pause and resume when the basket is reinserted.
7. **Finish:** The air fryer will beep when the cooking cycle is complete. Carefully remove the basket and transfer food to a serving dish.

### Using Presets:

The air fryer includes 4 convenient preset functions for common dishes:

1. **Select Preset:** After powering on, press the desired preset button (Air Fry, Roast, Reheat, Bake). The air fryer will automatically set a default time and temperature for that function.
2. **Adjust (Optional):** You can adjust the preset time and temperature using the +/- buttons if needed.
3. **Start:** Press the Start/Pause button to begin cooking.

### TurboCrisp Technology:

This air fryer utilizes TurboCrisp technology, which circulates super-heated air around your food, ensuring crispy results with little to no oil. This technology helps achieve a golden-brown finish and a tender interior for a variety of dishes.

## 5. CLEANING AND MAINTENANCE

---

### Cleaning:

- 1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
- 2. **Basket and Tray:** The non-stick air fryer basket and removable parts are dishwasher safe for easy cleaning. Alternatively, wash them with hot, soapy water and a non-abrasive sponge.
- 3. **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scourers, as they may damage the finish.
- 4. **Interior:** If necessary, wipe the interior of the appliance with a damp cloth. Ensure no water enters the electrical components.

**Storage:**

Ensure the appliance is clean and dry before storing. Store the air fryer in a cool, dry place.

6. TROUBLESHOOTING

Common Issues and Solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded electrical outlet.
Food is not cooked evenly.	Basket is overfilled; food is stacked.	Cook food in smaller batches. Shake or turn food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; fatty food cooking.	Clean the basket and interior thoroughly. For fatty foods, ensure proper ventilation.
Food is not crispy.	Not enough oil (if applicable); temperature too low; cooking time too short.	Lightly spray food with oil. Increase temperature or cooking time as needed.

7. SPECIFICATIONS

Technical Data:

Feature	Detail
Model Name	White Icing Air Fryer 3QT
Item Model Number	EK-60X121
Capacity	3-Quart
Temperature Range	90°F - 400°F
Control Method	Touch (Digital)
Special Feature	Digital Display, TurboCrisp Technology, 4 Presets
Material	Stainless Steel
Non-stick Coating	Yes

Feature	Detail
Dishwasher Safe Parts	Yes (Removable parts)
Product Dimensions	10"D x 4"W x 11"H
Item Weight	7 Pounds

## 8. WARRANTY AND SUPPORT



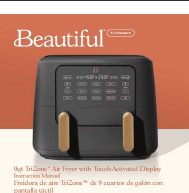
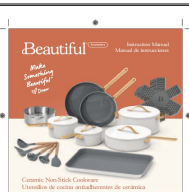
### Warranty Information:



This product comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase or contact the manufacturer directly for specific terms and conditions. Retain your proof of purchase for warranty claims.

### Customer Support:

For technical assistance, troubleshooting, or questions regarding your Beautiful 3-Quart Digital Air Fryer, please contact customer support through the retailer or manufacturer's official channels. Have your model number (EK-60X121) and purchase details ready when contacting support.

## Related Documents - EK-60X121

	<p><a href="#">Beautiful 3qt Digital Air Fryer Instruction Manual &amp; Guide</a></p> <p>Explore the Beautiful 3qt Digital Air Fryer with TurboCrisp™ Technology. This instruction manual provides essential safety guidelines, operating instructions, cooking charts, and maintenance tips for your kitchenware.</p>
	<p><a href="#">Beautiful 6qt Digital Air Fryer with Touch-Activated Display - Instruction Manual</a></p> <p>Instruction manual for the Beautiful 6qt Digital Air Fryer (models 19018, 19028, 19033, 19038). Covers safety precautions, operation, cooking functions (Air Fry, Roast, Reheat, Dehydrate), cleaning, and warranty information.</p>
	<p><a href="#">Beautiful 9qt TriZone Air Fryer Instruction Manual</a></p> <p>Comprehensive instruction manual for the Beautiful 9qt TriZone Air Fryer with Touch-Activated Display. Includes setup, operation, safety guidelines, cooking charts, and maintenance tips for versatile kitchen use.</p>
	<p><a href="#">Beautiful Ceramic Non-Stick Cookware Instruction Manual</a></p> <p>Instruction manual for Beautiful Ceramic Non-Stick Cookware by Sensio Inc. dba Made by Gather™. Includes usage, cleaning, and warranty information.</p>

 <p>Beautiful Sensor Microwave Oven with Touch-Activated Display Instruction Manual Forno de microondas com sensor e pantalla tátil Manual de instrucciones</p>	<p><a href="#">Beautiful Sensor Microwave Oven Instruction Manual</a></p> <p>Comprehensive instruction manual for the Beautiful Sensor Microwave Oven with Touch-Activated Display, covering safety, operation, cleaning, and warranty information.</p>
 <p>Beautiful 8qt Slow Cooker Instruction Manual Cocina lenta de 8 cuartos Manual de instrucciones</p>	<p><a href="#">Beautiful 8qt Slow Cooker Instruction Manual</a></p> <p>User guide and safety instructions for the Beautiful 8qt Slow Cooker, covering operation, care, cleaning, and warranty information.</p>