

## EUGAD 70x71x30 cm

# EUGAD Dual Compartment Laundry Hamper with Wheels

**Model:** 70x71x30 cm

**Brand:** EUGAD

## 1. INTRODUCTION

---

Thank you for choosing the EUGAD Dual Compartment Laundry Hamper. This product is designed to help you organize and sort your laundry efficiently. It features two removable laundry bags, a sturdy top shelf for additional storage, and smooth-rolling casters for easy mobility. Please read this manual carefully before assembly and use to ensure proper installation and safe operation.

## 2. SAFETY INSTRUCTIONS

---

- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload the laundry bags or the top shelf. The maximum load capacity for the top shelf is 15 kg.
- Do not stand or climb on the unit.
- Place the unit on a flat, stable surface. If using wheels, ensure brakes are engaged when the unit needs to remain stationary.
- Avoid exposing the unit to excessive moisture or direct sunlight for prolonged periods to prevent damage to materials.

## 3. PACKAGE CONTENTS

---

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Frame components (metal tubes, particle board shelf)
- 2 x Removable Oxford fabric laundry bags
- 4 x Casters (2 with brakes) or adjustable feet (depending on chosen configuration)
- 2 x Metal hooks
- Assembly hardware kit (screws, Allen key, etc.)
- Instruction Manual

## 4. ASSEMBLY INSTRUCTIONS


---

Assembly is straightforward. Follow the numbered steps and use the provided tools and accessories.


1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble the Frame:** Connect the metal tubes according to the diagrams in your included paper manual, securing them with the provided screws. Ensure all connections are firm.
3. **Attach Top Shelf:** Secure the particle board top shelf to the assembled frame using the designated screws.
4. **Install Casters or Feet:** Decide whether to use the rolling casters or the adjustable feet. Screw the chosen components into the bottom of the frame. If using casters, ensure the two casters with brakes are installed on the same side for easier locking.
5. **Attach Laundry Bags:** The two Oxford fabric laundry bags attach to the frame using hook-and-loop fasteners (Velcro). Ensure the reinforced bottom bar of each bag is properly seated to prevent sagging.
6. **Install Hooks:** Attach the two metal hooks to the side of the frame as desired for hanging towels or other items.



**Figure 4.1:** Product dimensions and structural overview. The frame is made of steel, and the top shelf is particle board, ensuring durability. Total dimensions are 70cm (L) x 30cm (W) x 71cm (H).

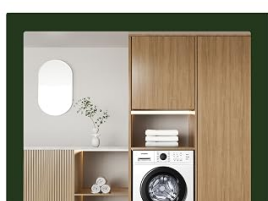

Buanderie

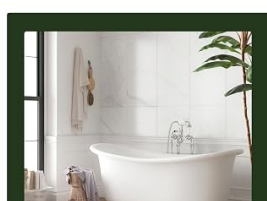

salle de bains



chambre à coucher



armoire

### Pour multiples scénarios



**Figure 4.2:** The assembled laundry hamper in a bathroom, showcasing its design and functionality as a storage unit.

## 5. OPERATING INSTRUCTIONS

## 5.1 Using the Laundry Bags

The hamper includes two removable laundry bags, each with a capacity of 40 liters. These bags allow for easy sorting of laundry (e.g., lights and darks) before washing.

- To remove a bag: Simply detach the hook-and-loop fasteners from the frame.
- To reattach a bag: Align the bag with the frame and press the hook-and-loop fasteners firmly into place. Ensure the reinforced bottom bar is correctly positioned.



Figure 5.1: Detail of the extractable laundry bags, showing the hook-and-loop attachment and reinforced bottom bar for stability.

## 5.2 Mobility and Stability

The hamper is equipped with four casters, two of which have brakes, allowing for flexible placement and secure positioning.

- **Moving the Unit:** Unlock the brakes on the casters to move the hamper freely to any desired location. The high-quality rubber wheels protect floors from scratches and reduce noise.
- **Securing the Unit:** Once in position, engage the brakes on the two casters to prevent unintended movement.
- **Elevated Side Bars:** The elevated side bars on the top shelf help prevent items from falling off during

movement.



**Figure 5.2:** The hamper in use, showing the top shelf for storage and side hooks for hanging items like towels.

### 5.3 Additional Storage

The robust and water-repellent top board provides extra storage space for various items, with a maximum load capacity of 15 kg. The two metal hooks on the side can be used to hang towels, shower flowers, or other accessories.



## Sacs à linge extractibles

### 2 sacs à linge extractibles pour le linge sale et fond renforcé

Empêchent le panier de  
s'affaisser sous l'effet du poids du linge



Figure 5.3: The top shelf provides additional storage for toiletries or decorative items, while the bags feature convenient side pockets.

## 6. MAINTENANCE

To ensure the longevity and appearance of your EUGAD laundry hamper, follow these maintenance guidelines:

- **Cleaning the Frame and Shelf:** The particle board and metal frame can be easily cleaned with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Cleaning the Laundry Bags:** The Oxford fabric bags are waterproof. They can be wiped clean with a damp cloth or hand-washed with mild detergent if necessary. Allow them to air dry completely before reattaching.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if any looseness is detected.

# Pour multiples scénarios



Buanderie

salle de bains

chambre à coucher

armoire

Figure 6.1: Material properties, including water resistance, ease of cleaning, and scratch resistance, contribute to simple maintenance.

## 7. TROUBLESHOOTING

If you encounter any issues with your laundry hamper, please refer to the following common solutions:

- **Unit is unstable/wobbly:** Ensure all screws are fully tightened. If using adjustable feet, ensure they are evenly adjusted on a flat surface. If using casters, check that they are securely installed.
- **Laundry bags are sagging:** Verify that the reinforced bottom bar of each bag is correctly inserted and supported by the frame. Avoid overloading the bags beyond their 40L capacity.
- **Casters not rolling smoothly:** Check for any debris or lint caught in the wheels. Clean the casters if necessary. Ensure the brakes are disengaged.
- **Items falling off the top shelf:** Ensure the unit is on a level surface. The elevated side bars are designed to help, but avoid placing items too close to the edge or stacking them too high.

## 8. SPECIFICATIONS

Feature	Specification
Product Dimensions (L x W x H)	70 x 30 x 71 cm
Brand	EUGAD
Color	Black + Light Oak
Material	Particle Board + Iron
Style	Modern
Special Features	Removable bags, Rolling casters, Robust, Reinforced, Safe
Number of Compartments	2
Capacity per Compartment	40 Liters
Total Capacity	80 Liters
Top Shelf Load Capacity	Max. 15 kg
Item Weight	5.5 kg
Recommended Room Type	Laundry room, Bathroom, Bedroom
Country of Origin	China

## 9. WARRANTY AND SUPPORT

EUGAD products are manufactured with quality and durability in mind. While specific warranty details may vary by region and retailer, we generally offer support for manufacturing defects.

For any questions, missing parts, or issues not covered in this manual, please contact EUGAD customer service through your purchase platform or the official EUGAD website. Please have your model number (70x71x30 cm) and purchase information ready when contacting support.