

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [OIXI](#) /
- › [OIXI 4K Digital Camera \(Model: Camera For Photograph\) - User Manual](#)

OIXI Camera For Photograph

OIXI 4K Digital Camera (Model: Camera For Photograph) - User Manual

Comprehensive instructions for setup, operation, and maintenance.

INTRODUCTION

Thank you for choosing the OIXI 4K Digital Camera. This manual provides essential information to help you get started, understand the camera's features, and ensure optimal performance. Please read this manual thoroughly before using your camera and keep it for future reference.

The OIXI 4K Digital Camera is a versatile device designed for photography and vlogging, featuring 4K video resolution, 64MP image capture, 10X optical zoom, and Wi-Fi connectivity. It includes a wide-angle and macro lens, autofocus, and various shooting modes to enhance your creative possibilities.

WHAT'S IN THE BOX

Upon opening your OIXI 4K Digital Camera package, verify that all components are present:

- OIXI 4K Digital Camera Body
- Rechargeable Batteries (x2)
- 64GB Micro SD Card
- Type-C USB Cable
- Dual Battery Charger
- USB Card Reader
- Shoulder Belt / Strap
- Cleaning Cloth
- User Manual (this document)



Figure 1: Included accessories with the OIEXI 4K Digital Camera. The image displays the camera, two batteries, a 64GB Micro SD card, a Type-C cable, a dual charger, a card reader, a shoulder belt, and a cleaning cloth, neatly arranged next to the camera with its dimensions indicated.

Your browser does not support the video tag.

Video 1: Unboxing the OIEXI 4K Digital Camera. This video demonstrates the unboxing process, showcasing the camera and all included accessories such as batteries, charger, SD card, and strap.

SETUP

1. Charging the Batteries

Before initial use, fully charge both included batteries. The camera uses Lithium Ion batteries.

1. Insert the batteries into the dual battery charger.
2. Connect the Type-C USB cable to the charger and a power source (e.g., USB wall adapter, computer USB port).
3. The indicator light on the charger will show the charging status. Once fully charged, remove the batteries.

Easy To Use, Quick Mode Switching



Figure 2: Charging the camera batteries using the dual charger and USB cable. The image shows the dual charger, a battery being inserted, and the USB cable connected.

2. Inserting the Battery and SD Card

The camera requires a battery and an SD card for operation and storage.

1. Open the battery/SD card compartment cover located at the bottom of the camera.
2. Insert a charged battery into the battery slot, ensuring correct orientation.
3. Insert the 64GB Micro SD card into the SD card slot until it clicks into place. Ensure the card is facing the correct direction.
4. Close the compartment cover securely.

3. Attaching the Shoulder Strap

Attach the shoulder strap for secure and convenient carrying.

1. Thread the thin ends of the strap through the strap lugs on each side of the camera.
2. Secure the strap by threading it back through the buckle, ensuring it is tightly fastened.

Your browser does not support the video tag.

Video 2: Attaching the camera shoulder strap. This video demonstrates how to correctly attach the shoulder strap to the camera for secure carrying.

OPERATING THE CAMERA

1. Powering On/Off and Basic Controls

- **Power Button:** Press to turn the camera on or off.
- **Shutter Button:** Press halfway to focus, press fully to capture a photo or start/stop video recording.
- **Zoom Lever:** Use to adjust the 10X optical zoom.
- **Mode Dial:** Rotate to select different shooting modes.
- **Display Screen:** The 3-inch OLED screen can be rotated for various viewing angles, including self-vlogging.



Figure 3: Front view of the OIEXI 4K Digital Camera, showcasing its 10X optical zoom lens and 64MP capability.

2. Shooting Modes

The camera offers a variety of shooting modes accessible via the mode dial:

- **Auto Mode (P):** For general photography, the camera automatically adjusts settings.
- **Scene Mode (SCN):** Pre-set modes for specific scenarios (e.g., landscape, portrait).
- **Manual Exposure Mode (M):** Allows full control over aperture, shutter speed, and ISO.
- **Aperture Priority Mode (Av):** You set the aperture, and the camera selects the shutter speed.
- **Shutter Priority Mode (Tv):** You set the shutter speed, and the camera selects the aperture.
- **Continuous Shooting:** Captures multiple photos in quick succession.
- **Time-Lapse:** Records a series of images over time to create a sped-up video.
- **Slow Motion:** Records video at a higher frame rate for slow-motion playback.
- **Macro Mode:** For close-up photography of small objects.
- **Filter Mode:** Apply various creative filters to your photos.

Easy To Use, Quick Mode Switching



Figure 4: The camera's mode dial and examples of different shooting modes. This image illustrates the various settings available on the mode dial and their corresponding photographic applications.

3. Autofocus and Image Quality

The camera features autofocus for sharp images and supports high-resolution capture.

- **Autofocus:** The camera automatically focuses on subjects. Press the shutter button halfway to engage autofocus.
- **Image Resolution:** Capture still images up to 64MP for remarkable detail and vibrant colors.
- **Video Resolution:** Record videos in UHD 4K at 24 frames per second (FPS).
- **Built-in Fill Light:** Activate the built-in fill light for improved visibility in low-light conditions.

4. Wi-Fi Connectivity and Webcam Function

Connect your camera to other devices for enhanced functionality.

- **Wi-Fi Connection:** Download the dedicated app to your smartphone or tablet. Connect your device to the camera's Wi-Fi network to remotely control photoshoots, video recording, and transfer files.
- **Webcam Function:** Connect the camera to a computer via USB to use it as a webcam for live streaming, video calls, or online teaching.

WiFi Connection

Search and download APP in the app store to remotely control
photoshooting and video recording



Figure 5: Wi-Fi connection for remote control. This image illustrates how the camera can be wirelessly connected to a smartphone, allowing for remote operation and instant sharing of captured content.



Figure 6: Digital Camera for Video and Webcam use. This image displays the camera being used for live streaming, video calls, and vlogging, highlighting its multi-functional capabilities.

Your browser does not support the video tag.

Video 3: Overview of 10X Optical Zoom 4K Digital Camera with WiFi & App Control. This video provides a general overview of the camera's features, including its optical zoom and Wi-Fi capabilities.

MAINTENANCE

- **Cleaning:** Use the provided cleaning cloth to gently wipe the camera body and lens. Avoid using harsh chemicals or abrasive materials. For stubborn smudges on the lens, use a specialized lens cleaning solution and cloth.
- **Battery Care:** Store batteries in a cool, dry place. Do not expose them to extreme temperatures. If not using the camera for an extended period, remove the battery.
- **Storage:** When not in use, store the camera in a protective bag or case to prevent dust and scratches. Avoid storing in humid environments.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Ensure battery is fully charged and inserted with correct polarity.
Cannot take photos/videos.	SD card is full, locked, or not inserted.	Check SD card status. Delete unnecessary files, unlock the card, or insert it correctly.
Poor image quality.	Lens is dirty, insufficient lighting, or incorrect settings.	Clean the lens. Use the built-in fill light or adjust ISO/exposure settings.
Wi-Fi connection issues.	Incorrect Wi-Fi password or out of range.	Verify Wi-Fi password. Ensure camera and device are within close proximity. Restart both devices.
Camera freezes or becomes unresponsive.	Software glitch or low battery.	Remove and reinsert the battery to reset. Ensure battery is charged.

SPECIFICATIONS

Feature	Detail
Brand	OIEXI
Model Name	Camera For Photograph
Photo Sensor Resolution	64 MP
Video Resolution	2160p (4K)
Optical Zoom	10 x
Digital Zoom	4 x
Image Stabilization	Sensor-shift
Screen Size	3 Inches
Display Type	OLED
Connectivity Technology	Wi-Fi
Battery Type	Lithium Ion
Memory Storage Capacity	64 GB (included SD card)
Shooting Modes	Continuous Shooting, Macro, Slow Motion, Timelapse
Autofocus	Yes (Hybrid Auto Focus Technology)
Webcam Function	Yes
Item Weight	0.5 Pounds
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official OIEXI website. Keep your proof of purchase for warranty claims.

Online Resources: For additional support, FAQs, and firmware updates, please visit the [OIEXI Store on Amazon](#).