

[Manuals.plus](#) /

> [YISENCE](#) /

> YISENCE 8K UHD Waterproof Digital Camera UP011BU03 User Manual

YISENCE UP011BU03

YISENCE 8K UHD Waterproof Digital Camera UP011BU03 User Manual

Model: UP011BU03

INTRODUCTION

Thank you for choosing the YISENCE 8K UHD Waterproof Digital Camera. This manual provides essential information for the proper setup, operation, and maintenance of your camera. Please read it thoroughly before first use to ensure optimal performance and longevity of the device.

This high-speed digital camera requires a memory card of 64GB or higher (U3 level). Please format the memory card within the camera before its initial use. If the camera has not been used for an extended period, ensure it is fully charged before use.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x YISENCE 8K UHD Waterproof Digital Camera
- 1 x Camera Lanyard
- 1 x 64GB Micro SD Card
- 1 x USB Type-C Cable
- 1 x User Manual (this document)
- 1 x Reset Pin



Image: The YISENCE 8K UHD Waterproof Digital Camera shown with its included accessories: a lanyard, a 64GB Micro SD card, and a USB Type-C cable.

SETUP

1. Charging the Battery

The camera is equipped with a built-in 2500 mAh battery. Before first use, fully charge the camera using the provided USB Type-C cable.

1. Connect the USB Type-C cable to the camera's Type-C interface.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator will illuminate. Once fully charged, the indicator will change or turn off.



Image: The camera highlighting its built-in 2500mAh battery and SOS light feature.

2. Inserting the Micro SD Card

A 64GB Micro SD card is included. Ensure the camera is powered off before inserting or removing the card.

1. Locate the memory card slot cover on the camera.
2. Press the lock on the cover with one hand and push the cover open with the other hand.
3. Insert the Micro SD card into the slot with the gold contacts facing the correct direction until it clicks into place.
4. Close the cover securely to maintain waterproofing.



Image: A diagram illustrating the process of opening the camera's cover to access the memory card slot.

3. Formatting the Micro SD Card

It is crucial to format the Micro SD card within the camera before its first use to ensure compatibility and optimal performance.

1. Power on the camera.
2. Navigate to the camera's settings menu.
3. Select the "Format" option for the memory card.
4. Confirm the formatting process. All data on the card will be erased.

4. Attaching the Lanyard

Attach the included lanyard to the camera for secure handling, especially during outdoor or underwater activities.



One hand presses the lock on the cover. Meanwhile, the other hand pushes the cover open

Image: A person hiking with the camera attached via a lanyard, demonstrating secure carrying.

OPERATING INSTRUCTIONS

Basic Operation

- **Power On/Off:** Press and hold the power button to turn the camera on or off.
- **Mode Switching:** Use the mode button to switch between photo, video, and playback modes.
- **Navigation:** Use the directional buttons (Up, Down, Left, Right) to navigate menus and settings. The "OK" button confirms selections.

Photo Mode

The camera supports photo resolutions up to 70MP.

1. Switch to Photo Mode.
2. Frame your shot using the 2.88-inch IPS LCD screen.
3. Press the shutter button halfway to activate autofocus. The camera features an autofocus system for sharp images.

4. Press the shutter button fully to capture the photo.



Image: The camera's screen showing a landscape, indicating its readiness for high-resolution recording.

Autofocus 70MP Photo

Autofocus as Close as 1.97"

+ Waterproof to 10M(33FT)



Image: The camera submerged, illustrating its autofocus capability on an underwater subject.

Video Mode

Record videos in resolutions up to 8K.

1. Switch to Video Mode.
2. Press the shutter button to start recording. A red indicator will typically appear on the screen.
3. Press the shutter button again to stop recording.

Special Features

- **Digital Zoom:** The camera features an 18x digital zoom. Use the zoom buttons (W/T) to adjust the zoom level.
- **Flash:** The integrated flash has modes including Auto, Highlight, On, and Off. Adjust this in the settings menu.
- **Timestamp:** Enable or disable timestamps on your photos and videos. Options include date and time, date only, or off.
- **Electronic Stabilizer:** Supported for smoother video recording.
- **WiFi Function:** Transfer photos and videos to smart devices for sharing. Refer to the camera's on-screen instructions for connecting via WiFi.

- **Shooting Modes:**

- *Selfie:* Utilize the dual screens for easy self-portraits.
- *Burst Mode:* Capture a series of photos rapidly.
- *Time-Lapse Recording:* Record events over a period of time.
- *Loop Recording:* Continuously record, overwriting older footage when memory is full.



Image: The camera displaying its dual screens, highlighting the 4:3 aspect ratio on the main display.

MAINTENANCE AND CARE

- **Waterproofing:** The camera is waterproof up to 10 meters (33 feet). Ensure all covers (battery, memory card, USB port) are securely closed before submerging the camera. After use in saltwater, rinse the camera with fresh water and dry thoroughly.
- **Dustproof and Shockproof:** The camera is designed to be dustproof and shockproof. However, avoid unnecessary impacts or exposure to excessive dust.
- **Cleaning:** Use a soft, lint-free cloth to clean the camera body and screens. For the lens, use a specialized lens cleaning

cloth and solution.

- **Storage:** When not in use for extended periods, store the camera in a cool, dry place. Ensure the battery is partially charged (around 50%) to prolong its lifespan.
- **Battery Life:** The integrated 2500 mAh battery provides approximately 2.5 hours of video recording or 3 hours of photo mode usage.

Autofocus 70MP Photo

Autofocus as Close as 1.97"

+ Waterproof to 10M(33FT)

10M

Fully press to capture stunning photos

Image: The camera partially submerged in water, illustrating its waterproof design.

Built-in 2500mAh Battery

Over 150 Minutes of Recording Time



SOS Light

Image: The camera in a sandy setting, emphasizing its rugged, shockproof, and dustproof features.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not turn on.	Battery is depleted. Charge the camera fully. Battery is not properly connected (if removable, though this model has built-in). Try resetting the camera using the provided reset pin.
Cannot take photos/videos.	Micro SD card is full. Transfer files or delete unnecessary ones. Micro SD card is not inserted correctly. Reinsert the card. Micro SD card is not formatted. Format the card in the camera. Battery is too low. Charge the camera.

Problem	Possible Cause / Solution
Images are blurry.	<p>Lens is dirty. Clean the lens with a soft cloth.</p> <p>Autofocus did not engage. Press the shutter button halfway to focus before fully pressing.</p> <p>Subject is too close or too far for the focus range.</p>
Camera freezes or becomes unresponsive.	<p>Use the reset pin to press the reset button. This will restart the camera without losing data.</p> <p>Ensure the firmware is up to date (check manufacturer's website if available).</p>
Water leakage after underwater use.	<p>Ensure all port covers and the battery/card compartment are securely closed before submerging.</p> <p>Check for any damage to the seals or O-rings. If damaged, do not use underwater.</p>

SPECIFICATIONS

Feature	Detail
Model Name	UP011BU03
Photo Resolution	70M, 64M, 48M, 36M, 30M, 24M, 20M, 16M, 13M, 12M, 10M, 8M, 6M, 4M, 2M
Photo Format	JPG
Video Resolution	8K (24, 30 FPS), 6K, 5K, 4K (24, 30, 60 FPS), 2.7K, 1080P (24, 30, 60 FPS), 720P
Video Format	AVI
Waterproof Depth	Up to 10 meters (33 feet)
Digital Zoom	18x
LCD Screen	2.88-inch IPS (4:3 aspect ratio, full viewing angle)
Exposure Compensation	-3.0 EV ~ +3.0 EV
Electronic Stabilizer	Supported
Storage Media	External Micro SD/TF card (64GB card included, U3 level recommended)
Battery	Built-in 2500 mAh Lithium-ion
Battery Life	Up to 2.5 hours (video mode), 3 hours (photo mode)
Standby Time	15 days
Interface	Type-C USB
Timestamp	ON/OFF (with date/time options)
Flash Modes	Auto, Highlight, On, Off
Languages	English, Spanish, German, French, Italian, Japanese, Korean, Russian, Traditional Chinese, Simplified Chinese
Dimensions	113 x 41 x 73 mm (4.45 x 1.6 x 2.8 inches)

Feature	Detail
Weight	220 g (7.76 ounces)
Special Features	Waterproof, Dustproof, Shockproof, WiFi, Dual Screens, Autofocus

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official YISENCE website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

Note: This manual is subject to change without prior notice. For the latest information, please visit the manufacturer's website.