

MAMAMOO_LIGHTSTICK

MAMAMOO Official Light Stick Ver.2.6 User Manual

Model: MAMAMOO_LIGHTSTICK

INTRODUCTION



Image: The MAMAMOO Official Light Stick Ver.2.6, featuring its design and branding.

This manual provides detailed instructions for the proper use and care of your MAMAMOO Official Light Stick Ver.2.6. Please read this manual thoroughly before use to ensure optimal performance and longevity of your product.

The outer case is designed to protect the inclusions inside. Minor damages to the outer box are not considered a reason for return or exchange. For accurate verification of product defects or omissions, please record an unboxing video immediately upon delivery.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Out Box
- MAMAMOO Official Light Stick Ver.2.6
- Strap
- Deco Sticker Set
- Instruction Manual (this document)

구성

COMPONENTS



패키지 · 공식 응원봉 · 스트랩 · 데코 스티커 · 사용 설명서
PACKAGE · LIGHT STICK · STRAP · DECO STICKER · MANUAL

Image: Overview of the MAMAMOO Official Light Stick Ver.2.6 package contents, showing the light stick, strap, decorative stickers, and the instruction manual.

SETUP: BATTERY INSTALLATION

The light stick requires three AAA batteries for operation. Follow these steps for correct battery installation:

1. Locate the battery compartment cover at the bottom of the light stick handle.
2. Open the battery compartment.
3. Insert three AAA batteries, ensuring the correct polarity ($\ominus$ and $\oplus$) as indicated inside the compartment. Incorrect insertion can damage the device.
4. Close the battery compartment cover securely.



Image: Front and back view of the MAMAMOO Official Light Stick Ver.2.6, highlighting the battery compartment location on the handle.

Precautions for Battery Insertion and Replacement:

- **Add the correct order from $\ominus$ to $\oplus$ pole.** There is a risk of ruptures and leaks due to heat in reverse injection.
- Remove the battery part immediately when the battery part suddenly heats up. (Do not hold it with your hands as there is a risk of burns.)
- Please use genuine alkaline AAA batteries. If not genuine, there may be damage to the product.
- Do not charge, disassemble, short circuit, heat. Risk of injury due to explosion or leakage.
- Remove the battery from the machine immediately after use as it may cause leakage.
- Please use a new battery for each performance.
- Do not mix new batteries with used batteries and other batteries.
- Do not store batteries in a pocket or bag with the battery unpackaged.

건전지 삽입 및 교체 시 주의사항

Precautions when inserting and replacing batteries

- ▲ ○극부터 ○극 순으로 바르게 넣으세요. 역 삽입 시 발열로 인한 파열 및 누액의 위험이 있습니다.
Add the correct order from ○ to ○ pole.
There is a risk of ruptures and leaks due to heat in reverse injection.
- ▲ 건전지 부분이 갑자기 뜨거워졌을 때에는 바로 건전 부분을 분리해 주세요. (화상의 위험이 있으니 손으로 잡지 마세요.)
Remove the battery part immediately when the battery part suddenly heats up.
(Don't hold it with your hands as there is a risk of burns.)
- ▲ 정품 알카라인 AAA 건전지를 사용해 주세요. 정품이 아닐 경우 제품에 손상이 있을 수 있습니다.
Please use genuine alkaline AAA batteries. If not genuine, there may be damage to the product.
- ▲ 충전, 분해, 단락, 가열하지 마세요. 폭발 또는 누액으로 인해 상해를 입을 위험이 있습니다.
Do not charge, disassemble, short circuit, heat. Risk of injury due to explosion or leakage.
- ▲ 누액의 가능성이 있으니 사용이 끝난 건전지는 즉시 기기에서 꺼내세요.
Remove the battery from the machine immediately after use as it may cause leakage.
- ▲ 매회 공연 시 새로운 건전지를 사용해 주시기 바랍니다.
Please use a new battery for each performance.
- ▲ 새 건전지와 사용한 건전지, 그리고 서로 다른 건전지와 혼용하지 마세요.
Do not mix new batteries with used batteries and other batteries.
- ▲ 전지의 포장을 벗긴 채로 주머니나 핸드백 등에 보관하지 마세요.
Do not store batteries in a pocket or bag with the battery unpackaged.

Image: Detailed instructions and warnings regarding the safe insertion and replacement of batteries for the light stick.

OPERATING INSTRUCTIONS: LIGHT MODES

The light stick can be controlled wirelessly in normal mode. Make sure to change to normal mode before watching a concert.

MAMAMOO
OFFICIAL LIGHT STICK
ver2.6



Image: A clear front view of the MAMAMOO Official Light Stick Ver.2.6, showing its design and the main button.

1. Power ON/OFF (Button Long Click)

Press and hold the button for about 3 seconds to turn the power on or off.

2. Normal Mode (Button One Click)

When the power is on, press the button briefly to change various color modes.

Normal mode switching sequence: COLOR ► BLINK ► MOOD LIGHT (followed by various color options).

3. Application Mode (Button Double Click)

The light stick connects to MAMAMOO applications to enjoy a variety of content.

Double click the button to switch to Application mode (blue blinking).

Double click the button again to return to color change mode.

응원봉 모드

LIGHT MODE

전원 버튼을 사용하여 모드를 변경할 수 있습니다.

You can use the power button to change the mode.

일반 모드에서 공연장 무선 연결이 가능합니다. 공연장에서는 반드시 일반 모드로 변경 후 관람 부탁드립니다.

The light stick can be controlled wirelessly only in normal mode.

Make sure to change to the normal mode before watching at the concert.

❶ 전원 ON/OFF (버튼 롱 클릭) | POWER ON/OFF (BUTTON LONG CLICK)

- 버튼을 3초 정도 길게 누르면 전원이 ON/OFF 됩니다.

Press and hold the button for about 3 seconds to turn the power on/off.

❷ 일반 모드 (버튼 원 클릭) | NORMAL MODE (BUTTON ONE CLICK)

- 전원 ON 상태에서 버튼을 짧게 누르면 다양한 컬러가 변경됩니다.

When the power is on, press the button briefly to change various color modes.

- 일반 모드 전환 순서

Normal mode switching sequence

COLOR ▶ BLINK ▶ MOOD LIGHT



❸ 애플리케이션 모드 (버튼 더블 클릭) | APPLICATION MODE (BUTTON DOUBLE CLICK)

- 애플리케이션 모드는 마마무 전용 APP과 응원봉을 연결하여 다양한 콘텐츠를 즐길 수 있는 모드입니다.

Application mode connects MAMAMOO applications and light sticks to enjoy a variety of content.

- 버튼을 더블클릭하면 애플리케이션 모드로 전환됩니다. (파란불 깜빡)

다시 버튼을 더블클릭하면 일반 모드로 돌아옵니다.

Double click the button to switch to Application mode (blue blinking), and double click the button again to return to color change mode.

⚠ 애플리케이션 모드 시 30초 이내에 APP과 연결이 없으면 일반 모드로 자동 전환됩니다.

If there is no connection with the app within 30 seconds of application mode, it automatically switches to normal mode.

⚠ 애플리케이션 모드 시 컬러 변경 작동이 되지 않으며, 이는 불량이 아닙니다.

The Application mode dose not operate the color change and is not defective.

Image: Visual guide detailing how to operate the light stick, including power control, switching between normal light modes, and activating application mode.

MAINTENANCE

To ensure the longevity and proper functioning of your light stick, follow these maintenance guidelines:

- Clean the light stick with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the light stick to extreme temperatures, direct sunlight, or high humidity.
- If the light stick will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Store the light stick in its original packaging or a protective case to prevent scratches and damage.

TROUBLESHOOTING

- **Light stick does not turn on:**
 - Ensure batteries are inserted correctly with the right polarity.
 - Replace with new, genuine AAA alkaline batteries.

- Press and hold the power button for at least 3 seconds.

• **Application mode issues:**

- If there is no connection with the app within 30 seconds of entering application mode, it automatically switches to normal mode.
- If the application mode does not operate the color change and is not defective, ensure the app is properly installed and the light stick is within range.

• **Light stick heats up:**

- Immediately remove batteries if the battery compartment becomes hot. This indicates a potential issue with batteries or incorrect insertion.

SPECIFICATIONS

Product Name	MAMAMOO Official Light Stick Ver.2.6
Material	ABS, PC (Acrylic, Plastic)
Weight	170 g (9.6 ounces)
Operating Time	4 Hours
Country of Origin	China
Dimensions (L x W x H)	86.7 × 86.7 × 282 mm (3.41"L x 3.41"W x 11.1"H)
Batteries	AAA BATTERIES 3 ea (Battery Powered)
Manufacturer	BIZENT.MALL
Model Number	MAMAMOO_LIGHTSTICK (MAMAMOO425)
Light Source	Light Emitting Diode (LED)

상품 정보 INFORMATION	상품명	Product Name	[MAMAMOO] OFFICIAL LIGHT STICK ver2.6
	소재	Material	ABS, PC
	중량	Weight	170 g
	작동시간	Operating Time	4 HOURS
	제조국	Country of Origin	CHINA
	사이즈	Size	86.7 × 86.7 × 282 mm
	배터리	Batteries	AAA BATTERIES 3 ea
	제조사	Manufacturer	Bizent
	수량	Quantity	1 ea
	법에 의한 인증 및 허가사항	Authentication and Authorization	해당사항 없음

Image: A table presenting the key product information and specifications for the light stick, including material, weight, operating time, and dimensions.

WARRANTY INFORMATION

The product comes with a limited warranty. The warranty description is "FANLIGHT". For specific details regarding warranty coverage, terms, and conditions, please refer to the documentation provided by the manufacturer or contact the seller directly.

CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact the seller or the manufacturer for assistance. Ensure you have your product model number (MAMAMOO_LIGHTSTICK) and purchase details available when seeking support.

