



Manuals.plus /

› GAIGAICHONG /

› User Manual: GAIGAICHONG Replacement Remote Control for Xumo TV

GAIGAICHONG D125010201E06

User Manual: GAIGAICHONG Replacement Remote Control for Xumo TV

Model: D125010201E06

PRODUCT OVERVIEW

This manual provides instructions for the GAIGAICHONG Replacement Remote Control, designed for various 4K UHD HDR Xumo TV models. This remote features backlit and oversized buttons for enhanced visibility and ease of use, particularly beneficial in low-light conditions and for users who prefer larger controls. Please note, this remote does not include voice function capabilities.

Compatible Xumo TV Models:

- E500AC43C (43" 4K UHD HDR Xumo TV)
- E500AC50C (50" 4K UHD HDR Xumo TV)
- E500AC55C (55" 4K UHD HDR Xumo TV)
- E500AC65C (65" 4K UHD HDR Xumo TV)
- E550AE70C (70" 4K UHD HDR Xumo TV)
- E550AE75C (75" 4K UHD HDR Xumo TV)
- E550AE86C (86" 4K UHD HDR Xumo TV)
- E500AE98C (98" 4K UHD HDR Xumo TV)

Important Compatibility Note: This remote is specifically compatible with the Xumo Streaming Box and **will not** work with Pioneer or Element TVs that have Xumo integrated into them.



We sell

You will get 1 pc of the left remote.



- Green Backlight Button**
- Oversized buttons!**
- Great for Seniors!**
- High-capacity Battery (AA 1.5V)**
- No programming needed!**
- Easy Operating**
- Not Easy Broken**
- Not Easy Lost**
- Reliable Quality**
- Long Life**

Image: Comparison showing the GAIGAICHONG replacement remote alongside an original Xumo remote, illustrating the design and button layout. The image emphasizes that the remote is compatible with Xumo devices.

SETUP AND INSTALLATION

1. Battery Installation

The remote control requires two (2) AAA 1.5V batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.

4. Slide the battery cover back into place until it clicks securely.



Image: The rear view of the remote control, demonstrating the open battery compartment and the correct orientation for inserting two AAA 1.5V batteries.

2. Initial Use

This replacement remote control is designed for immediate use with compatible Xumo TV models and the Xumo Streaming Box. No programming or pairing is typically required. Simply insert the batteries, and the remote should function directly with your device.

OPERATING INSTRUCTIONS

Familiarize yourself with the functions of the buttons on your new remote control.



Image: A clear front view of the GAIGAICHONG replacement remote control, displaying its full array of buttons, including the power, input, navigation, volume, channel, and dedicated application buttons. The green backlighting feature is visible.

Button Functions:

- **Power:** Turns the TV on or off.
- **Input:** Selects the input source (HDMI 1, HDMI 2, etc.).
- **Netflix, Prime Video, Peacock, Xumo:** Dedicated buttons for quick access to these streaming applications.
- **Number Pad (0-9):** For direct channel entry or other numerical inputs.
- **Navigation Buttons (Up, Down, Left, Right, OK/Select):** Used to navigate menus and select options.
- **Back:** Returns to the previous screen or menu.
- **Home:** Returns to the main home screen of your Xumo TV.
- **Volume Up/Down:** Adjusts the volume level.

- **Mute:** Mutes or unmutes the audio.
- **Channel Up/Down:** Changes TV channels.
- **Playback Controls (Play, Pause, Fast Forward, Rewind):** Controls media playback.

Backlight Feature

This remote control features a green backlight for all buttons, making it easy to operate in dark environments. The backlight is designed to turn off automatically after 10 seconds of inactivity to conserve battery life.



Image: A visual guide demonstrating the green backlight feature of the remote. It includes instructions for managing the backlight: it automatically turns off after 10 seconds of no button presses for energy saving. To manually turn it off or on for long-term, press and hold the Red Power button for 6 seconds.

To Manually Control Backlight (Long-Term):

- To turn the backlight *off* for long-term use, press and hold the **Red Power button** for approximately 6 seconds until the backlight turns off.
- To turn the backlight *on* again, repeat the same step: press and hold the **Red Power button** for approximately 6 seconds until the backlight illuminates.

Why Choose a Third-Generation Remote with Backlit Buttons?

First Generation (No Backlight)



Third Generation (Backlit)

-  **1. Hard to See in the Dark:**
Difficult to find the right buttons when it's dark.
-  **2. Eye Strain:**
You might need to use your phone's flashlight or turn on a light.
-  **3. Less Convenient:**
Not as user-friendly, especially in low-light situations.
-  **4. Challenging for Seniors:**
Not suitable for those with poor eyesight.

-  **1. Easy to Use at Night:**
Green backlit buttons make it simple to see and use the remote in the dark.
-  **2. Better Visibility:**
No more guessing or fumbling with the buttons in low light.
-  **3. Convenient:**
Perfect for late-night TV or early morning use without needing extra light.
-  **4. Great for Seniors:**
Ideal for those with poor eyesight, making it easier for seniors to see and use the buttons.



Image: An infographic comparing a traditional remote without backlighting to the GAIGAICHONG backlit remote. It highlights the advantages of the backlit version, such as improved visibility in low light, ease of use at night, and its suitability for seniors due to enhanced button clarity.

Oversized Buttons

The remote features oversized buttons, designed for improved tactile feedback and visibility. This design is particularly beneficial for users who prefer larger buttons or have visual impairments, making operation simpler and more comfortable.



Image: A visual representation of the GAIGAICHONG remote being held, highlighting its overall dimensions (8.66 inches in length, 2.04 inches in width) and the size of individual buttons (0.43 inches), underscoring the "oversized buttons" feature.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's responsiveness decreases or the backlight dims significantly. Always replace both batteries at the same time with new AAA 1.5V batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

Storage

When storing the remote for extended periods, remove the batteries to prevent leakage, which can cause damage. Store

the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity (+/-).
 - Replace old batteries with new AAA 1.5V batteries.
 - Ensure there are no obstructions between the remote and the TV's infrared receiver.
 - Verify that your TV model is listed as compatible in the "Product Overview" section. Remember, it is not compatible with Pioneer or Element TVs with integrated Xumo.
- **Backlight not working or staying on/off:**
 - Check battery levels. Low batteries may affect backlight performance.
 - Try manually toggling the backlight by pressing and holding the Red Power button for 6 seconds.
- **Specific buttons not working:**
 - Ensure the remote is pointed directly at the TV.
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.

SPECIFICATIONS

Brand	GAIGAICHONG
Model Number	D125010201E06
Compatible Devices	4K UHD HDR Xumo TVs (E500AC43C, E500AC50C, E500AC55C, E500AC65C, E550AE70C, E550AE75C, E550AE86C, E500AE98C), Xumo Streaming Box
Special Features	Green Backlight Buttons, Oversized Buttons, No Voice Function
Power Source	2 x AAA 1.5V Batteries (not included)
Item Weight	4.6 ounces (approx. 130 grams)
Package Dimensions	10.87 x 3.43 x 1.57 inches (approx. 27.6 x 8.7 x 4.0 cm)
Color	Same with remote (Black with green backlit buttons)

WARRANTY AND SUPPORT

Specific warranty information for this product is not available in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the product listing on the retailer's website or contact the manufacturer, GAIGAICHONG, directly.

For further assistance, please visit the product page where you purchased this item or contact GAIGAICHONG customer service.