

[Manuals.plus](#) /

› [KAER](#) /

› KAER 8-10 Gun Safe: Rifle and Pistol Storage Cabinet User Manual

KAER 1250AB

KAER 8-10 Gun Safe: Rifle and Pistol Storage Cabinet User Manual

Model: 1250AB

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your KAER 8-10 Gun Safe. Please read this manual thoroughly before installation and operation to ensure proper functionality and safety. Keep this manual for future reference.

IMPORTANT SAFETY INFORMATION

Always follow the provided assembly instructions. Use the expansion bolts to securely mount the cabinet to the wall or floor to prevent tipping. Keep the cabinet away from heat sources and never store flammable materials inside. Always unload firearms before storing them in the cabinet. Keep the cabinet locked at all times and store the keys in a safe place. Never attempt to disassemble or repair the cabinet yourself. Always use the emergency power box to open the cabinet in case of battery failure or lost keys. Always keep the cabinet clean and dry to prevent rust and damage.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- KAER 8-10 Gun Safe Unit
- Emergency Power Box (x1)
- Expansion Bolts (x4)
- Mounting Gloves (x1 pair)
- User Manual (Synopsis) (x1)
- Emergency Keys (x2)

SETUP AND INSTALLATION

The KAER 8-10 Gun Safe is designed for secure storage of firearms and ammunition. Proper installation is crucial for its security features to function effectively.

Unpacking

Carefully remove all packaging materials. Inspect the safe for any signs of damage during transit. Report any damage to your retailer immediately.

Assembly (Locker Cabinet)

The right-side locker cabinet arrives unassembled inside the main gun safe. Two people are recommended for assembly to ensure stability and ease of installation.

1. Open the main gun safe door using the emergency key or by setting a temporary code.
2. Remove the unassembled locker cabinet components from inside the main safe.
3. Follow the detailed assembly instructions provided with the locker cabinet to construct it. Ensure all screws are tightened securely.
4. Once assembled, place the locker cabinet into the designated right compartment of the main gun safe.

Mounting the Safe

For maximum security, the gun safe must be securely mounted to a wall or floor. The safe features pre-drilled holes on the back for this purpose.

1. Choose a suitable location for the safe, preferably in a discreet area, away from heat sources and moisture.
2. Using the safe's pre-drilled holes as a template, mark the drilling points on the wall or floor.
3. Drill pilot holes using an appropriate drill bit for your wall or floor material.
4. Align the safe with the drilled holes and insert the provided expansion bolts.
5. Tighten the expansion bolts firmly to secure the safe in place. Ensure the safe is stable and cannot be easily moved or tipped.

8-10 LARGE GUN SAFE FOR RIFLES AND PISTOLS



1. Ships in one package, leftside gun cabinet requires no assembly

2. Right side locker in gun cabinet (assembly required)

Figure 1: Safe Dimensions and Capacity. This image illustrates the overall dimensions of the KAER 8-10 Gun Safe, including the main rifle compartment (H49.2" x W16.9" x D11") and the smaller ammunition cabinet (H39.37" x W13.18" x D11"). It also shows the capacity for various firearms and accessories.

GUN SAFES & CABINETS DETAILS SHOWCASE

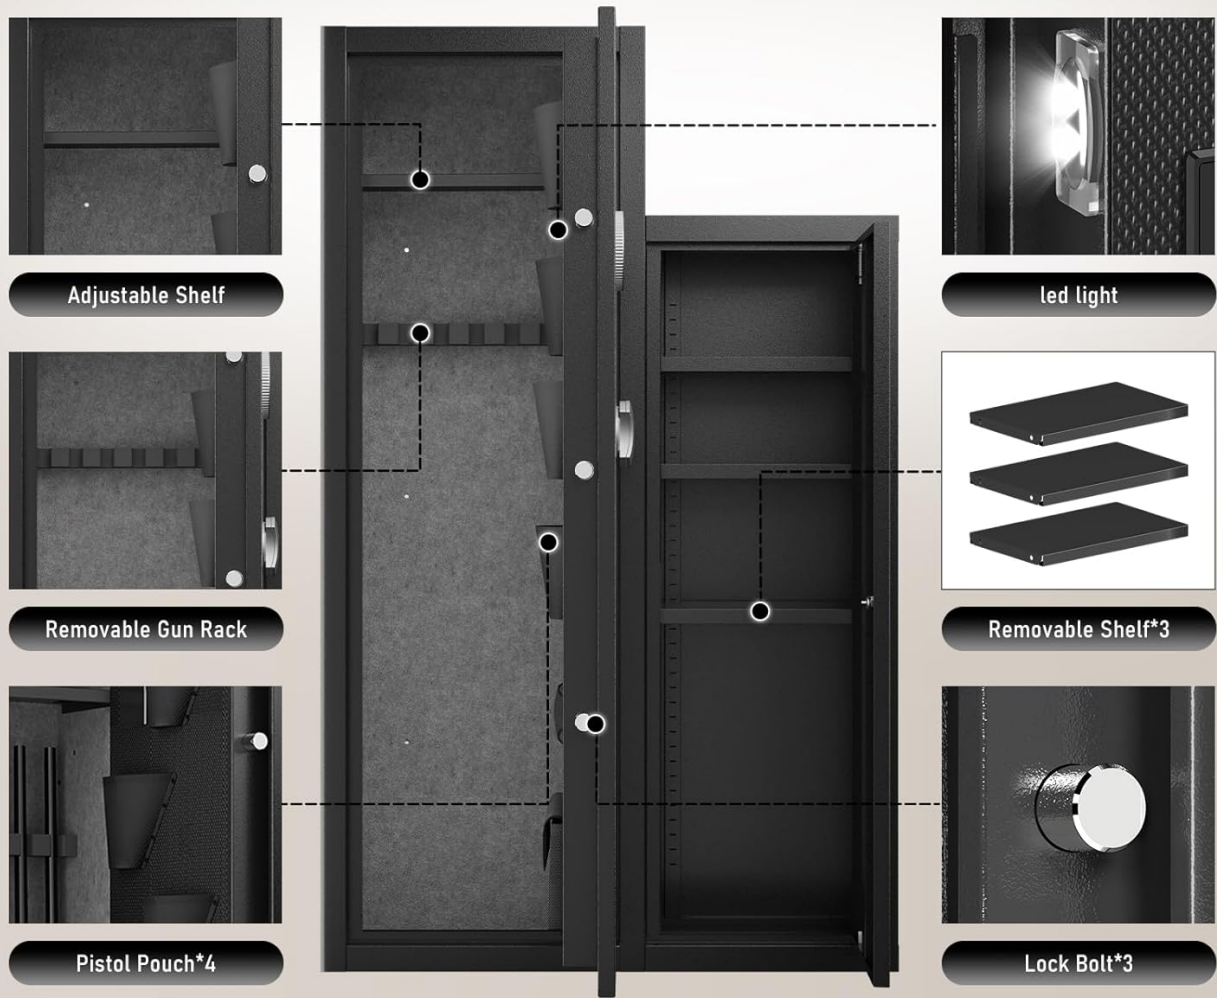


Figure 2: Interior Features. This image highlights the internal features of the gun safe, including adjustable shelves, a removable gun rack for rifles, four pistol pouches, an LED light for visibility, and the robust lock bolts.

GUN CABINET WITH REMOVABLE SHELVES



Figure 3: Removable Shelves. This image shows how the shelves within the gun safe can be removed or adjusted to accommodate various sizes of firearms and accessories, offering flexible storage solutions.

OPERATING INSTRUCTIONS

Unlocking Methods

Your KAER 8-10 Gun Safe offers multiple ways to access its contents:

1. **Digital PIN Code:** The quick-access keypad allows you to set a personal 3-8 digit PIN code for fast entry.
2. **Emergency Key:** A traditional key provides a reliable backup for opening the safe. Keep these keys in a secure location away from the safe.
3. **Emergency Power Box:** In case of battery depletion or lost keys, the emergency power box can be used to supply temporary power to the keypad, allowing access.

TWO UNLOCKING METHODS

You can refer to the video on how to set the password



1

DIGITAL PASSWORD(3-12 DIGITS)



2

EMERGENCY KEY(2 KEYS)



When the internal battery is low, you can use the external battery compartment to access the gun cabinet



Figure 4: Unlocking Methods. This image displays the two primary methods for unlocking the safe: using a digital password (3-12 digits) on the keypad and using one of the two provided emergency keys. It also notes the use of an external battery compartment for access when internal batteries are low.

Setting Your Digital PIN Code

1. With the safe door open, locate the reset button on the inside of the door (usually near the battery compartment).
2. Press the reset button. The indicator light on the keypad should illuminate.
3. Enter your desired 3-8 digit PIN code on the keypad.
4. Press the "#" key to confirm your new PIN code. The indicator light should flash to confirm successful programming.
5. Test your new PIN code with the door open before closing it.

Alarm and Silent Modes

The safe is equipped with an alarm system and a silent mode for flexible security.

- **Silent Mode Toggle:** To switch between silent and non-silent modes, press "11#" on the keypad.

- **Alarm Trigger:** If an incorrect code is entered 5 times consecutively, the alarm will sound. The alarm can be deactivated by entering the correct PIN code.



Figure 5: Alarm and Silent Modes. This image illustrates the dual functionality of the safe's alarm system. It shows a "Silent Mode" for discreet operation (indicated by a sleeping child) and an "Alarm Prompt" that activates if an incorrect password is entered multiple times (indicated by a burglar and a siren icon).

MAINTENANCE

Regular maintenance ensures the longevity and reliable operation of your KAER 8-10 Gun Safe.

- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Interior Care:** The felt cloth lining inside the gun cabinet protects firearms from scratches. Keep it clean and free of debris.
- **Battery Replacement:** The keypad is powered by batteries (typically AA). Replace them annually or when the low battery indicator appears. Use the emergency power box if batteries die before replacement.
- **Lock Mechanism:** Periodically check the locking bolts and hinges for smooth operation. Do not lubricate the

electronic lock mechanism.

- **Key Storage:** Always store emergency keys in a secure location away from the safe and out of reach of unauthorized individuals.

TROUBLESHOOTING

If you encounter issues with your KAER 8-10 Gun Safe, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Keypad does not respond.	Dead batteries.	Replace batteries. Use the emergency power box for immediate access.
Safe will not open with PIN code.	Incorrect PIN entered; PIN not set correctly.	Ensure correct PIN is entered. Re-program PIN if necessary (with door open). Use emergency key.
Alarm sounds unexpectedly.	Incorrect code entered multiple times; tampering attempt.	Enter correct PIN to silence. Check for unauthorized access attempts.
Door is stiff or difficult to close/open.	Obstruction; misaligned.	Check for items blocking the door or locking bolts. Ensure safe is level and securely mounted.

SPECIFICATIONS

Detailed specifications for the KAER 8-10 Gun Safe (Model 1250AB):

Feature	Detail
Brand	KAER
Model Name	1250AB gun safe
Color	Black
Material	Alloy Steel
Product Dimensions (Overall)	16.9 x 11 x 49.2 inches (W x D x H)
Left Rifle Safe Dimensions	H49.2" x W16.9" x D11"
Right Ammunition Cabinet Dimensions	H39.37" x W13.18" x D11"
Item Weight	90 Pounds
Capacity	5-8 Rifles & Shotguns, 4 Handguns (left compartment); Ammunition & accessories (right compartment)
Locking Mechanism	Digital Keypad (3-8 digit PIN), Emergency Key
Special Features	Emergency Power Box, LED lights, Quick Access Keypad, Alarm System, Silent Mode, Removable Shelves, 4 Pistol Pouches

Feature	Detail
Mounting Type	Floor Mount (with pre-drilled holes)
Assembly Required	Yes (for right locker cabinet)
Included Components	Emergency Power Box, Expansion bolts (x4), Mounting Gloves, User Manual

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact KAER customer service directly. Keep your purchase receipt as proof of purchase.

Online Support: [Visit the KAER Store on Amazon](#)