

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [kensen](#) /

> [kensen Multi-functional Grooming Kit \(Hair Clipper, Beard Trimmer, Nose Hair Trimmer, Body Shaver\) Model GT-2200 Instruction Manual](#)

kensen GT-2200

kensen Multi-functional Grooming Kit Model GT-2200 Instruction Manual

Comprehensive Guide for Hair Clipper, Beard Trimmer, Nose Hair Trimmer, and Body Shaver

1. SAFETY INFORMATION

Please read all instructions carefully before using the kensen Multi-functional Grooming Kit. Retain this manual for future reference.

- Do not immerse the charging base in water. The main unit is IPX7 waterproof, but ensure the charging port is dry before charging.
- Keep the appliance out of reach of children. The safety lock feature prevents accidental activation; press the power button for 3 seconds to activate/deactivate.
- Do not use the appliance if the blades are damaged, as this may cause skin irritation or injury.
- Avoid using the appliance on irritated, infected, or broken skin. Consult a doctor if you experience any adverse reactions.
- Only use the provided Type-C charging cable.
- Do not disassemble or attempt to repair the appliance yourself. Contact customer support for assistance.

2. PRODUCT OVERVIEW

The kensen Multi-functional Grooming Kit Model GT-2200 is designed for versatile personal grooming, offering solutions for hair cutting, beard trimming, nose hair removal, and body shaving. It features a skin-friendly R-shaped blade design and a powerful motor for efficient and comfortable use.



Image 2.1: Overview of the kensen Multi-functional Grooming Kit and its various attachments, including the main unit, hair clipper blade, beard trimmer blade, nose hair trimmer, body shaver blade, various guide combs, cleaning brush, and Type-C charging cable.

Key Features:

- **R-shaped Blade Design:** Rounded, double-sided R-shaped blade tips prevent direct contact with skin, reducing irritation and ensuring a gentle trimming experience.
- **High-Speed Motor:** Equipped with a powerful motor to prevent hair pulling and ensure smooth, efficient cutting.
- **2-Stage Speed Adjustment:** Allows selection between two cutting speeds to suit different hair types and grooming needs.
- **IPX7 Waterproof:** The entire unit is fully washable under running water for easy and hygienic cleaning. Suitable for wet and dry use, including in the shower.
- **Type-C Fast Charging:** Features a 1500mAh lithium-ion battery, providing approximately 3.5 hours of continuous use after 2.5 hours of charging.
- **LED Display:** Clearly shows battery percentage, current speed (RPM), and a washing reminder indicator.
- **Safety Lock Function:** Prevents accidental activation, ideal for households with children or for travel.

3. ATTACHMENTS AND THEIR USES

The kit includes multiple interchangeable heads and guide combs for various grooming tasks:



Image 3.1: The kensen grooming kit offers four primary functions: hair cutting, beard trimming, nose hair trimming, and body shaving, all with interchangeable heads.

- **Hair Clipper Blade:** Used for general hair cutting and styling. Comes with guide combs for lengths of 3mm, 6mm, 9mm, and 12mm.
- **Beard Trimmer Blade:** Designed for shaping and maintaining beard length. Features a dial-adjustable guide comb for lengths from 1mm to 6mm.
- **Nose Hair Trimmer:** A cylindrical blade for safe and precise removal of nose and ear hair.
- **Body Shaver Blade:** Gentle design for body hair removal, including sensitive areas. Comes with guide combs for 3mm and 6mm lengths.

Attaching and Detaching Blades:

To change blades, gently push the current blade head upwards to detach it from the main unit. To attach a new blade, align it with the main unit and press down firmly until it clicks into place.



Image 3.2: Step-by-step guide illustrating how to remove and attach the different blade heads to the main grooming unit.

4. SETUP AND CHARGING

Initial Charge:

Before first use, fully charge the grooming kit. Connect the Type-C charging cable to the port at the bottom of the unit and plug the other end into a compatible USB power source (e.g., computer, adapter, power bank).

- A full charge takes approximately 2.5 hours.
- The LED display will show the battery percentage during charging.
- Once fully charged, the unit provides approximately 3.5 hours of continuous use.

便利な **TYPE-C** 充電式

汎用性の高いType-C充電でいつでもどこでも使える



稼働時間
約 **3.5** 時間

充電時間
約 **2.5** 時間

ノートパソコン アダプター
デスクトップパソコン モバイルバッテリー

Image 4.1: The grooming kit features a convenient Type-C charging port, allowing it to be charged from various USB power sources.

Activating/Deactivating Safety Lock:

To activate or deactivate the safety lock, press and hold the power button for 3 seconds. The LED display will indicate the lock status.

5. OPERATING INSTRUCTIONS

General Operation:

1. Ensure the desired blade attachment is securely installed.

2. Press the power button to turn on the unit.
3. Press the power button again to cycle through the two-speed settings (6000 RPM for fine trimming, 7000 RPM for thick hair). The LED display will show the current speed.
4. Gently guide the trimmer against the direction of hair growth for optimal results.
5. After use, press and hold the power button to turn off the unit.



Image 5.1: The LED display indicates the selected speed (RPM), allowing users to choose between 6000 RPM for detailed trimming and 7000 RPM for thicker hair.

Specific Grooming Applications:

- **Hair Cutting:** Attach the hair clipper blade and select a guide comb (3/6/9/12mm) for your desired hair length. Move the clipper against the hair growth.
- **Beard Trimming:** Use the beard trimmer blade with its dial-adjustable guide comb (1-6mm). Adjust the dial to achieve the preferred beard length or shape.
- **Nose/Ear Hair Trimming:** Attach the nose hair trimmer. Gently insert the tip into the nostril or ear canal and move it in a circular motion to trim unwanted hair.
- **Body Shaving:** Use the body shaver blade, optionally with a 3mm or 6mm guide comb, for trimming body hair on arms, legs, chest, back, or delicate areas.

刈高さを簡単調節

様々なニーズに対応



Image 5.2: The grooming kit is versatile, allowing users to adjust cutting height for various needs, from beard trimming to body hair management.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your grooming kit.

1. **After Each Use:** Turn off the unit and detach the blade head. Use the included cleaning brush to remove any loose hairs from the blade and the main unit.
2. **Washing:** Since the unit is IPX7 waterproof, you can rinse the blade head and the main unit directly under running water. Ensure the charging port is closed and dry before washing.
3. **Drying:** After rinsing, shake off excess water and allow all parts to air dry completely before reattaching the blade or storing the unit.
4. **Lubrication (Optional):** Periodically apply a small drop of clipper oil (not included) to the blades to maintain their sharpness and smooth operation.

安心の **IPX7** 完全防水設計 で丸ごと洗浄可能



刃の脱着が可能でお
手入れもラクラク

掃除ブラシ付属

Image 6.1: The IPX7 waterproof design allows for easy cleaning by rinsing the entire unit under water, ensuring hygiene and simple maintenance.

Washing Reminder:

The LED display includes a washing reminder indicator. If this lamp lights up, it suggests that the unit might be overloaded with hair debris or sebum, indicating that a thorough cleaning is recommended.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Battery is depleted or safety lock is active.	Charge the unit fully. Deactivate the safety lock by pressing and holding the power button for 3 seconds.
Poor cutting performance / Hair pulling.	Blades are dull, dirty, or not properly attached.	Clean the blades thoroughly. Ensure the blade head is securely attached. Consider lubricating the blades.

Problem	Possible Cause	Solution
Unit stops during use.	Battery is low or unit is overloaded (washing reminder light on).	Recharge the unit. Clean the blade head and main unit if the washing reminder is active.
LED display not working.	Unit is off or battery is completely drained.	Turn on the unit. Charge the unit. If the problem persists, contact customer support.

8. SPECIFICATIONS

- **Model:** GT-2200
- **Brand:** kensen
- **Blade Material:** Stainless Steel
- **Power Source:** Rechargeable (Type-C USB)
- **Battery:** 1500mAh Lithium-ion (1 x AAA type battery included)
- **Charging Time:** Approximately 2.5 hours
- **Operating Time:** Approximately 3.5 hours
- **Waterproof Rating:** IPX7
- **Minimum Cutting Length:** 3mm (with guide comb)
- **Product Dimensions:** 24.7 x 17.5 x 6.1 cm
- **Product Weight:** 530 g
- **Target User:** Men
- **Origin:** China

9. WARRANTY AND SUPPORT

This kensen product comes with a **1-year warranty** from the date of purchase.

In the unlikely event of a product defect within this 1-year period, please contact us through your Amazon purchase history. We are committed to providing a satisfactory resolution, which may include a refund or exchange.

For any questions, concerns, or technical support regarding your kensen Multi-functional Grooming Kit, please refer to your Amazon purchase details to contact the seller directly.