

Memorex MX-PDV200

Memorex 10-Inch Digital Dual Screen DVD Player

Model: MX-PDV200

INTRODUCTION

Thank you for choosing the Memorex 10-Inch Digital Dual Screen DVD Player. This manual provides essential information for setting up, operating, and maintaining your device. Designed for portable entertainment, this system features two 10-inch screens for synchronized playback, making it ideal for road trips, family outings, and personal use. Please read this manual thoroughly before use to ensure proper operation and to maximize your viewing experience.

SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only the power adapters supplied with the unit. Using unauthorized adapters may cause damage or fire.
- Do not block any ventilation openings. Ensure proper airflow around the unit during operation.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The rechargeable Li-Ion Polymer battery has overheat protection. However, avoid operating the device in direct sunlight or extremely hot environments for prolonged periods.

PACKAGE CONTENTS

Please check the box for the following items:

- 1 x Memorex 10-Inch Master DVD Player Screen
- 1 x Memorex 10-Inch Slave LCD Screen

- 1 x AC Adapter (Wall Charger)
- 1 x Car Adapter (Car Charger)
- 1 x Remote Control
- 1 x DC-to-DC Cable
- 1 x AV Cable
- 2 x Mounting Straps (for headrest installation)



Image: All accessories included with the Memorex 10-Inch Digital Dual Screen DVD Player, laid out clearly. This includes the two 10-inch screens, a remote control, AC/DC adapters, DC-to-DC cable, AV cable, and mounting straps.

SETUP

Initial Charging

Before first use, fully charge the master DVD player unit. Connect the AC adapter to the DC IN port on the master unit and plug it into a wall outlet. The charging indicator will illuminate. A full charge typically takes 3-4 hours.

Connecting the Dual Screens

To enable synchronized playback, connect the master DVD player screen to the slave LCD screen using the provided DC-to-DC cable and AV cable. The master unit has the DVD drive and primary controls, while the slave unit mirrors the content.

- Connect one end of the AV cable to the AV OUT port on the master unit and the other end to the AV IN port on the slave unit.
- Connect one end of the DC-to-DC cable to the DC OUT port on the master unit and the other end to the DC IN port on the slave unit.



Image: Detailed view of the connectivity ports on the side of the Memorex DVD player, showing the earphone jack, AV output, SD/MMC card slot, USB port, DC output, and DC input. This illustrates where to connect the slave screen and power.

Car Installation (Headrest Mounts)

For in-car entertainment, use the provided mounting straps to secure both screens to the back of car seat headrests. Ensure the screens are securely fastened and cables are routed safely to avoid obstruction.



Enjoy your DVDs on the way

Keep your kids entertained on long road trips

memorex®

Image: The Memorex dual screen DVD players are shown securely mounted to the back of car seat headrests, providing entertainment for passengers during a road trip. This setup demonstrates the practical application of the included mounting straps.

Home or Tabletop Use

Each screen is equipped with a support leg on the back, allowing it to stand upright on a flat surface for convenient tabletop viewing.

OPERATING

Power On/Off

Press the **POWER** button on the master unit or the remote control to turn the device on or off.

Disc Playback (DVD/CD)

1. Open the disc tray by pressing the **OPEN** button.
2. Carefully place a DVD or CD onto the disc spindle with the label side facing up.
3. Close the disc tray. The player will automatically begin playback.

USB/SD Card Playback

Insert a USB flash drive into the USB port or an SD/MMC card into the SD card slot. The player will detect the media and display options to browse and play compatible files (MP3, JPEG, video files).

Controls and Remote Functions

The master unit features essential playback controls. The included remote control provides full functionality for navigation, playback, volume adjustment, and menu access.



Image: The Memorex 10-inch dual screen DVD player setup, featuring both screens displaying content and the remote control. This image highlights the primary components for operating the device.

Media Compatibility

The Memorex MX-PDV200 supports a wide range of media formats:

- **Discs:** DVD, CD, DVD±R, DVD±RW, CD-R, CD-RW
- **Digital Files (via USB/SD):** MP3 (audio), JPEG (images), compatible video files

**DVD / CD / CD-R / CD-RW / DVD+R
DVD+RW / MP3 / JPEG**



Image: The Memorex DVD player screen showing a menu, with a clear overlay listing the supported media formats: DVD, CD, CD-R, CD-RW, DVD+R, DVD+RW, MP3, and JPEG. This visually confirms the player's versatile compatibility.

Audio/Video Output

The master unit features an AV OUT port for connecting to external displays or audio systems. An earphone jack is also available for private listening.

MAINTENANCE

Cleaning the Unit

Wipe the unit and screens with a soft, dry cloth. For stubborn marks, slightly dampen the cloth with water. Do not use abrasive cleaners or solvents.

Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing the unit for an extended period, charge it to about 50% before storage and recharge every few months.

Disc Care

Handle discs by their edges. Keep discs clean and free of scratches. Store discs in their cases when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted; Power adapter not connected properly.	Connect the AC/car adapter and charge the unit. Ensure connections are secure.
Disc not playing	Disc is dirty, scratched, or incompatible format; Disc inserted incorrectly.	Clean the disc. Try a different disc. Ensure the disc is inserted label-side up. Check disc format compatibility.
No sound	Volume is too low or muted; Headphones connected.	Increase volume. Check mute setting. Disconnect headphones if using speakers.
Slave screen not displaying	AV or DC-to-DC cable not connected properly.	Ensure both the AV cable and DC-to-DC cable are securely connected between the master and slave units.
USB/SD card not recognized	Incompatible file system or format; Card/drive not inserted correctly.	Ensure USB drive/SD card is formatted to FAT32. Reinsert the drive/card. Try a different drive/card.

SPECIFICATIONS

- **Model:** MX-PDV200
- **Screen Size:** 10 inches (x2)
- **Display Type:** LED
- **Supported Media:** DVD, CD, DVD±R, DVD±RW, CD-R, CD-RW, MP3, JPEG
- **Connectivity:** USB, SD/MMC Card Slot, AV In, AV Out, DC In, DC Out, Earphone Jack, HDMI (as per product specifications)
- **Battery:** Rechargeable Li-Ion Polymer
- **Battery Playback Time:** Up to 3 hours
- **Item Weight:** 8 ounces
- **Package Dimensions:** 14.29 x 10.24 x 5.39 inches
- **Manufacturer:** Memorex
- **Country of Origin:** China

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official Memorex website. Keep your purchase receipt as proof of purchase for any warranty claims.

