

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Memorex](#) /

> [Memorex MX-PDV10 Portable DVD Player User Manual](#)

Memorex MX-PDV10

Memorex MX-PDV10 Portable DVD Player

USER MANUAL

INTRODUCTION

Thank you for choosing the Memorex MX-PDV10 Portable DVD Player. This device is designed to provide versatile and convenient entertainment on the go, featuring a 10.1-inch swivel screen, USB/SD compatibility, and a built-in rechargeable battery. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new portable DVD player to ensure optimal performance and longevity.

WHAT'S IN THE BOX

- Memorex MX-PDV10 Portable DVD Player
- AC Adapter
- AV Cable
- Earphones
- Remote Control
- Car Adapter

PRODUCT FEATURES

- **Versatile Media Compatibility:** Supports DVD, CD, CD-R, CD-RW, DVD±R, DVD±RW, MP3, and JPEG formats.
- **Convenient USB and SD Slot:** Play digital media directly from a USB drive or SD card.
- **10.1-Inch Swivel Screen:** Offers flexible viewing angles for optimal comfort.
- **Built-in Rechargeable Battery:** Provides up to 3 hours of continuous playback with overheat protection.
- **Complete Portable Setup:** Includes AC adapter, AV cable, earphones, remote control, and car adapter.

SETUP

1. Initial Charging

Before first use, fully charge the portable DVD player. Connect the AC adapter to the DC IN port on the player and plug it into a standard wall outlet. The charging indicator light will illuminate. A full charge typically takes approximately 4-5 hours.

2. Powering On/Off

To power on the device, slide the POWER ON/OFF switch to the 'ON' position. To power off, slide the switch to 'OFF'.

3. Inserting a Disc

1. Gently open the disc cover.
2. Place the DVD or CD onto the spindle with the label side facing up.
3. Press down gently on the center of the disc until it clicks into place.
4. Close the disc cover securely.



OPERATING

1. Basic Playback (DVD/CD)

After inserting a disc and powering on, the player will automatically begin reading the disc. For DVDs, a menu may appear, allowing you to select chapters or features. Use the directional buttons on the player or remote control to navigate and the ENTER/PLAY button to confirm selections.

2. Using the Swivel Screen

The 10.1-inch screen can swivel up to 180 degrees and fold flat against the base, transforming the player into a tablet-like device. Gently rotate the screen to achieve your desired viewing angle.

Foldable & Rotatable Screen

180°



-  MP3
-  JPEG
-  CD/CD-R/
CD-RW
-  DVD/DVD+R/
DVD+RW/DVD-R

memorex®

Diagram illustrating the 180-degree foldable and rotatable screen of the Memorex MX-PDV10.

3. USB/SD Playback

1. Insert a USB drive into the USB port or an SD/MMC card into the SD slot.
2. The player should automatically detect the media and display a file browser. If not, press the 'SOURCE' or 'MODE' button (if available) to switch to USB/SD mode.
3. Navigate through your files using the directional buttons and press ENTER/PLAY to select and play content.

Support Multiple Interfaces



Close-up view of the multiple interface ports on the side of the Memorex MX-PDV10.

4. Remote Control Functions

The included remote control provides full functionality for operating the DVD player from a distance. Ensure the remote's battery is inserted correctly. Point the remote directly at the player's IR sensor for best performance.



Memorex MX-PDV10 Portable DVD Player with the included remote control.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the screen, use a screen-specific cleaning solution and a microfiber cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the player for an extended period, charge it to about 50% every few months.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures. Keep it free from dust and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Player does not power on.	Battery is drained; Power switch is off; AC adapter not connected properly.	Charge the battery; Ensure power switch is ON; Check AC adapter connection.
No picture on screen.	Disc is dirty or scratched; Incorrect input source selected (for USB/SD); Screen brightness too low.	Clean or replace disc; Select correct input source; Adjust screen brightness.
No sound.	Volume is too low or muted; Earphones not connected properly; Disc audio issues.	Increase volume or unmute; Check earphone connection; Try another disc.
Remote control not working.	Remote battery is dead; Obstruction between remote and player; Remote not pointed correctly.	Replace remote battery; Remove obstructions; Point remote directly at IR sensor.

SPECIFICATIONS

Feature	Detail
Brand	Memorex
Model	MX-PDV10
Screen Size	10.1 Inches
Display Type	LED
Media Type Supported	DVD, CD, CD-R, CD-RW, DVD±R, DVD±RW, MP3, JPEG
Connectivity	USB, SD/MMC Card Slot, AV In/Out, Headphone Plug, DC In
Battery Type	Li-Ion Polymer Rechargeable Battery
Battery Playback Time	Up to 3 hours
Color	Black
Item Weight	8 ounces
Package Dimensions	14.53 x 10.43 x 3.7 inches

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Memorex website. Keep your proof of purchase for warranty claims.

Official product videos from the seller were not available in the provided data. Please refer to the manufacturer's official channels for any available video guides or demonstrations.

© 2025 Memorex. All rights reserved.