Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Yaheetech /
- Yaheetech 11x11ft Outdoor Gazebo Instruction Manual

Yaheetech YT-00144734

Yaheetech 11x11ft Outdoor Gazebo Instruction Manual

Model: YT-00144734

1. Introduction

Thank you for choosing the Yaheetech 11x11ft Outdoor Gazebo. This manual provides essential information for the safe assembly, operation, and maintenance of your new gazebo. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

This gazebo is designed to provide a shaded and comfortable outdoor space for various activities, featuring a durable powder-coated steel frame and a water-resistant fabric canopy.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in serious injury or property damage.

- Assembly: Always assemble with at least two people. Some components are heavy and large.
- Anchoring: Securely anchor the gazebo to the ground using the provided stakes for soft surfaces (grass) or bolts for hard surfaces (concrete/wood decks). Do not use in high winds without proper anchoring.
- Weather Conditions: While the canopy is water-resistant, it is not designed for heavy rain, snow, or strong winds. In adverse weather conditions, remove the canopy to prevent damage to the structure and ensure safety.
- Fire Hazard: Keep all flame and heat sources away from the gazebo fabric. The fabric is not fireproof.
- Structural Integrity: Do not hang heavy objects from the frame or canopy. Do not climb on the gazebo.
- Maintenance: Regularly inspect all connections and anchoring points for tightness and wear.

3. Parts List

Before assembly, ensure all parts are present and undamaged. Refer to the included hardware pack for specific component identification.

Part	Description	Quantity
Main Frame Legs	Powder-coated steel legs (2" diameter)	4
Roof Frame Components	Steel crossbars and connectors for double-tiered roof	Various
Main Canopy Fabric	Water-resistant PA-coated polyester fabric (Dark Gray)	1
Top Tier Canopy Fabric	Smaller water-resistant fabric for ventilation tier	1
Ground Stakes	For securing to soft ground	8
Expansion Bolts	For securing to hard surfaces (concrete/wood)	8
Hardware Pack	Bolts, nuts, washers, wrench	1 set

Note: Sidewalls are not included with this model.

4. SETUP AND ASSEMBLY

Assembly typically requires two adults and can take approximately 1-2 hours. Ensure you have adequate space for assembly.

4.1 Preparation

- Clear the assembly area of any obstructions.
- Lay out all parts and hardware, verifying against the parts list.
- Tools required: Included wrench (or your own adjustable wrench/socket set for easier assembly).

4.2 Assembly Steps

 Assemble the Roof Frame: Connect the roof frame components according to the diagrams in your hardware manual. Ensure all connections are finger-tight at this stage. Pay attention to the double-tiered design for enhanced ventilation.



Image: Underside view of the gazebo roof frame, highlighting the central hook for hanging lights or plants.

2. **Attach Canopy Fabric:** Carefully drape the main canopy fabric over the assembled roof frame. Secure it to the frame as per the instructions, ensuring the fabric is taut. Then, attach the smaller top-tier canopy fabric.

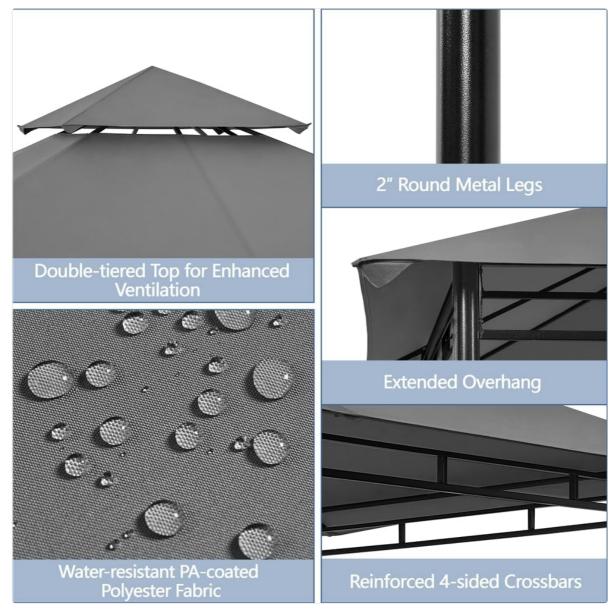


Image: Detailed view of the gazebo's features, including the double-tiered top for ventilation and the water-resistant fabric.

3. **Connect Legs to Roof Frame:** With assistance, lift the roof assembly and connect the four main frame legs to the corners of the roof frame. Ensure the legs are oriented correctly.



Image: The fully assembled gazebo structure.

- 4. **Tighten All Connections:** Once the main structure is upright, go back and securely tighten all bolts and connections using the provided wrench. Do not overtighten.
- 5. Anchor the Gazebo: This is a critical step for stability.
 - For Soft Surfaces (e.g., grass, lawn): Use the 8 ground stakes. Insert them through the anchor holes in the large feet of each leg and drive them firmly into the ground.
 - For Hard Surfaces (e.g., concrete, wood deck): Use the 8 expansion bolts. Mark the drilling
 points through the anchor holes in the feet, drill appropriate holes, and secure the legs with the
 expansion bolts.



Image: Illustration of anchoring methods for different ground types.



Image: Detail of the gazebo's large feet with pre-drilled anchor holes for improved stability.

5. OPERATING INSTRUCTIONS

Your Yaheetech Gazebo is designed for outdoor use, providing shade and a comfortable area for relaxation and entertainment.

• Shade and Ventilation: The 11x11ft canopy offers generous shade coverage. The double-tiered roof design promotes airflow, helping to dissipate heat and enhance wind resistance.



Image: The gazebo providing shade in an outdoor setting.

• **Top Hook Usage:** A central hook is provided on the underside of the roof frame. This can be used to hang string lights for ambiance, small potted plants, or a lightweight fan for additional ventilation. Ensure any hung items do not exceed the weight capacity of the hook (consult product specifications for exact weight limit, typically light decorative items).



Image: Gazebo illuminated at night with string lights, demonstrating the use of the top hook.

• Weather Considerations: While the canopy is water-resistant, it is not designed to withstand heavy downpours, snow accumulation, or strong winds. In such conditions, it is recommended to remove the canopy to prevent water pooling, snow load, or wind damage to the structure.

6. MAINTENANCE

Regular maintenance will extend the life and appearance of your gazebo.

- Cleaning the Canopy: Clean the fabric canopy with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the water-resistant coating. Rinse thoroughly and allow to air dry completely before storage or re-installation.
- Frame Cleaning: Wipe down the powder-coated steel frame with a damp cloth. For stubborn dirt, use mild soap and water. Dry thoroughly to prevent rust.
- **Hardware Inspection:** Periodically check all bolts, nuts, and connections to ensure they are tight. Retighten as necessary.
- Anchoring Check: Regularly inspect the ground stakes or expansion bolts to ensure they remain

- securely anchored, especially after strong winds or heavy rain.
- Winter Storage: For prolonged periods of non-use or during winter months, it is highly recommended to disassemble the canopy and store it in a dry, protected area to prevent damage from extreme weather conditions.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo feels unstable or wobbly.	Loose connections; insufficient anchoring.	Ensure all bolts are securely tightened. Verify ground stakes or expansion bolts are firmly in place. Re-anchor if necessary.
Water pooling on canopy.	Canopy not taut enough; heavy rainfall.	Ensure canopy is stretched tightly over the frame. In heavy rain, remove canopy to prevent damage.
Fabric tearing or fraying.	Exposure to extreme weather; sharp edges on frame; prolonged sun exposure.	Remove canopy during harsh weather. Check frame for any sharp points and smooth them if found. Consider replacing canopy if severely damaged.
Difficulty assembling parts.	Incorrect orientation; missing parts; not enough assistance.	Refer to the assembly diagrams carefully. Verify all parts are present. Ensure at least two people are assisting with assembly.

8. Specifications

Brand	Yaheetech	
Model Number	YT-00144734	
Product Dimensions	129.92"L x 129.92"W x 112.2"H (approx. 11ft x 11ft x 9.35ft)	
Item Weight	63.2 pounds	
Frame Material	Powder-Coated Steel	
Canopy Material	Water-resistant PA-coated Polyester Fabric	
Color	Dark Gray	
Water Resistance Level	Waterproof (Note: Not for heavy rain/snow accumulation)	

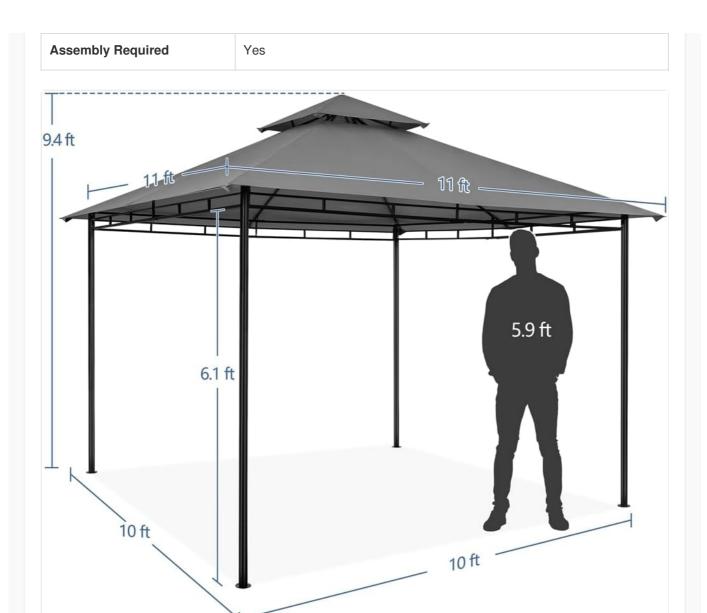


Image: Dimensional overview of the gazebo.

9. WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical support, please contact Yaheetech customer service. Refer to your purchase documentation or the official Yaheetech website for contact details.

Website: Visit the Yaheetech Store on Amazon

Please have your model number (YT-00144734) and purchase date available when contacting support.

© 2025 Yaheetech. All rights reserved.

