

genericcbhwx3g0eo

Generic Sport DV Action Camera User Manual

MODEL: GENERICCBHXL3G0EO

Introduction

This manual provides comprehensive instructions for the operation and maintenance of your Generic Sport DV Action Camera, model genericcbhwx3g0eo. Designed for capturing high-resolution video and photos in various outdoor environments, this camera features a 170-degree wide-angle lens and IP67 waterproofing for durability. Please read this manual thoroughly before using the device to ensure proper function and longevity.

Package Contents

Verify that all items listed below are included in your package:

- 1 x Sport DV Camera
- 1 x Bracket
- 1 x Adhesive Sticker
- 1 x USB Cable
- 1 x User Manual (this document)



Figure 1: Included components of the Sport DV Camera package.

Setup

1. **Charging the Camera:** Connect the camera to a power source using the provided USB cable. The indicator light will show charging status (specific light behavior not detailed in product info, assume standard charging indicator). Ensure the camera is fully charged before first use.
2. **Inserting a Memory Card:** The camera supports a maximum of 128GB storage card (not included). Locate the memory card slot (typically under a protective cover). Insert the memory card with the contacts facing the correct direction until it clicks into place. *Note: The camera will not function without a memory card.*
3. **Mounting the Camera:** Attach the camera to the included bracket. Use the adhesive sticker to secure the bracket to a clean, flat surface such as a helmet, bike, or motorcycle. Ensure the camera is firmly attached to prevent accidental detachment during use.



Figure 2: Sport DV Camera attached to its mounting bracket.

Operating Instructions



Figure 3: Camera controls and ports (USB, Power, Record).

1. **Powering On:** Press and hold the power button (refer to Figure 3) until the indicator light illuminates.
2. **Memory Card Status:**
 - If the blue light flashes, it indicates that no memory card is inserted. Please insert a compatible memory card.
 - If the blue light stays on constantly, a memory card is correctly inserted and ready for use.
3. **Taking a Photo:** With the camera powered on and a memory card inserted (blue light constant), press the power switch once briefly to capture a still image. The camera will save the photo to the memory card.
4. **Recording Video:** To start recording, press the record switch (refer to Figure 3). The blue light will flash continuously, indicating that video recording is in progress. To stop recording, press the record switch again. The blue light will return to a constant state.
5. **Powering Off:** Press and hold the power button until the indicator light turns off.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution to avoid scratches. Do not use harsh chemicals or abrasive materials.
- **Waterproofing:** The camera is rated IP67 for dust and water resistance. This means it is protected from dust ingress and can withstand immersion in water up to 1 meter for 30 minutes. Ensure all ports and covers are securely closed before exposing the camera to water. Avoid prolonged immersion or use in high-pressure water environments.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

Remove the memory card if storing for extended periods.

- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use, to prevent deep discharge.

Troubleshooting

Problem	Possible Cause / Solution
Camera does not power on.	<ul style="list-style-type: none">• Battery is depleted. Charge the camera fully.• Power button not pressed long enough. Press and hold the power button for a few seconds.
Blue light flashes continuously.	<ul style="list-style-type: none">• No memory card inserted. Insert a compatible memory card.• Memory card is full or corrupted. Replace or format the memory card.
Cannot record video or take photos.	<ul style="list-style-type: none">• No memory card or memory card is full. Insert a new card or delete files.• Battery is low. Charge the camera.• Incorrect operation. Ensure you are pressing the correct button for the desired function.
Poor image/video quality.	<ul style="list-style-type: none">• Lens is dirty. Clean the lens with a soft cloth.• Insufficient lighting. Ensure adequate lighting for recording.

Specifications

Feature	Detail
Model Name	genericcbhwx3g0eo
Video Resolution	1280 x 960
Video Format	AVI
Photo Resolution	1280 x 960
Photo Format	JPG
Lens Angle	170 degrees
Waterproofing Rating	IP67
Storage Card Support	Maximum 128GB (Not Included)
Battery Capacity	450mAh (Built-in)
Connectivity	USB
Item Weight	Approximately 4.7 ounces
Package Dimensions	Approximately 4.72 x 3.15 x 3.15 inches

Feature	Detail
---------	--------

Warranty and Support

For warranty information or technical support, please refer to the purchase documentation or contact the seller directly. Keep your proof of purchase for any warranty claims.

Documents - genericcbhwx3g0eo – genericcbhwx3g0eo
no relevant documents