

- Manuals.plus /
- › Pukomc /
 - › Pukomc Electric Indoor Grill Instruction Manual, 2-in-1 with Grill Net & Non-Stick Plate, 1700W

Pukomc B0DTT8RH25

Pukomc Electric Indoor Grill Instruction Manual

Model: B0DTT8RH25

- Introduction
- Safety Instructions
- Package Contents
- Setup
- Operation
- Cleaning & Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. INTRODUCTION

Thank you for purchasing the Pukomc Electric Indoor Grill. This 2-in-1 appliance is designed for versatile indoor grilling, roasting, and frying, offering a convenient way to prepare a variety of meals. It features a non-stick cooking plate, a grill net, and three mini raclette pans for simultaneous cooking. Please read this manual thoroughly before use to ensure safe and optimal operation.



Image: The Pukomc Electric Indoor Grill in use, showcasing its multi-functional design with food cooking on the main grill plate, an elevated grill net, and three individual raclette pans below.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or heating element in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- **WARNING:** Before use, pour water into the oil pan and sump. The water level must not be over the oil pan. Do not touch the heating tube.

ADD WATER TO THE DRIP PAN TO PREVENT DRY BURNING

The water level does not exceed the drip pan



Image: A hand carefully pouring water into the drip pan of the grill, illustrating the crucial step of adding water to prevent dry burning and manage smoke.

3. PACKAGE CONTENTS

Your Pukomc Electric Indoor Grill package includes the following components:

- Main Grill Unit with Heating Element
- Non-stick Coated Grill Plate

- Grill Net (Baking Net)
- Grease Tray (Oil Pan)
- 3 Mini Raclette Pans (Small Trays)
- Power Cord with Temperature Control Knob
- Recipe Booklet (Included Components: Recipe Booklet)

MULTIFUNCTIONAL ELECTRIC GRILL

Heat in 3 seconds, enjoy delicious food instantly



Image: An illustration showing the various parts of the Pukomc Electric Indoor Grill, such as the baking net, non-stick cooking plate, heating element, grease tray, and mini raclette pans.

4. SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the grill plate, grill net, grease tray, and raclette pans with warm, soapy water. Rinse thoroughly and dry completely.
3. **Assemble Base:** Place the main grill unit on a stable, heat-resistant surface.

4. **Insert Grease Tray:** Slide the grease tray into the bottom of the main unit.
5. **Add Water:** Pour water into the grease tray, ensuring the water level does not exceed the oil pan and does not touch the heating tube. This helps to reduce smoke and catch drippings.
6. **Choose Cooking Surface:**
 - For grilling with direct contact: Place the non-stick coated grill plate directly on top of the heating element.
 - For grilling with a rack: Place the grill net on top of the heating element.
7. **Insert Raclette Pans:** Slide the three mini raclette pans into their designated slots beneath the main cooking surface.
8. **Connect Power:** Ensure the temperature control knob is set to "OFF" before plugging the power cord into a standard 120V electrical outlet.

Your browser does not support the video tag.

Video: A demonstration of assembling the Pukomc Electric Indoor Smokeless Grill, showing how to place the drip tray, heating element, and choose between the grill plate or grill net, and insert the raclette pans.

5. OPERATING INSTRUCTIONS

1. **Preheat:** Turn the temperature control knob to your desired setting. The indicator light will illuminate, signaling that the grill is heating. Allow 5-10 minutes for the grill to reach the set temperature.
2. **Cooking:**
 - **Main Grill Plate/Net:** Place food directly on the non-stick grill plate or grill net. The 1700W heating element provides rapid and even heating for searing meats, grilling vegetables, or cooking seafood.
 - **Raclette Pans:** Use the mini raclette pans for melting cheese, warming sauces, or cooking smaller items like chopped vegetables or shrimp simultaneously.
3. **Temperature Control:** Adjust the knob to increase or decrease the heat as needed for different foods. The grill is designed for precise temperature control.
4. **Monitoring:** Monitor food closely to prevent overcooking. Cooking times will vary based on food type, thickness, and desired doneness.
5. **Finish Cooking:** Once cooking is complete, turn the temperature control knob to "OFF" and unplug the appliance.

2-IN-1 INDOOR ELECTRIC GRILL

Griddle and grill dual modes unlock a variety of barbecue styles.



Image: The grill illustrating its 2-in-1 functionality, with one side showing the flat non-stick plate for frying and the other side showing the grill net for traditional grilling.

1500W HIGH SEARING HEAT

Griddle and grill dual modes unlock a variety of barbecue styles.



POWERFUL 1500W

For Fast Heat-Up and Even Heating



TEMPERATURE SETTINGS

For Precise Temperature Control

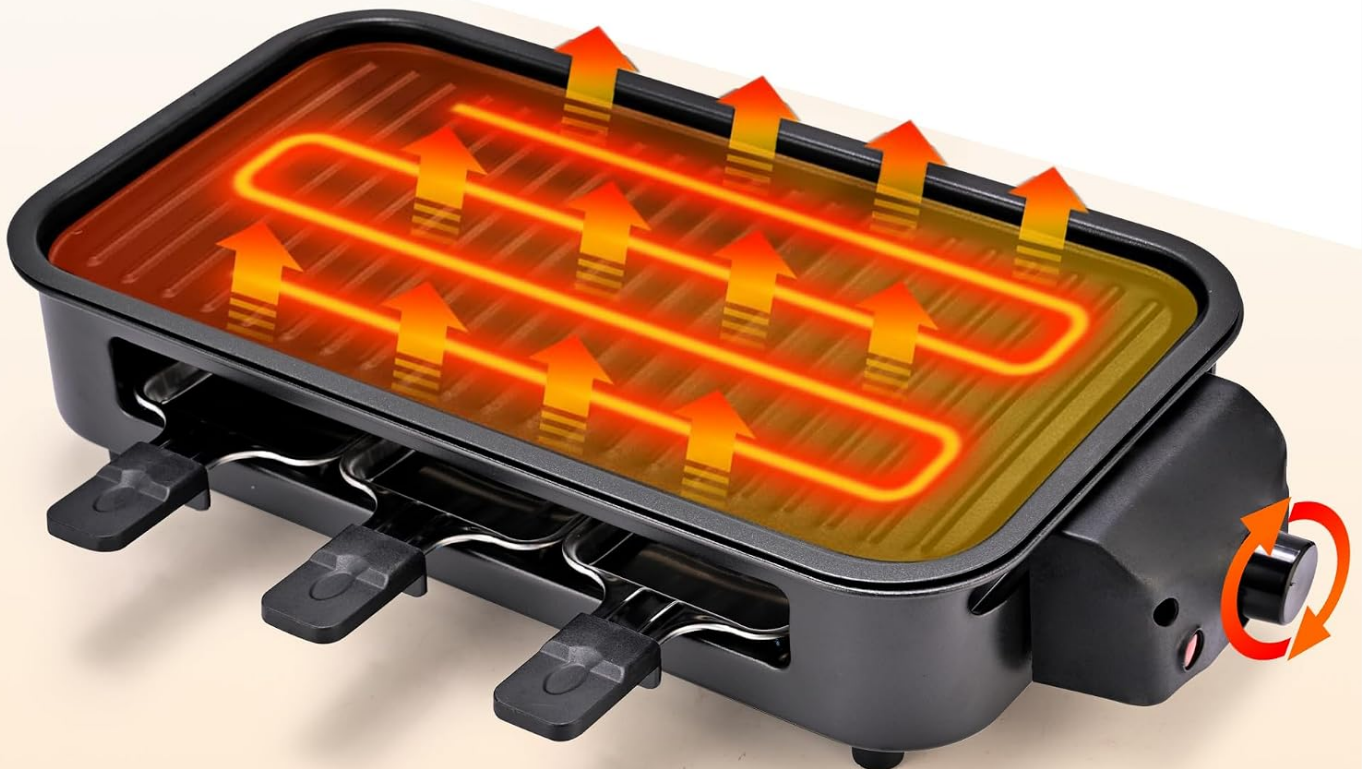


Image: A visual representation of the grill's 1500W heating capability and the adjustable temperature control knob, highlighting efficient heat distribution.

Your browser does not support the video tag.

Video: A user demonstrating the Pukomc Electric Indoor Grill, showing how to place food on the main grill and use the raclette pans for side dishes.

Your browser does not support the video tag.

Video: An overview of the Pukomc Electric Indoor Grill's features, including its 2-in-1 design with grill net and non-stick cooking plate, and its suitability for various kitchen uses.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your Pukomc Electric Indoor Grill. The unique split design makes cleaning convenient.

1. **Cool Down:** Always allow the appliance to cool completely before cleaning.

2. **Disassemble:** Remove the grill plate/net, grease tray, and raclette pans from the main unit.
3. **Wash Components:** The grill plate, grill net, grease tray, and raclette pans are all dishwasher safe. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge.
4. **Clean Main Unit:** Wipe the main unit and heating element with a damp cloth. Do not immerse the main unit or power cord in water or any other liquid.
5. **Dry:** Ensure all parts are thoroughly dry before reassembling or storing.
6. **Storage:** Store the grill in a dry place. The compact design allows for easy storage.

ADOPTS A DETACHABLE DESIGN

- Cleaning becomes a breeze. While also preventing water from directly touching the main unit.
- This helps to extend the machine's lifespan.



EASY TO CLEAN

- Dishwasher-safe hood, plate, and drip tray



Image: The grill's detachable components, including the grill plate and drip tray, being shown as easy to remove and suitable for dishwasher cleaning.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in, power outlet issue, temperature knob set to OFF.	Ensure the power cord is securely plugged into a working outlet. Turn the temperature knob to a desired heat setting.
Excessive smoke during cooking.	No water in the grease tray, too much oil/fat on food, food burning.	Ensure water is added to the grease tray (below heating element). Trim excess fat from meats. Adjust temperature setting.
Food sticks to the grill plate.	Insufficient preheating, no oil/cooking spray, damaged non-stick coating.	Allow adequate preheating time. Apply a small amount of cooking oil or spray to the plate before adding food. Ensure the non-stick coating is intact.
Uneven cooking.	Food not spread evenly, grill not preheated properly.	Distribute food evenly across the cooking surface. Allow the grill to fully preheat before adding food.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Pukomc
Model	B0DTT8RH25
Power	1700 Watts
Voltage	120 Volts
Material	Stainless Steel (components), Non-stick coating (plate)
Product Dimensions	10"D x 5"W x 19"H
Item Weight	7 Pounds
Special Feature	Temperature Control, 2-in-1 Grill Net & Non-Stick Plate, Raclette Pans, Dishwasher Safe Parts

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support inquiries regarding your Pukomc Electric Indoor Grill, please refer to the contact information provided in your product packaging or visit the official Pukomc website. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DTT8RH25>

More documents and user manuals: **<https://manuals.plus/>**