

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [QRD](#) /
- › [QRD Junior E5 Wireless Controller User Manual](#)

QRD Junior E5

QRD Junior E5 Wireless Controller User Manual

Model: Junior E5

1. PRODUCT OVERVIEW

The QRD Junior E5 Wireless Controller is a compact and versatile gaming controller designed for a wide range of platforms, including Nintendo Switch, Switch Lite, Switch OLED, PC (Windows), Mac, iOS, and Android devices. Its ergonomic design and advanced features provide an enhanced gaming experience.



Image 1.1: Front view of two QRD Junior E5 Wireless Controllers.



Image 1.2: Back and front views of the QRD Junior E5 Wireless Controller, highlighting its design.

2. PACKAGE CONTENTS

- QRD Junior E5 Wireless Controller (2 units for this package)
- USB-C Charging Cable
- User Manual (this document)

3. SETUP AND CONNECTION

3.1 Charging the Controller

Before first use, fully charge the controller. Connect the provided USB-C cable to the controller's charging port and the other end to a USB power source (e.g., console, PC, or USB wall adapter). The indicator lights will show charging status and turn off when fully charged.

3.2 Connecting to Nintendo Switch

1. On the Nintendo Switch HOME Menu, select **Controllers > Change Grip/Order**.

2. Press and hold the **Home button** on the QRD Junior E5 controller for 3-5 seconds until the indicator lights start flashing rapidly.
3. Once connected, the corresponding player indicator light(s) on the controller will remain solid.

3.3 Connecting to PC (Windows/Mac)

The controller supports both wireless Bluetooth and wired USB-C connections for PC and Mac.

3.3.1 Wireless Bluetooth Connection

1. Ensure your PC/Mac has Bluetooth enabled.
2. On your PC/Mac, go to Bluetooth settings and search for new devices.
3. Press and hold the **Home button** on the QRD Junior E5 controller for 3-5 seconds until the indicator lights start flashing rapidly.
4. Select "QRD Controller" or similar from the list of available devices to pair.
5. The controller supports **X-input** for PC games.

3.3.2 Wired USB-C Connection

Connect the controller to your PC/Mac using the provided USB-C cable. The controller will be automatically recognized, and no driver installation is required.

3.4 Connecting to iOS/Android Devices

1. Enable Bluetooth on your iOS/Android device.
2. Press and hold the **Home button** on the QRD Junior E5 controller for 3-5 seconds until the indicator lights start flashing rapidly.
3. Search for "QRD Controller" or similar in your device's Bluetooth settings and pair.

4. OPERATING INSTRUCTIONS AND FEATURES

4.1 Basic Controls

The QRD Junior E5 controller features standard button layouts including A/B/X/Y buttons, D-pad, Left/Right joysticks, L/R/ZL/ZR triggers, Home button, and +/- buttons.

4.2 TURBO Function

The TURBO function allows for continuous or automatic rapid firing of buttons. This feature can be customized for different games and play styles.

- **To set TURBO:** Press and hold the desired action button (e.g., A) and then press the **TURBO button** once. The button will now continuously fire when held.
- **To set Auto-TURBO:** Press and hold the desired action button and then press the **TURBO button** a second time. The button will automatically fire without being held.
- **To clear TURBO:** Press and hold the desired action button and then press the **TURBO button** a third time.
- **Adjusting TURBO Speed:** Press the **TURBO button** and the **Up/Down D-pad** simultaneously to cycle through speeds: 8 times/sec, 15 times/sec, 25 times/sec.

Turbo Speed Up



Image 4.1: Illustration of the Turbo function for rapid actions in games.

4.3 6-Axis Gyro Motion Sensor

The controller is equipped with an advanced 6-axis gyro motion sensor, allowing for precise viewpoint and tilt operations in compatible games. Tilt, turn, and twist the controller to interact with game environments dynamically.

6 Axis Gyro Motion Sensor



Image 4.2: Demonstrating the 6-Axis Gyro motion sensor capability.

4.4 Adjustable Vibration Feedback

Dual vibration motors provide immersive haptic feedback. The vibration intensity can be adjusted to suit personal preference and game requirements.

- Vibration modes: 0% (no vibration), 30% (weak), 70% (medium), and 100% (strong).
- To adjust vibration: Press the **Vibration button** (if present, or a combination like TURBO + Left/Right joystick click) to cycle through intensity levels. Refer to the quick start guide for specific button combinations.

Powerful Motors * 2 Adjust Vibrations



Image 4.3: Visual representation of the adjustable vibration feature.

5. MAINTENANCE AND CARE

- Keep the controller dry and away from extreme temperatures.
- Clean the controller with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Avoid dropping or subjecting the controller to strong impacts.
- Store the controller in a safe place when not in use to prevent damage.

6. TROUBLESHOOTING

6.1 Controller Not Connecting

- Ensure the controller is fully charged.
- Verify Bluetooth is enabled on your device (Switch, PC, Mac, iOS, Android).
- Make sure the controller is in pairing mode (indicator lights flashing rapidly).
- Try restarting both the controller and the device you are trying to connect to.
- If connecting to Switch, ensure you are on the "Change Grip/Order" screen.

- For PC/Mac, try a wired USB-C connection to rule out Bluetooth issues.

6.2 Input Lag or Unresponsive Buttons

- Ensure the controller is within range of the connected device.
- Check for interference from other wireless devices.
- Confirm the controller is fully charged. Low battery can affect performance.
- Restart the controller and the game/device.

6.3 Vibration Not Working or Incorrect

- Check the vibration settings on the controller (refer to section 4.4) to ensure it's not set to 0%.
- Verify that the game you are playing supports vibration feedback.
- Ensure the controller's firmware is up to date (if applicable, check the manufacturer's website).

7. SPECIFICATIONS

Model	Junior E5
Brand	QRD
Connectivity	Wireless Bluetooth, Wired USB-C
Compatibility	Nintendo Switch, Switch Lite, Switch OLED, PC (Windows), Mac, iOS, Android
Input Modes	X-input (PC), Switch-input (Nintendo Switch)
Special Features	6-Axis Gyro Motion Sensor, Adjustable Vibration, TURBO Function
Dimensions (approx.)	5 x 3.31 x 2.13 inches (12.7 x 8.4 x 5.4 cm)
Weight (approx.)	1.06 pounds (0.48 kg)
Battery	2 Nonstandard Battery batteries required (internal, rechargeable)

Portable Switch Controller

Mini & Smart Design



Image 7.1: Physical dimensions of the QRD Junior E5 Wireless Controller.



Image 7.2: Multi-platform compatibility of the QRD Junior E5 Wireless Controller.

8. WARRANTY AND SUPPORT

QRD products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase or visit the official QRD website. Please retain your proof of purchase for warranty claims.

For additional support, you may visit the [QRD Store on Amazon](#).