

## Princess 01.322890.01.001

# Princess 2600W Steam Iron User Manual

Model: 01.322890.01.001

## INTRODUCTION

---

Thank you for choosing the Princess 2600W Steam Iron. This powerful appliance is designed to make ironing efficient and effortless, featuring a ceramic soleplate, a 220 ml water tank, and various steam functions. Please read this manual carefully before first use to ensure safe operation and optimal performance. Keep these instructions for future reference.

## SAFETY INSTRUCTIONS

---

- Always ensure the voltage indicated on the rating label matches your mains voltage.
- Do not immerse the iron, power cord, or plug in water or any other liquid.
- Keep the iron out of reach of children and pets.
- The soleplate of the iron can reach very high temperatures. Avoid direct contact with skin.
- Always place the iron on a stable, heat-resistant surface when not in use.
- Unplug the iron from the power outlet before filling or emptying the water tank, and when not in use.
- Do not operate the iron with a damaged cord or plug, or if the iron malfunctions or has been dropped or damaged.
- Never leave the iron unattended while it is switched on or connected to the mains.
- Use only distilled or demineralized water in the water tank to prevent limescale buildup.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Princess Steam Iron:

1. **Water Spray Nozzle:** For moistening stubborn creases.
2. **Water Filling Inlet:** For adding water to the tank.
3. **Steam Shot Button:** Delivers a powerful burst of steam.
4. **Spray Button:** Activates the water spray.
5. **Steam Control Slider:** Adjusts continuous steam output (Dry, Min, Max).
6. **Handle:** Ergonomic grip for comfortable use.
7. **Temperature Control Dial:** Selects the appropriate temperature for different fabrics.
8. **Indicator Light:** Illuminates when the iron is heating and turns off when the set temperature is reached.
9. **Power Cord:** Connects the iron to the electrical outlet.
10. **Water Tank:** Holds up to 220 ml of water.
11. **Ceramic Soleplate:** Smooth, scratch-resistant surface for effortless gliding.
12. **Self-Clean Button:** For activating the self-cleaning function.



Image: Side view of the Princess Steam Iron, showing its overall design and handle.



Image: Top view of the Princess Steam Iron, highlighting the temperature control dial and various function icons.



Image: Close-up of the ceramic soleplate of the Princess Steam Iron, showing steam vents and 'Smooth Glide Scratch Resistant' text.

## SETUP

---

### Before First Use

- Remove any labels, protective film, or stickers from the soleplate.
- It is normal for a slight odor or smoke to occur during the first few minutes of use as manufacturing residues burn off. This is harmless.
- Test the iron on an old piece of fabric to ensure no residue is transferred to your garments.

### Filling the Water Tank

- Ensure the iron is unplugged from the power outlet.
- Set the steam control slider to the 'Dry' (no steam) position.
- Open the water filling inlet cover.
- Using the provided measuring cup, carefully pour distilled or demineralized water into the water tank up to the 'MAX' level indicator. Do not overfill.
- Close the water filling inlet cover securely.

## OPERATING INSTRUCTIONS

---

### Temperature Selection

- Plug the iron into a suitable power outlet. The indicator light will illuminate.
- Turn the temperature control dial to the desired setting based on the fabric type. Refer to the fabric care labels on your garments.
- The indicator light will turn off when the set temperature is reached, indicating the iron is ready for use. It

will cycle on and off during ironing to maintain the temperature.

- **Fabric Settings:**

- Low temperature: Synthetics, Silk
- Medium temperature: Wool
- High temperature: Cotton, Linen

## Dry Ironing

- Ensure the water tank is empty or the steam control slider is set to the 'Dry' position.
- Select the appropriate temperature for your fabric.
- Once the indicator light turns off, begin ironing.

## Steam Ironing

- Fill the water tank as described in the 'Setup' section.
- Set the temperature control dial to a steam-suitable setting (typically between 'Wool' and 'Linen' or higher). Steam is only generated at higher temperatures.
- Once the indicator light turns off, slide the steam control to the desired steam level (Min or Max). Continuous steam will be emitted from the soleplate.
- For stubborn creases, press the **Steam Shot Button** for an extra burst of steam (80 g/min). Wait a few seconds between shots to allow the iron to reheat.

## Vertical Steam

- This function is ideal for removing creases from hanging clothes, curtains, or delicate fabrics.
- Fill the water tank and set the temperature to the maximum setting.
- Hold the iron vertically, a few centimeters away from the fabric.
- Press the **Steam Shot Button** repeatedly to release bursts of steam.

## Spray Function

- The spray function can be used with or without steam.
- Press the **Spray Button** to emit a fine mist of water, which helps to dampen fabrics and ease crease removal.

## MAINTENANCE

---

### After Each Use

- Unplug the iron and allow it to cool down completely.
- Empty any remaining water from the tank to prevent limescale buildup.
- Wipe the soleplate with a damp cloth if necessary. Do not use abrasive cleaners or scouring pads.
- Wipe the exterior of the iron with a soft, damp cloth.

### Self-Cleaning Function

The self-cleaning function helps to remove scale and impurities from the steam chamber and vents.

- Fill the water tank to the 'MAX' level.

- Plug in the iron and set the temperature control dial to the maximum setting.
- Once the indicator light turns off, unplug the iron.
- Hold the iron horizontally over a sink.
- Press and hold the **Self-Clean Button** (if available, otherwise use the steam shot button repeatedly while shaking gently). Hot water and steam will be expelled from the soleplate, carrying impurities with it.
- Continue until the water tank is empty.
- Plug the iron back in, let it heat up, and iron an old cloth to dry the soleplate.

## Storage

- Ensure the iron is completely cool and empty of water.
- Store the iron upright on its heel in a safe, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; temperature dial set to 'OFF' or too low.	Check power connection; try another outlet; adjust temperature dial.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to 'Dry'; steam vents blocked.	Fill water tank; set temperature higher; adjust steam control; perform self-clean.
Water leaking from soleplate.	Water tank overfilled; temperature too low for steam; steam control set to steam at low temperature.	Do not overfill; ensure temperature is high enough for steam; set steam control to 'Dry' for low temperatures.
Soleplate sticking to fabric.	Temperature too high for fabric; residue on soleplate.	Reduce temperature; clean soleplate with a damp cloth (when cool).

## SPECIFICATIONS

- **Model Number:** 01.322890.01.001
- **Power:** 2600 Watts
- **Voltage:** 230 Volts
- **Water Tank Capacity:** 220 ml
- **Continuous Steam:** 25 g/min
- **Steam Shot:** 80 g/min
- **Soleplate Material:** Ceramic
- **Special Features:** Self-cleaning, Vertical Steam, Adjustable Thermostat
- **Product Dimensions (L x W x H):** 12 x 11 x 0.1 cm
- **Item Weight:** 900 Grams
- **Country of Origin:** China

## WARRANTY AND SUPPORT

---

This Princess product comes with a standard manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Princess website. In case of any issues, questions, or if you require technical assistance, please contact Princess customer support. Have your model number (01.322890.01.001) and purchase details ready when contacting support.