

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [TD Systems](#) /

› TD Systems PRIME24M20H 24-inch No Smart TV Instruction Manual

TD Systems PRIME24M20H

TD Systems PRIME24M20H 24-inch No Smart TV Instruction Manual

1. INTRODUCTION

Thank you for choosing the TD Systems PRIME24M20H 24-inch No Smart TV. This manual provides essential information for the safe and efficient use of your television. Please read it thoroughly before operating the device and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Ensure the power cord is not walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Keep small parts and batteries out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the box:

- TD Systems PRIME24M20H Television
- Remote Control
- 2x AAA Batteries (for remote control)
- 2x TV Feet (Left, Right)
- Instruction Manual

4. PRODUCT OVERVIEW

The TD Systems PRIME24M20H is a 24-inch HD Ready television featuring DLED technology for clear and defined images. It includes a DVB-T2/C tuner for terrestrial and cable channels, USB recording (PVR), and various connectivity options.



Figure 4.1: Front view of the TD Systems PRIME24M20H Television.



Figure 4.2: Rear view with connectivity ports including HDMI, USB, DVB-T2/C, AV, Coaxial, and Headphone Jack.

5. SETUP

5.1. Stand Assembly

Carefully place the TV face down on a soft, clean surface. Attach the left and right feet to the designated slots on the bottom of the TV using the provided screws. Ensure they are securely fastened.

5.2. Connecting to Power

Plug the power cord into the TV's power input, then into a wall outlet. The TV will enter standby mode.

5.3. Antenna/Cable Connection

Connect your antenna or cable signal to the DVB-T2/C input port on the rear of the TV.



Sintonizador TDT HD 2025

Sintonizador:
Terrestre y por
cable.

Figure 5.1: Connecting to the DVB-T2/C tuner for terrestrial and cable reception.

5.4. First-Time Setup

Upon first power-on, the TV will guide you through an initial setup process. This includes selecting your language, country, and performing an automatic channel scan. Follow the on-screen instructions using the remote control.

6. OPERATING THE TV

6.1. Basic Functions

- **Power:** Press the power button on the remote control or TV to turn it on/off or enter standby mode.
- **Volume:** Use the VOL +/- buttons to adjust the volume.
- **Channels:** Use the CH +/- buttons to change channels or the number buttons for direct channel input.
- **Source:** Press the SOURCE button to select input sources (HDMI, AV, DVB-T2/C, USB).

6.2. USB Playback and Recording (PVR)

The TV supports USB playback and recording functions. Insert a USB flash drive into the USB port.



Figure 6.1: USB port for recording and media playback.

- **Recording:** While watching a program, press the Record button on the remote to start recording. You can also schedule recordings. The TV can record even in standby mode.
- **Playback:** Access the media player through the menu to browse and play multimedia content (MP3, DIVX, MPEG, WAV, XVID) stored on your USB device.

7. MAINTENANCE

7.1. Cleaning

Unplug the TV before cleaning. Use a soft, dry cloth to wipe the screen and cabinet. Do not use liquid cleaners or aerosol sprays directly on the TV.

7.2. General Care

Avoid placing heavy objects on the TV. Do not expose it to direct sunlight or extreme temperatures. Ensure proper ventilation around the unit.

8. TROUBLESHOOTING

If you encounter issues, consult the following table before contacting support:

| Problem | Possible Cause | Solution |
|----------------------------|--|---|
| No power | Power cord unplugged; no power from outlet | Check power cord connection; test outlet with another device |
| No signal | Antenna/cable not connected; incorrect input source selected | Ensure antenna/cable is connected; select correct input source (DVB-T2/C) |
| Poor picture/sound | Weak signal; incorrect settings | Check antenna/cable connection; perform channel scan; adjust picture/sound settings |
| Remote control not working | Dead batteries; obstruction | Replace batteries; remove any obstructions between remote and TV |

9. SPECIFICATIONS

Detailed technical specifications for the TD Systems PRIME24M20H:

- **Model:** PRIME24M20H
- **Screen Size:** 24 Inches (60 cm)
- **Display Technology:** LED
- **Resolution:** 1366 x 768 pixels (HD Ready)
- **Refresh Rate:** 60 Hz
- **Tuner Technology:** DVB-T2/C
- **Connectivity:** HDMI, USB (1 port), VGA, Composite AV, 3.5mm Audio Jack, Coaxial Digital Audio Out, Headphone Out, Common Interface (CI) Port
- **Audio Output Power:** 6 Watts (2 speakers)
- **Special Features:** USB Recording (PVR), USB Media Playback
- **Dimensions (with stand):** 55.7 cm (W) x 36.6 cm (H) x 16.0 cm (D)
- **Product Weight:** 3 kg
- **VESA Compatibility:** VESA MIS-E
- **Energy Efficiency Class:** E



Figure 9.1: Product dimensions of the TD Systems PRIME24M20H.



ENERG ⚡




TDSYSTEMS

PRIME24M20H





17 kWh/1000h

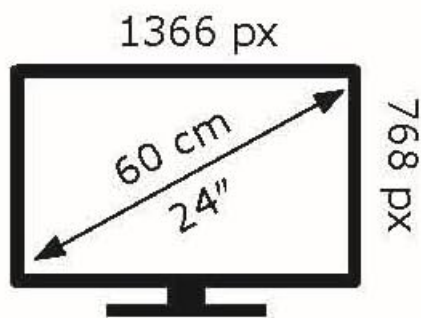

2019/2013

Figure 9.2: Energy efficiency label. For more details, visit [EPREL Database](#).

10. WARRANTY AND SUPPORT

TD Systems offers a **3-year warranty** on this product, ensuring quality and reliability. For any technical assistance or warranty claims, please contact our specialized customer support.

 


Figure 10.1: TD Systems 3-year warranty and specialized customer support.



Figure 10.2: Our dedicated customer support team is ready to assist you.

For further information or to contact support, please visit the official TD Systems website or refer to the contact details provided with your purchase documentation.