

[Manuals.plus](#) /

> [Logilink](#) /

> LogiLink ID0215 Dual Mode Wireless & Bluetooth Keyboard and Mouse Set User Manual

Logilink ID0215

LogiLink ID0215 Dual Mode Wireless & Bluetooth Keyboard and Mouse Set User Manual

Model: ID0215 | Brand: LogiLink

INTRODUCTION

This manual provides comprehensive instructions for the LogiLink ID0215 Dual Mode Wireless and Bluetooth Keyboard and Mouse Set. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and user experience across various devices including Windows, Android, and iOS systems.

PACKAGE CONTENTS

- 1 x LogiLink ID0215 Dual Mode Keyboard
- 1 x LogiLink Dual Mode Mouse
- 1 x USB Micro Dongle (for 2.4 GHz wireless connection)
- 1 x AAA Battery (included, for keyboard)
- 1 x User Manual (this document)

PRODUCT OVERVIEW

Keyboard Layout

The LogiLink ID0215 keyboard features a full-sized QWERTZ layout with scissor-switch keys for quiet and comfortable typing. It includes dedicated function keys for media control and device switching.



Image: Top-down view of the LogiLink ID0215 keyboard, showcasing its QWERTZ layout and function keys.

Mouse Features

The accompanying mouse offers adjustable DPI settings (1000/1200/1600) for precise control and a comfortable ergonomic design.





Image: Two views of the LogiLink ID0215 mouse. The first shows the top view with scroll wheel and LogiLink branding. The second shows a side profile, highlighting its ergonomic shape.

SETUP

1. Battery Installation

- **Keyboard:** Locate the battery compartment on the underside of the keyboard. Insert the included 1 AAA battery, ensuring correct polarity.
- **Mouse:** If your mouse requires a replaceable battery, locate its compartment and insert the appropriate battery type (not included or specified in product details). If it is rechargeable, ensure it is charged before first use.

2. Connecting to a Device

The LogiLink ID0215 supports two connection modes: 2.4 GHz Wireless (via USB dongle) and Bluetooth 5.0. It can pair with up to three devices simultaneously.

2.1. 2.4 GHz Wireless Connection (Device 1)

1. Insert the USB micro dongle into an available USB port on your computer or compatible device.
2. Turn on the keyboard and mouse. They should automatically connect to the dongle.
3. The keyboard's indicator light will confirm connection.

2.2. Bluetooth Connection (Device 2 & 3)

The keyboard and mouse can be paired with two additional devices via Bluetooth.

1. **Keyboard:** Press and hold the **Fn + BT1** or **Fn + BT2** key combination for 3-5 seconds until the corresponding indicator light flashes rapidly. This indicates pairing mode.
2. **Mouse:** Press and hold the Bluetooth pairing button on the underside of the mouse for 3-5 seconds until its indicator light flashes.
3. On your device (computer, tablet, smartphone), navigate to Bluetooth settings.
4. Search for available devices and select "LogiLink Keyboard" and "LogiLink Mouse" from the list.
5. Follow any on-screen prompts to complete the pairing process. The indicator lights will stop flashing and remain solid once connected.



Image: The LogiLink ID0215 keyboard and mouse set positioned on a desk, demonstrating active wireless connectivity with a computer. Blue wireless signal icons are visible above the keyboard.

OPERATING INSTRUCTIONS

Switching Between Devices

To switch between paired devices, simply press the corresponding device key on the keyboard:

- Press **Fn + 1** for 2.4 GHz Wireless (USB dongle)
- Press **Fn + 2** for Bluetooth Device 1
- Press **Fn + 3** for Bluetooth Device 2

The mouse will automatically switch to the active device selected on the keyboard.

Adjusting Mouse DPI

The mouse offers three adjustable DPI settings: 1000, 1200, and 1600. To change the DPI, press the DPI button located

on the top of the mouse, usually below the scroll wheel. Each press cycles through the available settings.

Function Keys (F-Keys)

The keyboard features dedicated function keys for media control and other shortcuts. These are typically accessed by pressing the **Fn** key in combination with the desired F-key (F1-F12).

- **Fn + F1-F12:** Specific media controls (e.g., play/pause, volume up/down, mute) and system shortcuts. Refer to the keycap legends for exact functions.

MAINTENANCE

Cleaning

- Use a soft, dry, lint-free cloth to clean the surfaces of the keyboard and mouse.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaning solution. Avoid excessive moisture.
- Do not spray cleaners directly onto the devices.
- Avoid using harsh chemicals, solvents, or abrasive materials.

Battery Replacement

- When the battery indicator light flashes or performance degrades, replace the batteries.
- Follow the battery installation steps outlined in the "Setup" section for the keyboard. For the mouse, replace its battery if applicable.
- Dispose of used batteries responsibly according to local regulations.

Storage

When not in use for extended periods, turn off the keyboard and mouse to conserve battery life. Store them in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard/Mouse not responding	Low batteries; Incorrect connection mode; Out of range; Pairing issue.	Replace batteries (for keyboard). Ensure correct connection mode (2.4 GHz or BT) is selected. Move closer to the device. Re-pair the device.
Bluetooth connection unstable	Interference; Distance; Device issues.	Ensure no other strong wireless signals are nearby. Reduce distance to the device. Try re-pairing. Update Bluetooth drivers on your device.
Mouse cursor erratic or unresponsive	Dirty sensor; Unsuitable surface; Low batteries.	Clean the optical sensor on the mouse. Use a mouse pad or a non-reflective, opaque surface. Replace mouse battery if applicable.
Cannot switch between devices	Incorrect key combination; Device not paired.	Ensure you are pressing Fn + 1/2/3 . Verify that all devices are correctly paired.

SPECIFICATIONS

Model Number	ID0215
Connectivity	2.4 GHz Wireless (USB dongle), Bluetooth 5.0
Compatible OS	Windows, Android, iOS
Keyboard Layout	Full-sized QWERTZ
Keyboard Switches	Scissor-switch
Mouse DPI	1000 / 1200 / 1600 (adjustable)
Power Source	Battery Powered (Keyboard: 1x AAA; Mouse: Battery type not specified, may be internal rechargeable or require separate purchase)
Dimensions (Keyboard)	36.32 x 12.4 x 1.71 cm
Weight (Keyboard)	460 g
Color	Grey / Anthracite
Special Features	One-Tap Media Controls, Ultra-Thin Aluminium Design, Quiet Typing, Multi-device pairing (up to 3)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official LogiLink website or contact your local retailer. Keep your proof of purchase for warranty claims.
Manufacturer: 2direct GmbH

© 2025 LogiLink. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DTV29C9J>

More documents and user manuals: <https://manuals.plus/>