

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Oakley](#) /

› [Oakley OX8100F Eyeglasses Bundle User Manual](#)

Oakley OX 8100F

Oakley OX8100F Eyeglasses Bundle User Manual

Model: OX 8100F

Brand: Oakley

INTRODUCTION

This manual provides essential information for the proper use, care, and maintenance of your Oakley OX8100F Eyeglasses Bundle. Please read this manual thoroughly before using your new eyewear to ensure optimal performance and longevity.

The Oakley OX8100F Eyeglasses are designed with a lightweight frame for all-day comfort and are suitable for everyday wear and outdoor activities. This bundle includes a protective carrying case and a universal anti-slip silicone leash for added security.

PACKAGE CONTENTS

- Oakley OX8100F Eyeglass Frames (Polished Clear)
- Universal Anti-slip Silicone Leash
- Protective Carrying Case



Image: The Oakley OX8100F eyeglasses in polished clear, shown alongside the included black universal anti-slip silicone leash.

SETUP

1. Attaching the Anti-slip Silicone Leash

1. Gently slide the open end of the silicone leash over the temple tips of your Oakley OX8100F eyeglasses.
2. Push the leash ends firmly until they are securely seated on the temple tips. Ensure a snug fit to prevent accidental detachment.
3. Adjust the leash around your neck for comfortable wear, allowing the eyeglasses to hang safely when not in use.



Image: A close-up view of the black universal anti-slip silicone leash, showing the loops designed to attach to eyeglass temple tips.

2. Prescription Lens Installation (Professional Service Recommended)

The Oakley OX8100F frames are designed to accommodate prescription lenses. It is highly recommended to have a qualified optician install your prescription lenses. Attempting to install lenses yourself may damage the frames or lenses and void any warranty.

OPERATING INSTRUCTIONS

Wearing Your Eyeglasses

- Gently place the eyeglasses on your face, ensuring the nose pads rest comfortably on your nose bridge and the temple arms extend over your ears.
- If using the silicone leash, ensure it is positioned comfortably around your neck, allowing the glasses to hang freely when removed.
- The lightweight design of the Oakley OX8100F frames provides comfort for extended wear.



Image: A front-facing view of the Oakley OX8100F eyeglasses in polished clear, showcasing the frame design and temple details.

MAINTENANCE AND CARE

Cleaning Your Eyeglasses

1. Rinse your eyeglasses under lukewarm running water to remove loose dirt and dust. Avoid hot water, which can damage lens coatings.
2. Apply a small drop of mild dish soap to each lens. Gently rub the lenses and frames with your fingertips.
3. Rinse thoroughly to remove all soap residue.
4. Dry the lenses and frames with a clean, soft, lint-free cloth, preferably a microfiber cloth designed for eyewear. Avoid using paper towels or rough fabrics, which can scratch lenses.
5. For quick cleaning, use a pre-moistened lens wipe or a lens cleaning spray with a microfiber cloth.

Storing Your Eyeglasses

- Always store your eyeglasses in the provided protective carrying case when not in use. This protects them from scratches, dust, and accidental damage.
- Avoid leaving eyeglasses in direct sunlight or extreme heat (e.g., on a car dashboard), as this can warp the frames or damage lens coatings.

General Care Tips

- Handle your eyeglasses by the frames, not the lenses, to avoid smudges and scratches.
- Do not place your eyeglasses face down on any surface.
- Regularly check screws for tightness. If loose, gently tighten them with a small eyewear screwdriver.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Eyeglasses slip down nose	Nose pads need adjustment; frames are too wide.	Gently adjust nose pads for a snugger fit. If frames are too wide, consult an optician for professional adjustment. Ensure the silicone leash is properly attached and adjusted.
Lenses are blurry or smudged	Dirt, oil, or residue on lenses.	Clean lenses thoroughly using the recommended cleaning procedure (see Maintenance section).
Frames feel loose or crooked	Loose screws; frames are bent.	Check and gently tighten any loose screws. If frames are bent, visit an optician for professional repair to avoid further damage.
Silicone leash detaches easily	Leash not fully seated on temple tips.	Ensure the silicone leash is pushed firmly onto the temple tips until it is securely in place.

SPECIFICATIONS

- **Model Number:** OX 8100F
- **Product Dimensions:** 6 x 2 x 2 inches
- **Weight:** 12 ounces (approximate, including packaging)
- **Frame Material:** Premium cellulose acetate (as per product description)
- **Color:** Polished Clear
- **Manufacturer:** Luxottica Group S.p.A.
- **Origin:** Made in the USA or Imported

WARRANTY INFORMATION

Oakley products are manufactured to the highest standards. For specific warranty details regarding your Oakley OX8100F eyeglasses, please refer to the warranty card included with your purchase or visit the official Oakley website. The warranty typically covers manufacturing defects in materials and workmanship. Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, product inquiries, or support, please contact Oakley customer service through their official website or the retailer from whom you purchased this product.

Online Support: Visit the official Oakley website for FAQs, support resources, and contact information.

Retailer Support: Contact the seller "IT Glasses" for purchase-specific inquiries.