

[Manuals.plus](#) /

› [Towallmark](#) /

› Towallmark Gas Pressure Washer User Manual - 3600 PSI, 2.6 Max GPM

Towallmark 9wGbg28OeDyh4I2OMJUYGQh3GM65

Towallmark Gas Pressure Washer User Manual

Model: 9wGbg28OeDyh4I2OMJUYGQh3GM65

1. INTRODUCTION

Thank you for choosing the Towallmark Gas Pressure Washer. This manual provides important information for the proper assembly, operation, and maintenance of your pressure washer. Please read this manual thoroughly before operating the unit to ensure safe and efficient use.



Figure 1.1: Towallmark Gas Pressure Washer with included accessories.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of injury or damage. This pressure washer operates at high pressure and can cause serious injury if not used correctly.

General Safety Rules:

- Read all instructions before using the appliance.
- Do not direct the water stream at people, pets, electrical devices, or the unit itself.
- Wear appropriate personal protective equipment (PPE), including eye protection, hearing protection, and sturdy footwear.
- Ensure the work area is clear of obstacles and well-lit.
- Never operate the pressure washer without water supply.
- Keep children and bystanders away from the operating area.

- Always engage the safety lock on the spray gun when not actively spraying.

SAFETY LOCK



Figure 2.1: The safety lock mechanism on the spray gun prevents accidental discharge.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any parts are missing or damaged, please contact customer support.

- Gas Pressure Washer Unit
- High-Pressure Hose (26 FT)
- Spray Gun with Safety Lock
- Quick-Connect Nozzles (0°, 15°, 25°, 40°, Soap Nozzle)
- Garden Hose Adapter (7 FT)
- Straight Pole (18-foot)
- Spark Plug Wrench

- Screwdriver
- User Manual



Figure 3.1: Overview of key components and accessories included with the pressure washer.

4. ASSEMBLY AND SETUP

Follow these steps to assemble your pressure washer before first use.

1. **Attach the Handle:** Secure the handle to the main unit using the provided bolts and nuts.
2. **Connect the High-Pressure Hose:** Connect one end of the 26 FT high-pressure hose to the pressure washer's outlet and the other end to the spray gun. Ensure connections are tight.
3. **Connect the Garden Hose:** Attach your garden hose (minimum 5/8 inch diameter) to the water inlet on the pressure washer. Ensure the water supply is clean and free of debris.
4. **Add Fuel and Oil:** Fill the fuel tank with fresh, unleaded gasoline. Check the engine oil level and add appropriate engine oil if necessary, as per the engine manufacturer's recommendations. Do not overfill.
5. **Prime the Pump:** Before starting the engine, turn on the water supply completely and squeeze the spray gun trigger to purge air from the pump and hose. Continue until a steady stream of water flows from the nozzle.



Figure 4.1: Visual guide for connecting the spray gun, hose, and priming the unit.

5. OPERATION

Starting the Engine:

1. Ensure the water supply is fully open and the pump is primed.
2. Set the engine switch to "ON".
3. Move the choke lever to the "CHOKE" position (cold start).
4. Pull the recoil starter handle firmly until the engine starts.
5. Once the engine starts, gradually move the choke lever to the "RUN" position.

Using the Nozzles:

The pressure washer comes with 4 quick-connect metal nozzles and a soap nozzle, each designed for specific cleaning tasks. To change nozzles, pull back the collar on the spray gun wand and insert the desired nozzle until it clicks into place.

Nozzle Type	Description	Recommended Use
0° (Red)	Pin-point stream, highest pressure.	Tough, concentrated cleaning for stubborn stains on concrete or metal. Use with extreme caution.
15° (Yellow)	Narrow, powerful spray.	General cleaning of hard surfaces like concrete, brick, and driveways.
25° (Green)	Medium-angle spray.	Versatile for decks, fences, wooden surfaces, and general cleaning.
40° (White)	Wide, gentle spray.	Delicate surfaces like vehicles, windows, and patio furniture.

Nozzle Type	Description	Recommended Use
Soap Nozzle (Black)	Low-pressure, wide spray for detergent application.	Apply cleaning solutions. Activates when the soap tank is filled.

4 QUICK-CONNECT NOZZLES



Figure 5.1: Quick-connect nozzles and their spray angles for various cleaning tasks.

Soap Nozzle



Soap Nozzle is designed for use with low pressure cleaners. Use this nozzle only when applying detergent.

Figure 5.2: The soap nozzle is designed for low-pressure application of detergents.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Engine Oil:** Check engine oil level before each use. Change oil after the first 5 hours of operation, then every 50 hours or annually.
- **Air Filter:** Inspect the air filter regularly and clean or replace if dirty.
- **Spark Plug:** Check and clean the spark plug annually or every 100 hours. Replace if necessary.
- **Nozzle Cleaning:** Clean clogged nozzles using the provided nozzle cleaning tool.
- **Pump Care:** Flush the pump with clean water after each use. For storage in freezing temperatures, use a pump protector/antifreeze.
- **Hose and Gun:** Inspect hoses and spray gun for damage before each use. Replace if worn or cracked.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Engine will not start	No fuel; Engine switch OFF; Choke not set correctly; Fouled spark plug.	Add fuel; Turn switch ON; Adjust choke; Clean/replace spark plug.
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump; Worn pump seals.	Ensure full water flow; Clean nozzle; Purge air from pump; Contact service.
Pulsating pressure	Air in pump; Water supply restriction; Clogged nozzle.	Purge air; Check water filter/hose for kinks; Clean nozzle.
Water leaks	Loose connections; Damaged O-rings/seals; Cracked hose.	Tighten connections; Replace O-rings/seals; Replace hose.

8. SPECIFICATIONS

Feature	Detail
Brand	Towallmark
Model Number	9wGbg28OeDyh4I2OMJUYGQh3GM65
Power Source	Gas Powered
Maximum Pressure	3600 PSI
Maximum Flow Rate	2.6 GPM
Engine Type	210 CC 4-Stroke Engine
Hose Length	26 Feet
Item Weight	72.8 Pounds
Product Dimensions	21.26"L x 21.26"W x 20.87"H
Soap Tank Volume	2 Liters

210CC 4-STROKE ENGINE



Low power consumption
supports high intensity cleaning

Figure 8.1: The powerful 210CC 4-stroke engine provides high intensity cleaning with low power consumption.



Figure 8.2: Key performance metrics of the Towallmark Gas Pressure Washer.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical assistance, please contact Towallmark customer support. Keep your purchase receipt as proof of purchase.

Visit the official Towallmark store on Amazon for more information: [Towallmark Store](#)

© 2024 Towallmark. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question