



[Manuals.plus](#) /

› [Andeman](#) /

› Andeman Cordless Pressure Washer 800PSI 1.5GPM User Manual

Andeman SKUK88895

Andeman Cordless Pressure Washer User Manual

Model: SKUK88895

1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your Andeman Cordless Pressure Washer. Please read all instructions carefully before use to ensure optimal performance and longevity of the product.

The Andeman Cordless Pressure Washer is a portable, battery-powered cleaning system designed for various outdoor and indoor cleaning tasks. It features a high-performance motor, a versatile 6-in-1 nozzle, and multiple water sourcing options for convenience.

2. SAFETY INFORMATION

Always prioritize safety when operating the pressure washer. Keep hands and face clear of the nozzle during operation. Do not point the spray gun at people or animals. Ensure the battery is fully charged before first use. All products undergo rigorous waterproof and battery testing prior to shipment; a small amount of residual moisture is normal and poses no safety risk.

For any inquiries, our team is available 24/7 to assist you. Refer to the product packaging or manufacturer's website for specific warranty details and support contact information.

3. PACKAGE CONTENTS

Verify that all components are present in your package:

- Cordless Pressure Washer Unit
- 21V 3.0Ah Lithium Battery
- Battery Charger
- 6-in-1 Multi-function Nozzle
- 5m (16.4ft) Water Hose
- Removable Foam Bottle (600ml)
- Water Filter
- Bottle Connector

- Hose Adapter
- User Manual

WHAT'S IN THE PACKAGE



Charger



6-in-1
Multi-function Nozzle



Cordless Pressure
Washer



5m/16.4ft
Water Hose



Removable
Foam Bottle



Lithium Battery



Manual



Water Filter



Bottle
Connector

Hose
Adapter

Image: All components included in the Andeman Cordless Pressure Washer kit.

4. SETUP AND INSTALLATION

1. **Fasten the Battery:** Securely attach the 21V 3.0Ah lithium battery to the pressure washer unit.
2. **Connect the 6-in-1 Nozzle:** Insert the 6-in-1 multi-function nozzle into the water gun and rotate clockwise until it clicks into place.
3. **Install the Hose Adapter:** Push the hose adapter firmly into the pressure washer unit until there is almost no gap, ensuring a secure connection.
4. **Connect the Water Hose:** Connect the 5m (16.4ft) water hose to the installed hose adapter and tighten it.
5. **Optional Installations:**
 - **Foam Bottle:** Remove the 6-in-1 nozzle and install the removable foam bottle for soap application.
 - **Water Filter:** Install the water filter before submerging the hose in cloudy water sources (e.g., buckets, rivers)

to prevent clogging.

- **Bottle Connector:** Utilize the included bottle connector to attach a standard soda bottle for water sourcing, offering ultimate portability.
- **Garden Hose Connection:** The pressure washer gun can also be connected directly to a faucet or garden hose using the appropriate adapter (included).



Image: Visual guide for connecting the battery, nozzle, and hose adapter.



Image: Demonstrates bucket self-priming, bottle self-priming, and pool self-priming water access methods.

Your browser does not support the video tag.

Video: Demonstrates the installation and initial use of the Andeman Cordless Pressure Washer, including battery and nozzle attachment.

5. OPERATING INSTRUCTIONS

The pressure washer delivers professional-grade 800 PSI water pressure and a 1.5 GPM flow rate, capable of blasting a 10-meter (33ft) jet stream.

5.1 Nozzle Selection

The 6-in-1 multi-function nozzle allows you to select various spray patterns by rotating the nozzle head:

- **0° (Direct Spray):** For concentrated, high-impact cleaning of stubborn stains.
- **15°, 25°, 40° (Fan Sprays):** For wider coverage and varying intensity, suitable for general cleaning.
- **Shower Mode:** For gentle rinsing or watering plants.

- **Foam Jet:** For applying soap or detergent.

6 IN1 DESIGN, USE IN MULTIPLE SCENARIOS

0°/3#110°/4#110°/40°, Foam Jet, Shower Mode

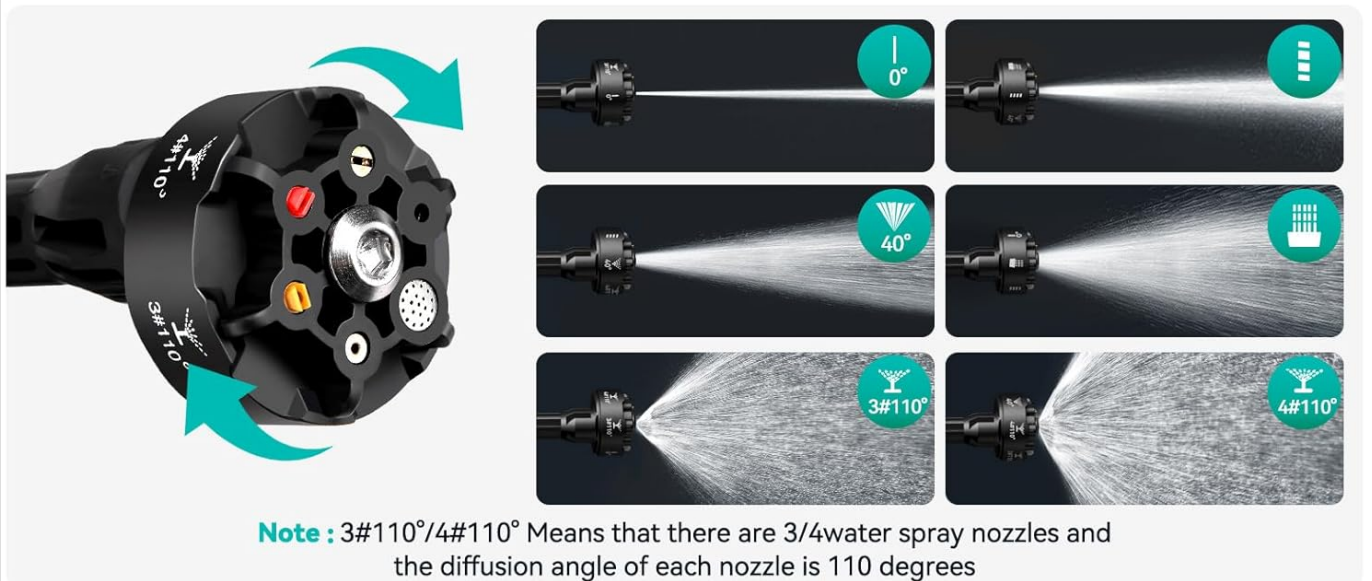


Image: Illustrates the different spray patterns available from the 6-in-1 nozzle.

5.2 Water Sourcing

The pressure washer offers flexible water intake options:

- **Bucket Self-Priming:** Place the filtered end of the hose into a bucket of water.
- **Bottle Self-Priming:** Attach a soda bottle directly to the unit using the bottle connector.
- **Pool Self-Priming:** Submerge the filtered hose end into a pool or other large water source.
- **Faucet Connection:** Connect directly to a standard faucet or garden hose.

3 WAYS FOR WATER SUCKING

Flexible Switch, Convenient Water Access



Bucket self-priming



Bottle self-priming



Pool self-priming

Image: Depicts three methods of water intake: bucket, bottle, and pool self-priming.

5.3 Application

The portable design and powerful battery allow for continuous cleaning for up to 45 minutes on a single charge, suitable for cleaning 2 full-size SUVs or a 50 (538 sq ft) patio.

EASY TO CARRY & EFFICIENCY

Easy to Carry, Easy to Use Anytime and Anywhere



Image: Shows the pressure washer being used for cleaning fences, patios, bicycles, and garden areas.

Your browser does not support the video tag.

Video: A brief demonstration of the cordless pressure washer in action, highlighting its portability and ease of use.

Your browser does not support the video tag.

Video: A short preview demonstrating the pressure washer's effectiveness for everyday chores.

6. MAINTENANCE

6.1 Water Filter

The hose features a built-in filter to effectively filter particles, waste leaves, or sludge from your water source. Regularly inspect and clean the filter to ensure optimal performance and prolong the service life of the unit.

WEIGHTED WATER FILTER



✓ Stronger Stability for Higher Water Absorption

✓ Better Filtration of Impurities to prolong the service life

Image: Close-up of the weighted water filter, highlighting its role in preventing impurities.

6.2 Battery Care

Ensure the battery is fully charged before each use. Store the battery and unit in a dry, cool place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

• No Water Pressure / Intermittent Flow:

- Ensure the water hose is fully submerged in the water source.
- Check for kinks or blockages in the hose.
- Verify the water filter is clean and not clogged.
- If using a bucket, ensure the hose is properly primed (eliminate air in the hose by allowing water to flow through before connecting to the unit, or by holding the nozzle lower than the water source).

• Unit Not Turning On:

- Confirm the battery is fully charged and securely attached.
- Check for any visible damage to the battery or unit.
- **Reduced Performance:**
 - Clean the nozzle head to ensure no debris is obstructing the spray.
 - Recharge the battery if performance decreases during use.

8. SPECIFICATIONS

Feature	Detail
Brand	Andeman
Model Number	SKUK88895
Power Source	Battery Powered (21V 3.0Ah Lithium)
Maximum Pressure	800 PSI
Maximum Flow Rate	1.5 GPM
Hose Length	16.4 Feet (5m)
Item Weight	2.85 lbs (unit only) / 6 Pounds (packaged)
Product Dimensions	15"L x 12"W x 6"H
Nozzle Types	6-in-1 (0°, 15°, 25°, 40°, Direct Spray, Shower Mode)

9. WARRANTY AND SUPPORT

For detailed warranty information, product registration, or technical support, please refer to the warranty card included in your product packaging or visit the official Andeman website. Our customer support team is available to assist you with any questions or concerns.