

[manuals.plus](#) /› [Coaster Fine Furniture](#) /› [Coaster Home Furnishings Rutland 78-Inch TV Stand and Media Console - Model 705803 User Manual](#)

Coaster Fine Furniture 705803

Coaster Home Furnishings Rutland 78-Inch TV Stand and Media Console - Model 705803 User Manual

Model: 705803 | Brand: Coaster Fine Furniture

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the assembly, operation, maintenance, and care of your Coaster Home Furnishings Rutland 78-Inch TV Stand and Media Console. Please read these instructions thoroughly before assembly and use to ensure safe and proper functionality.

The Rutland TV Stand is designed to enhance your entertainment space with its modern aesthetic and practical storage solutions. Crafted from engineered wood with a paper laminate veneer, it offers durability and a sleek black finish. It features open shelves for electronic devices, a wire management hole to minimize clutter, and three concealed drawers for organized storage.

2. PRODUCT FEATURES

- **Material:** Engineered wood with durable paper laminate veneer.
- **Design:** Sleek, modern black finish with clean lines.
- **Storage:** Three spacious drawers for concealed storage.
- **Media Compartments:** Open shelves designed for electronic devices.
- **Cable Management:** Integrated wire management hole to reduce clutter.
- **Compatibility:** Suitable for flat-screen TVs up to 85 inches.
- **Versatility:** Functions as a TV console, media cabinet, or console table.

3. ASSEMBLY INSTRUCTIONS

Assembly of the Coaster Home Furnishings Rutland TV Stand is required. Please refer to the separate assembly guide included in your product packaging for detailed, step-by-step instructions, including a list of all parts and hardware. Ensure all components are present and undamaged before beginning assembly.

It is recommended to assemble the unit on a soft, clean surface to prevent scratches. Two people are recommended for assembly.

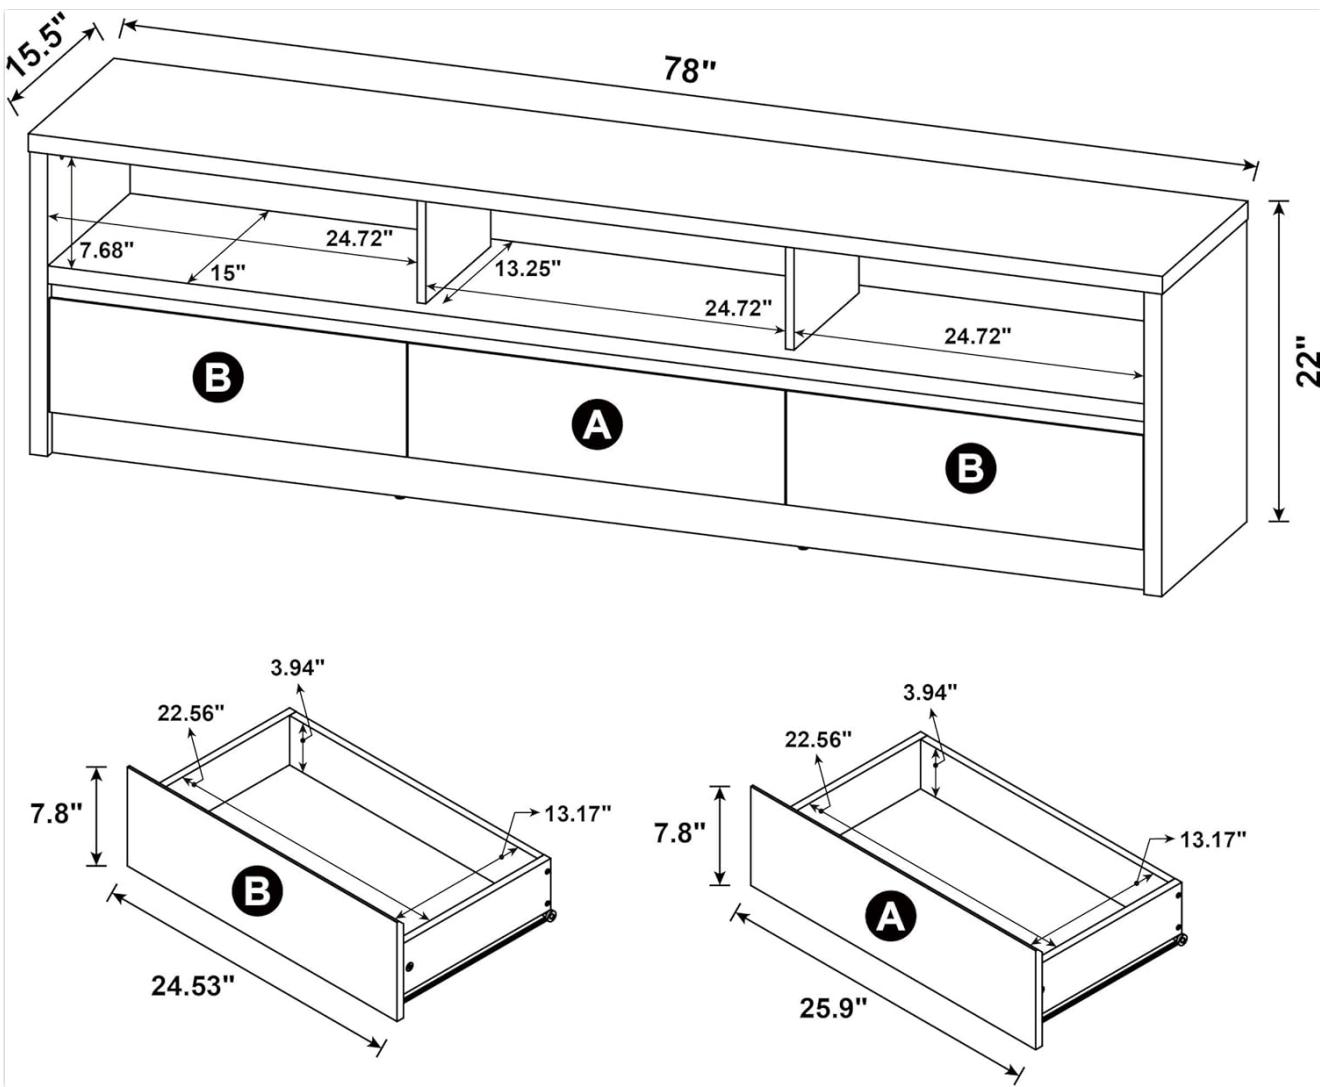


Figure 3.1: Product Dimensions and Drawer Details. This diagram illustrates the overall dimensions of the TV stand (78" L x 15.5" W x 22" H) and the internal dimensions of the three drawers, including their heights and widths.

4. OPERATING AND PLACEMENT GUIDELINES

Once assembled, place the TV stand on a level, stable surface. Ensure adequate space around the unit for ventilation of electronic devices and ease of access for cable management.

- **TV Placement:** Position your television centrally on the top surface. Ensure the TV's base fits securely within the stand's dimensions.
- **Device Storage:** Utilize the open shelves for media players, gaming consoles, and other electronic components.
- **Cable Management:** Route all cables through the designated wire management hole at the back of the unit to maintain a tidy appearance and prevent tangles.
- **Drawer Use:** The three drawers are suitable for storing remote controls, DVDs, games, and other accessories, keeping them out of sight and organized.



Figure 4.1: Rutland TV Stand in Use. This image shows the 78-inch black TV stand positioned in a living room, holding a television, media devices in its open shelves, and decorative items.

5. MAINTENANCE AND CARE

To maintain the appearance and longevity of your TV stand, follow these care instructions:

- **Cleaning:** Wipe the surface with a dry, soft cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth.
- **Heat and Moisture:** Avoid placing hot items directly on the surface. Use coasters or protective pads. Protect from excessive moisture.
- **Sunlight:** Prolonged exposure to direct sunlight may cause fading or discoloration.
- **Moving:** When moving the unit, always lift it rather than dragging it to prevent damage to the legs and frame.

6. TROUBLESHOOTING

If you encounter any issues with your TV stand, consider the following common solutions:

- **Wobbly Unit:** Ensure the stand is placed on a level surface. Check all assembly hardware to confirm they are tightened securely.
- **Drawers Not Sliding Smoothly:** Verify that the drawer slides are correctly installed and free of obstructions. Apply a silicone-based lubricant if necessary.
- **Scratches or Dents:** Minor imperfections can sometimes be touched up with furniture repair markers or wax crayons matching the finish.

For persistent issues or concerns not addressed here, please contact Coaster Fine Furniture customer support.

7. SPECIFICATIONS

Attribute	Detail
Brand	Coaster Fine Furniture
Model Number	705803
Product Dimensions (L x W x H)	78 x 15.5 x 22 inches
Item Weight	106.7 pounds
Material	Engineered Wood, Melamine
Color	Black
Number of Drawers	3
Included Components	78" TV Stand
Product Care Instructions	Wipe with Dry Cloth

8. WARRANTY AND SUPPORT

For warranty information, please refer to the product description on the retailer's website or contact Coaster Fine Furniture customer service directly. You can visit the official Coaster Fine Furniture store for more information and support: [Coaster Fine Furniture Store](#).

9. IMPORTANT SAFETY INFORMATION

WARNING: This product can expose you to chemicals including Formaldehyde, which is known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](#).

Always ensure the TV stand is placed on a stable, level surface to prevent tipping. Do not overload shelves or drawers beyond their recommended weight capacity. Keep small parts and assembly hardware away from children during assembly.

10. ABOUT COASTER FINE FURNITURE

Coaster Fine Furniture has been imagining, crafting, and distributing stylish furniture for nearly four decades, offering quality home furnishings for every season of life. They provide various brands including Coaster Everyday, Coaster Essence, Coaster Elevations, and Coaster Sleep, designed to help you fashion every room to your taste and style.

Your browser does not support the video tag.

Video 10.1: Coaster Home Furnishings Introduction. This video provides an overview of the Coaster Fine Furniture brand, showcasing their commitment to quality and style across various furniture collections for different home aesthetics and needs.

11. PRODUCT VISUALS




Figure 11.1: Front View. A clear front view of the black Rutland TV Stand, highlighting its sleek design and open compartments.



Figure 11.2: Drawers Open. This image displays the TV stand with its three concealed drawers fully extended, showcasing the internal storage space.



Figure 11.3: Rear View. The back of the TV stand, featuring the circular wire management opening for organizing cables.

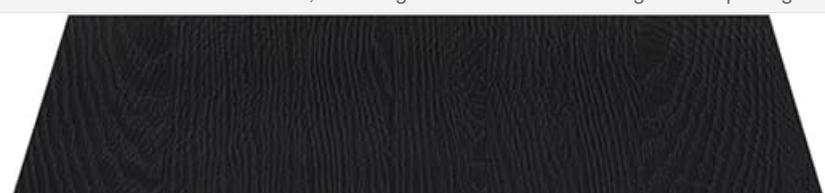



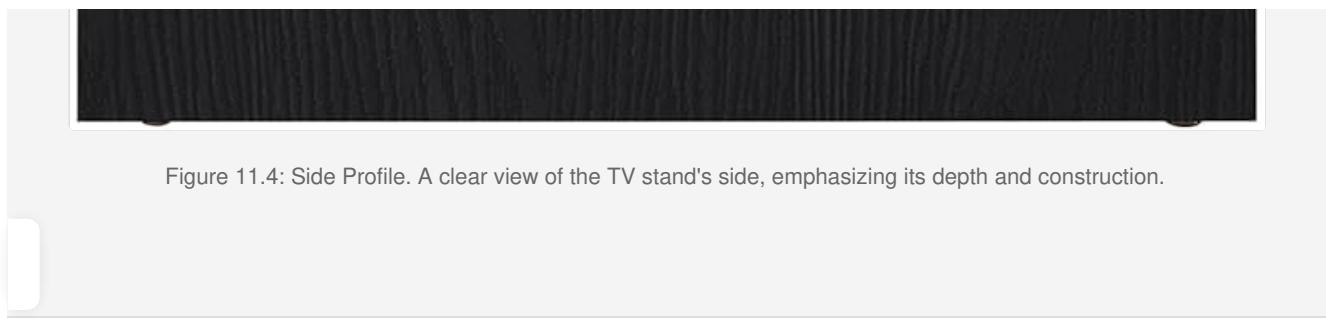


Figure 11.4: Side Profile. A clear view of the TV stand's side, emphasizing its depth and construction.

© 2023 Coaster Fine Furniture. All rights reserved.

Related Documents - 705803

 <p>ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE 705803 TV STAND</p>	<p><u>Coaster Fine Furniture 705803 TV Stand Assembly Instructions</u> Detailed assembly instructions for the Coaster Fine Furniture 705803 TV Stand, including parts identification, hardware list, and step-by-step guidance for a smooth assembly process.</p>
 <p>ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE 720130 TV Stand</p>	<p><u>Coaster Fine Furniture 720130 TV Stand Assembly Instructions and Safety Guide</u> Detailed assembly instructions, parts identification, and anti-tipping restraint installation guide for the Coaster Fine Furniture 720130 TV Stand. Includes product dimensions and important safety warnings.</p>
 <p>ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE 722833 TV STAND</p>	<p><u>Coaster Fine Furniture 722833 TV Stand Assembly Instructions</u> Detailed assembly instructions for the Coaster Fine Furniture 722833 TV Stand, including parts list, hardware identification, and step-by-step guidance for home assembly.</p>
 <p>ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE 720223 TV STAND</p>	<p><u>Coaster Fine Furniture 720223 TV Stand Assembly Instructions & Guide</u> Comprehensive assembly instructions for the Coaster Fine Furniture 720223 TV Stand. Includes parts identification, hardware list, step-by-step assembly, dimensions, and anti-tipping restraint installation.</p>

	<p><u>Coaster Fine Furniture 720224 Media Tower Assembly Instructions & Guide</u></p> <p>Detailed assembly instructions for the Coaster Fine Furniture 720224 Media Tower, including parts identification, hardware list, step-by-step guidance, dimensions, and safety information.</p>
	<p><u>Coaster Fine Furniture 609566 Push Back Recliner Assembly Guide</u></p> <p>Step-by-step assembly instructions and parts guide for the Coaster Fine Furniture 609566 Push Back Recliner. Includes dimensions, assembly tips, and important safety information.</p>