

[Manuals.plus](#) /

> [econtrollly](#) /

> econtrollly Replacement AC Remote Control User Manual

econtrollly DG11J1-05, DG11J1-01, DG11J1-72, DG11J1-04, APC09, APC12, APH12, AP-10CR1SEPS, AP-13HR1SEJS00, APC092236F, AP-08CR1SEJS,

econtrollly Replacement AC Remote Control User Manual

Model Compatibility: Hisense AC Units

INTRODUCTION

This user manual provides detailed instructions for the econtrollly replacement infrared remote control, designed for various Hisense Air Conditioner (AC) models. This remote control is pre-programmed and does not require additional setup for compatible units. It displays temperature exclusively in Celsius.





Image: Front view of the econtrollly replacement remote control, showing the LCD screen and button layout.

SETUP

1. Battery Installation

The remote control requires two AAA alkaline batteries (not included). Do not use rechargeable batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

2. Initial Use

This remote control is pre-programmed for compatible Hisense AC models. No additional programming or pairing is required. Simply insert the batteries and point the remote towards your AC unit to begin operation.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions. The remote displays temperature in Celsius only.



Image: Angled view of the remote control, highlighting the various function buttons.

Remote Control Button Functions

Button	Function
ON/OFF	Powers the AC unit on or off.

Button	Function
MODE	Cycles through operating modes (e.g., Cool, Dry, Fan, Heat, Auto).
FAN	Adjusts fan speed (e.g., Low, Medium, High, Auto).
▲ / ▼	Adjusts temperature settings up or down.
SWING	Controls the vertical swing of the air deflector.
SLEEP	Activates or deactivates sleep mode for quiet operation and energy saving.
SUPER	Activates rapid cooling or heating mode.
SMART	Automatically adjusts settings based on room conditions.
IFEEL	Measures temperature at the remote's location for more precise control.
DIMMER	Adjusts the brightness of the AC unit's display.
TIMER ON	Sets a timer for the AC unit to turn on.
TIMER OFF	Sets a timer for the AC unit to turn off.
CLOCK	Sets the current time on the remote control.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or the display fades. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the remote's surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and AC unit. Remote out of range.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity. Remove any obstructions. Move closer to the AC unit.

Problem	Possible Cause	Solution
Display is dim or blank.	Low battery power.	Replace batteries.
AC unit does not respond to commands.	Remote not compatible with AC model. AC unit power issue.	Verify your AC model is listed as compatible. Check if the AC unit is powered on and functioning correctly.

SPECIFICATIONS

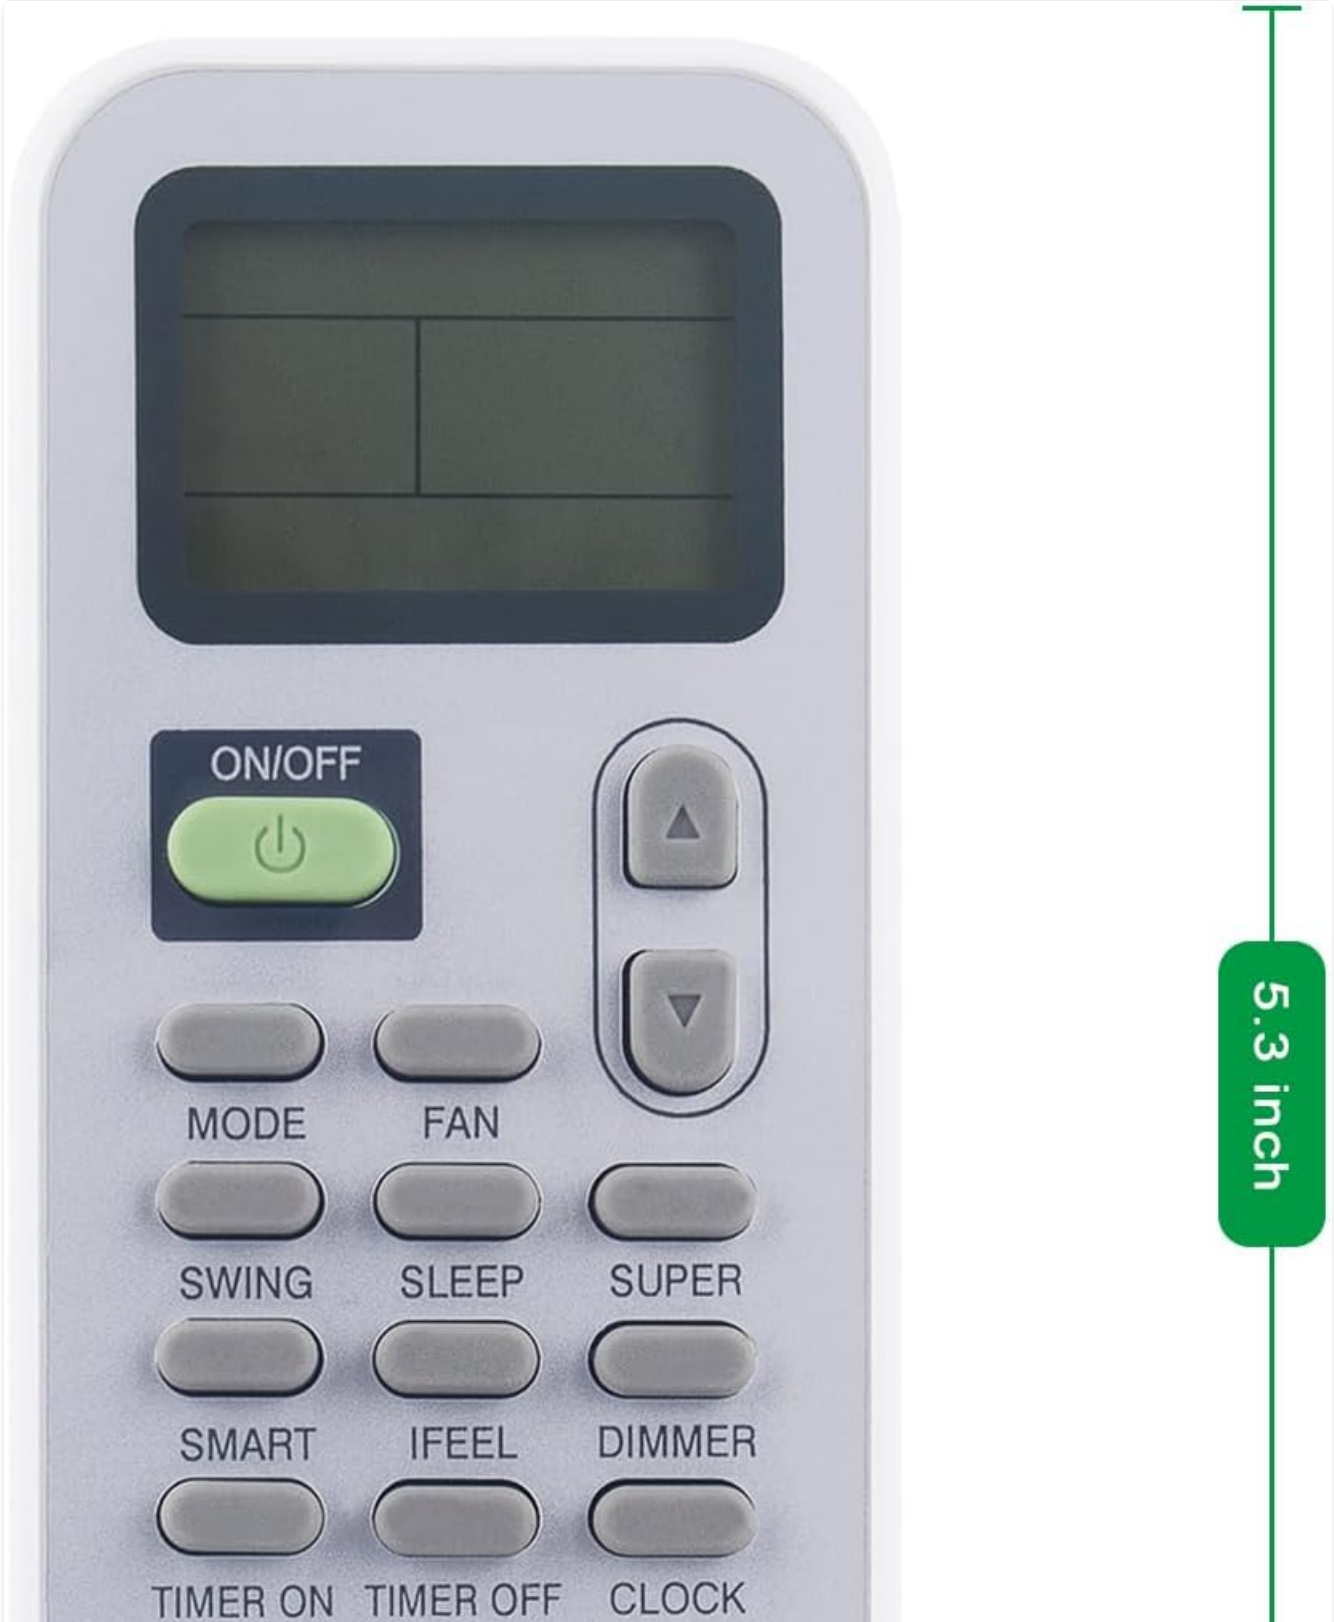




Image: Dimensions of the remote control, approximately 5.3 inches in length and 2.1 inches in width.

- **Brand:** econtrolly
- **Manufacturer:** Shengxingwang Factory
- **Product Type:** Electronics
- **Compatible Appliances:** Air Conditioner (Hisense AC models: DG11J1-05, DG11J1-01, DG11J1-72, DG11J1-04, APC09, APC12, APH12, AP-10CR1SEPS, AP-13HR1SEJS00, APC092236F, AP-08CR1SEJS, AP08CR1W, APC12F3010F, AP-10CR1SEJS, AP-14DR1SFJS2, AP-12CR1SEJS, AP-12CR1SEPS)
- **Special Features:** Pre-programmed
- **Number of Units:** 1
- **Batteries Included:** No
- **Battery Type:** AAA Alkaline (2 required)
- **Connection Technology:** Infrared (IR)
- **User Input:** Buttons
- **Rechargeable Battery:** No
- **Color:** White
- **Product Weight:** 50 g (approx. 0.11 lbs)
- **Product Dimensions:** 10 x 4 x 1.5 cm (approx. 3.9 x 1.6 x 0.6 inches)

WARRANTY AND SUPPORT

Standard product warranty information is not provided in this manual. For details regarding any manufacturer's warranty, please refer to the product packaging or contact the seller directly.

Extended warranty options may be available through your purchase platform. Please check the product listing on Amazon.com.br for more information on extended protection plans.

For technical support or further assistance, please contact the econtrolly customer service via the platform where the product was purchased.

© 2025 econtrolly. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question