

Dinosoo Wired 10ft Controller

Dinosoo Wired Controller User Manual

Model: Wired 10ft Controller

1. INITIAL SETUP

1.1 Connecting to PlayStation 5

To ensure proper functionality with your PlayStation 5 console, a specific setting adjustment is required. Follow these steps:

1. Turn on your PS5 console.
2. Navigate to the PS5 system settings.
3. Select **Accessories**.
4. Choose **Controller (General)**.
5. Select **Communication Method**.
6. Change the setting to **Use USB Cable**.

Please set the PS5 console to “Use USB Cable” before using the controller!

Setting path: Enter the PS5 system settings > Accessories > Controller (General) > Communication Metho > Use USB Cable



Image: Dinosoo wired controller connected to a PlayStation 5 console, emphasizing the critical setting change required on the PS5 to 'Use USB Cable' for proper functionality.

1.2 Connecting to PlayStation 4, PC, and MAC

The Dinosoo Wired Controller offers broad compatibility across multiple platforms. Simply connect the controller's 10ft USB cable to an available USB port on your PlayStation 4, PC, or MAC. The controller is designed for plug-and-play operation on these systems.

WIDE COMPATIBILITY JUST PLUG & PLAY

No Space Constraint with the 10 ft Cable



Image: This image illustrates the broad compatibility of the Dinosoo wired controller, showing icons for PlayStation 5, PlayStation 4, PC, Android, and Steam, highlighting its plug-and-play functionality.

2. OPERATING INSTRUCTIONS

2.1 Controller Layout

Familiarize yourself with the various buttons and features of your Dinosoo Wired Controller:

ANTI-SLIP GRIPS

The controller grips features laser-etched fine carving providing comfortable and sweat-resistant grip.



Image: A detailed diagram of the Dinosoo Wired Controller, with labels for the Share button, Touchpad, Options button, PS button, Left Stick, Right Stick, D-pad, Turbo button, Headphone Jack, Type-C Charging Port, L1/L2/R1/R2 triggers, and the programmable PR/PL buttons.

2.2 Programmable Rear Buttons (PL/PR)

The controller features two mappable advanced game buttons (PL/PR) on the rear, allowing you to program complex operations for quick execution.

1. Press the **SET** button located on the underside of the controller. The controller will vibrate.
2. Press the button you wish to map (e.g., R1, L3, etc.).
3. Press either the **PL** or **PR** button on the rear to assign the mapped function.
4. Press the **SET** button again to save the mapping. The controller will vibrate to confirm.

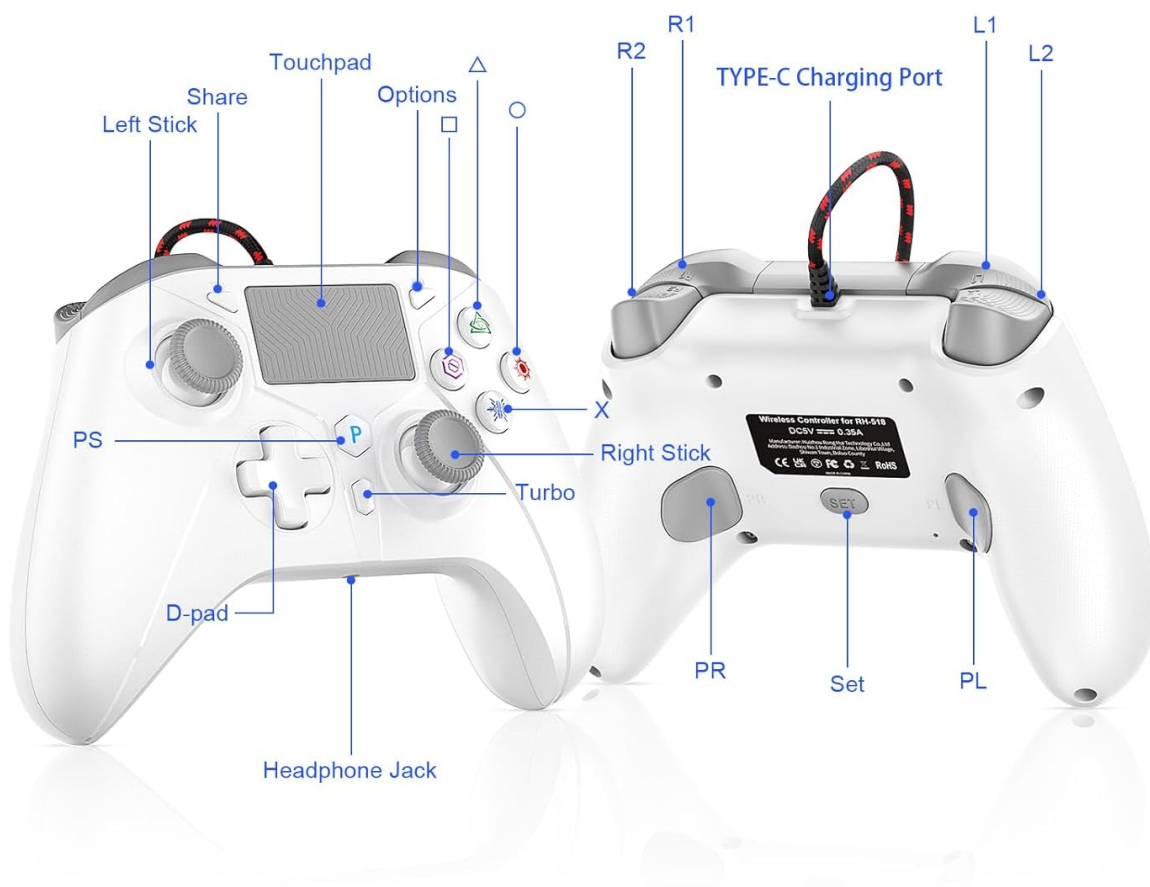


Image: This image displays the underside of the controller, highlighting the two programmable PL/PR keys and the 'SET' button, which allow for easy customization of complex operations.

2.3 Turbo Function

The **TURBO** button allows you to toggle between different combo settings for rapid, repeated inputs, enhancing your gaming experience.



HALL EFFECT TRIGGERS

Solves the Problems of Excessive Friction and Linear Trigger Jamming, Providing a Smoother Feel.



ACCURATE WITHOUT DRIFT

500HZ return rate with ultra-low latency Transmission delay is reduced by 30 times



PROVIDE AN IMMERSIVE EXPERIENCE


making you feel as if you are in a real game scene

Image: A detailed diagram showcasing the Hall Effect triggers within the controller, designed to prevent friction and jamming for smoother operation.

Wireless Controller for RH-518

DC5V \equiv 0.35A

Manufacturer: Huizhou Rong Hui Technology Co., Ltd
Address: Dazhou No.1 Industrial Zone, Liboshui Village,
Shiwan Town, Boluo County

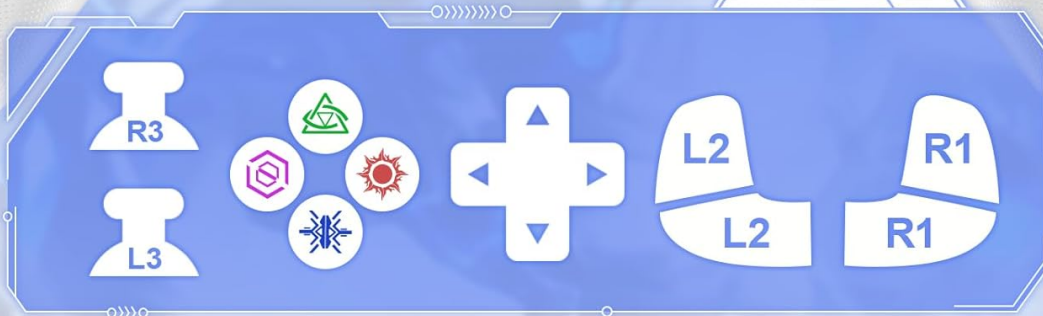

2 PROGRAMMING KEYS

Easily Combination, Simplifying Complex Operations and Gaining an Edge in Battles.

Image: This image highlights the Hall Effect joystick technology, ensuring high sensitivity and accuracy without drift, with a 500Hz return rate.



Hall Linear Trigger

Added texture for increased accuracy so you never miss your shot

Image: An illustration of the Hall Linear Trigger, emphasizing its added texture for increased accuracy and precise input.

New Joystick

The newly designed joystick provides better accuracy and reduces errors.



Image: This image details the new joystick design, engineered for improved accuracy and reduced errors during gameplay.

2.5 Vibration Feedback

The controller features a lightweight vibration system designed to provide a better sense of control and realism, offering simulated in-game action and environmental feedback.



Lifelike vibrations

Experience simulated in-game action and environments

Image: An image depicting the controller's vibration motors, which provide realistic haptic feedback for an immersive gaming experience.

2.6 3.5mm Audio Jack

The integrated 3.5mm audio jack provides stereo headset output sound and chat functionality, allowing for immersive audio and communication during gameplay.

2.7 Anti-Slip Grips

The controller's grips feature a laser-etched carving, providing a comfortable and sweat-resistant hold for extended gaming sessions.

3. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your Dinosoo Wired Controller, follow these care guidelines:

- Keep the controller clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the controller or subjecting it to strong impacts.
- Do not attempt to disassemble the controller, as this may void any potential warranty and cause damage.

4. TROUBLESHOOTING

4.1 Controller Not Connecting to PS5

If your controller is not recognized by your PlayStation 5, please re-verify the PS5 system settings:

- Go to **PS5 system settings > Accessories > Controller (General) > Communication Method > Use USB Cable**.
- Ensure the USB cable is securely connected to both the controller and the PS5 console.
- Try connecting the controller to a different USB port on the PS5.

4.2 Button or Joystick Issues

If you experience unresponsive buttons or joystick drift:

- Ensure the controller's cable is not damaged and is securely connected.
- Restart your console or PC.
- For programmable buttons, ensure they are correctly mapped as per the instructions in Section 2.2.
- Clean around the buttons and joysticks with a soft, dry cloth to remove any debris.

5. PRODUCT SPECIFICATIONS

- **Brand:** Dinosoo
- **Model:** Wired 10ft Controller
- **Compatible Devices:** PlayStation 5, PlayStation 4, PC, MAC
- **Connectivity Technology:** Wired (10ft USB Cable)
- **Controller Type:** Gamepad
- **Button Quantity:** 21
- **Special Features:** Hall Effect Joysticks, Hall Effect Triggers, Turbo Function, Programmable Rear Buttons (PL/PR), Multi-Touch Pad, 3.5mm Audio Jack, Vibration Feedback, Anti-Slip Grips
- **Item Weight:** 0.35 Kilograms

