



[Manuals.plus](#) /

> [Samsung](#) /

> SAMSUNG Galaxy S25 SM-S931B/DS 256GB 12GB RAM AI Smartphone, Factory Unlocked, Global Model - Silver Shadow User Manual

Samsung S931B

SAMSUNG Galaxy S25 SM-S931B/DS User Manual

Model: SM-S931B/DS | Brand: Samsung

1. INTRODUCTION

Welcome to the user manual for your new SAMSUNG Galaxy S25 SM-S931B/DS AI Smartphone. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. Please read this manual thoroughly to ensure optimal performance and longevity of your smartphone.



Figure 1.1: Front and back view of the SAMSUNG Galaxy S25 smartphone.

2. GETTING STARTED: SETUP

2.1 Unboxing Your Device

Upon opening the package, ensure all components are present:

- SAMSUNG Galaxy S25 Smartphone
- USB-C Cable
- SIM Ejection Pin
- Quick Start Guide

2.2 SIM Card Installation

Your Galaxy S25 uses a Nano-SIM card. Follow these steps to install it:

1. Locate the SIM card tray on the side of your device.
2. Insert the SIM ejection pin into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano-SIM card(s) into the tray with the gold contacts facing down. Ensure it is seated correctly.
4. Gently push the tray back into the slot until it clicks into place.



Figure 2.1: Front view of the Galaxy S25, indicating the general area for the SIM tray on the side.

2.3 Initial Power On and Setup

Press and hold the Power/Side key until the Samsung logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account sign-in, and data transfer.

2.4 Charging the Device

Connect the USB-C cable to the charging port at the bottom of your phone and the other end to a compatible power adapter. A charging indicator will appear on the screen. For optimal battery life, use Samsung-approved chargers and cables.

3. OPERATING YOUR GALAXY S25

3.1 Basic Navigation

Your Galaxy S25 features an intuitive touchscreen interface. Use gestures like tap, swipe, pinch-to-zoom, and long-press to navigate through apps and menus.

3.2 Calls and Messaging

To make a call, open the Phone app and dial the number or select a contact. For messaging, open the Messages app to send and receive SMS/MMS.

3.3 Camera Features

The Galaxy S25 is equipped with advanced camera capabilities. Open the Camera app to capture photos and videos. Explore various modes like Portrait, Night, and Pro for enhanced photography.



Figure 3.1: Back view of the Galaxy S25, showcasing the triple camera system.

3.4 Connectivity (Wi-Fi, Bluetooth)

Access Wi-Fi settings from the Quick Panel or Settings app to connect to wireless networks. Bluetooth allows you to connect to headphones, speakers, and other compatible devices.

3.5 AI Features

Leverage the integrated AI features for enhanced productivity and creativity. These may include AI-powered photo editing, real-time translation, and intelligent search functionalities. Refer to the on-device tips for specific AI capabilities.

4. CARE AND MAINTENANCE

4.1 Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid abrasive materials or harsh chemicals. If necessary, slightly dampen the cloth with water.

4.2 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to **Settings > Software update > Download and install**

4.3 Battery Optimization

To maximize battery life, adjust screen brightness, disable unnecessary background apps, and use power-saving modes when needed. Avoid extreme temperatures.

5. TROUBLESHOOTING COMMON ISSUES

This section addresses common issues you might encounter with your Galaxy S25.

Issue	Solution
Device won't turn on	Ensure the battery is charged. Press and hold the Power/Side key for at least 10 seconds to force restart.
Apps are crashing or freezing	Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). If the issue persists, reinstall the app or perform a factory reset (backup data first).
No network signal	Check if the SIM card is properly inserted. Restart the device. Verify network settings (Settings > Connections > Mobile networks).
Battery drains quickly	Reduce screen brightness, disable unused features (Wi-Fi, Bluetooth, GPS), and close background apps. Check battery usage in Settings to identify power-hungry apps.

6. TECHNICAL SPECIFICATIONS

Key specifications for the SAMSUNG Galaxy S25 SM-S931B/DS:

Feature	Detail
Model Number	SM-S931B/DS
Operating System	Android 15
Display Size	6.2 Inches
Resolution	2340 x 1080

Feature	Detail
RAM	12 GB
Memory Storage Capacity	256 GB
CPU Model	Snapdragon
CPU Speed	4.47 GHz
Battery Capacity	4000 mAh (4E+3 Milliamp Hours)
Connectivity	2G/3G/4G/5G
Item Weight	11.3 ounces
Color	Silver

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Please note that this device is a global model and **does not include a US warranty**, as some manufacturers do not honor warranties for international items. For warranty details specific to your region, please consult the documentation provided with your purchase or visit the official Samsung website for your country.

7.2 Customer Support

For further assistance, technical support, or service inquiries, please visit the official Samsung support website or contact their customer service hotline in your region. You can find contact information and FAQs on the Samsung support portal.

Official Samsung Support: <https://www.samsung.com/us/support/>