

FanttikOutdoor Instant Cabin Tent 11' x 9' x 72"

FanttikOutdoor Instant Cabin Tent (11' x 9' x 72") Instruction Manual

Your perfect outdoor home.

1. PRODUCT OVERVIEW

Thank you for choosing the FanttikOutdoor Instant Cabin Tent. This manual provides essential information for the safe and efficient use of your new tent. Designed for quick setup and durability, this tent offers a spacious and comfortable shelter for your outdoor adventures.



Image: The FanttikOutdoor Instant Cabin Tent, 11' x 9' x 72", showcasing its spacious design and key features like water resistance, 1-year warranty, and venting system.

2. SAFETY INSTRUCTIONS

- Keep all flame and heat sources away from this tent fabric. The tent is made of flame-resistant fabric, but it is not

fireproof.

- Do not use gas-burning devices, heaters, or cooking equipment inside the tent.
- Ensure proper ventilation to prevent suffocation.
- Do not set up the tent near open flames, steep slopes, or under trees with dead branches.
- Always secure the tent with stakes and guy lines, especially in windy conditions.
- Avoid setting up the tent in areas prone to flooding.

3. COMPONENTS LIST

Verify all components are present before assembly:

- Inner Tent and Frame (x1)
- Carry Bag (x1)
- Rainfly (x1)
- Hanging Organizer (x1)
- Welcome Mat (x1)
- Peg Bag (x1)
- Stakes (x12)

PACKAGING DETAILS



1 x Instant Cabin Tent



1 x Carry Bag



1 x Peg Bag




1 x Storage Bag



1 x Welcome Mat



1 x Rainfly

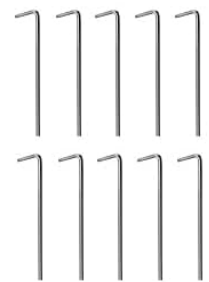

10 x Stake

Image: A visual representation of the FanttikOutdoor Instant Cabin Tent's packaging details, showing the tent, carry bag, peg bag, storage bag, welcome mat, rainfly, and stakes.

4. SETUP GUIDE

The FanttikOutdoor Instant Cabin Tent is designed for a quick and easy setup, often achievable in under 60 seconds with two people.

Step-by-Step Setup:

1. **Unpack the Tent:** Remove the tent from its carry bag and lay it flat on your chosen campsite.
2. **Extend Leg Poles:** Locate the pre-attached leg poles. Extend each pole until it clicks securely into place. This will raise the tent structure.
3. **Extend Roof Poles:** Push up on the central hub of the roof until the roof poles fully extend and lock.
4. **Secure the Tent:** Use the provided stakes to firmly anchor the tent corners and guy lines to the ground.
5. **Attach Welcome Mat:** Secure the welcome mat to the tent entrance using the attached clips.
6. **Install Rainfly (Optional but Recommended):** Drape the rainfly over the tent, aligning it with the tent's structure. Secure the rainfly to the tent poles and stake down any additional guy lines for enhanced weather protection.

-INSTANT SET-UP-
60
SECONDS



INSTANT SET-UP IN 60S

Image: A family setting up the FanttikOutdoor Instant Cabin Tent, highlighting the quick 60-second setup feature.

Video Guide:

Your browser does not support the video tag.

Video: This video demonstrates the quick and easy setup process of the FanttikOutdoor Instant Cabin Tent, showing how to extend the poles and secure the tent in just a few minutes.

5. FEATURES AND OPERATION

- **Spacious Interior:** Measures 11' x 9' x 72" (L x W x H), comfortably fitting a queen air mattress and providing ample headroom.
- **60-Second Setup:** Pre-installed poles and seamless construction allow for rapid deployment.
- **Windproof & Waterproof:** Constructed with high-quality waterproof fabric, strong camping pegs, and adjustable ropes to withstand harsh weather.
- **Enhanced Ventilation:** Features mesh windows on all 4 sides, floor vents, and a mesh screen ceiling for optimal airflow and stargazing.
- **High-Quality Materials:** Equipped with top-of-the-line SBS zippers for smooth operation, B3 mesh yarn for longevity, and a sturdy carbon frame.
- **Power Cord Entrance:** A dedicated port allows for easy connection to an external power source.
- **Mesh Pockets:** Internal mesh pockets provide convenient storage for small items.



ADVANCED VENTING SYSTEM

Image: An interior view of the FanttikOutdoor Instant Cabin Tent, highlighting its advanced venting system with mesh windows and ceiling for improved airflow.



Interior Organization



Cable Port



Built-in Storage Bag



Easy-Pull Zipper

WEATHER PROTECTION

Image: A collage showing various features of the FanttikOutdoor tent, including interior organization pockets, a cable port for electrical access, and easy-pull zippers for convenience.

6. DISASSEMBLY GUIDE

Packing up your FanttikOutdoor Instant Cabin Tent is as simple as setting it up.

Step-by-Step Disassembly:

1. **Remove Rainfly:** If installed, detach and fold the rainfly.
2. **Remove Stakes and Guy Lines:** Unstake all tent corners and guy lines from the ground.
3. **Collapse Poles:** Press the release buttons on each leg pole and gently push them inwards to collapse. Do the same for the roof poles.
4. **Fold the Tent:** Gather the tent fabric and fold it neatly towards the center, ensuring all air is expelled.
5. **Roll and Pack:** Roll the folded tent tightly, starting from one end. Place it back into the carry bag along with all accessories.

Video Guide:

Your browser does not support the video tag.

Video: This video demonstrates the quick and easy setup and takedown process of the FanttikOutdoor Instant Cabin Tent, showing how to extend and collapse the poles and pack the tent.

7. MAINTENANCE

- **Cleaning:** Clean the tent with a soft brush or sponge and mild soap. Do not use harsh detergents or washing machines.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and odor.
- **Storage:** Store the tent in a cool, dry place away from direct sunlight and extreme temperatures.
- **Zipper Care:** Keep zippers clean and lubricated. Avoid forcing zippers if they snag.

8. TROUBLESHOOTING

- **Tent Not Standing Upright:** Ensure all poles are fully extended and locked into place. Check that the tent is properly staked.
- **Water Leakage:** Verify the rainfly is correctly installed and all seams are sealed. Ensure the tent is pitched on level ground to prevent water pooling.
- **Condensation Inside:** Increase ventilation by opening mesh windows and vents. Condensation is natural and can be reduced with proper airflow.
- **Stuck Zippers:** Apply a small amount of zipper lubricant or wax. Gently work the zipper back and forth.

9. SPECIFICATIONS

Attribute	Value
Brand	FanttikOutdoor
Product Dimensions	132"L x 108"W x 72"H (11'L x 9'W x 6'H)
Item Weight	20.28 Pounds
Occupancy	6 Person
Seasons	3 Season
Water Resistance Technology	1500mm

Material

Polyester

10. WARRANTY & SUPPORT

FanttikOutdoor provides a 1-year limited warranty from the date of purchase, covering defects in materials or workmanship. This warranty does not cover damage caused by misuse, accidents, or normal wear and tear.

For warranty claims or technical support, please contact FanttikOutdoor customer service through their official website or the retailer where the product was purchased. Please have your proof of purchase and product model information ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DV49LFZ2>

More documents and user manuals: <https://manuals.plus/>