

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lauben](#) /

› [Lauben Rice Cooker Square 1000WB User Manual](#)

Lauben 1000WB

Lauben Rice Cooker Square 1000WB User Manual

Model: 1000WB | Brand: Lauben

INTRODUCTION

Thank you for purchasing the Lauben Rice Cooker Square 1000WB. This appliance is designed for efficient and convenient preparation of rice, porridge, soups, and legumes. Its compact design and simple operation make it an ideal addition to any kitchen. Please read this manual carefully before use to ensure safe and optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control

to “off”, then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- This appliance is for household use only.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Lauben Rice Cooker.



This image displays the Lauben Rice Cooker Square 1000WB, a compact white rice cooker with black accents. It features a transparent glass lid, black handles on the sides, and a control panel at the front with a single switch and two LED indicator lights: 'WARM' (orange) and 'COOK' (red). The brand name 'Lauben' is visible on the front casing.

Included Components:

- Outer Shell (Main Unit)
- Removable Inner Container (Non-stick coated)
- Tempered Glass Lid with Valve
- Measuring Cup
- Scoop/Spoon

SETUP

Before first use, please follow these steps:

1. Unpack all components and remove any packaging materials.
2. Wash the removable inner container, glass lid, measuring cup, and scoop with warm, soapy water.

Rinse thoroughly and dry completely.

3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. Place the rice cooker on a stable, flat, heat-resistant surface, away from walls or cabinets to allow for proper ventilation.
5. Ensure the power cord is not tangled or obstructed.

OPERATING INSTRUCTIONS

The Lauben Rice Cooker features simple one-button operation for ease of use.

Cooking Rice:

1. Measure the desired amount of rice using the provided measuring cup. Rinse the rice thoroughly under cold water until the water runs clear.
2. Place the rinsed rice into the removable inner container.
3. Add the appropriate amount of water. A common ratio is 1 cup of rice to 1.5-2 cups of water, but this may vary depending on the type of rice. Refer to rice packaging for specific recommendations.
4. Place the inner container into the main unit, ensuring it is seated properly.
5. Cover the rice cooker with the tempered glass lid. Ensure the lid is securely in place.
6. Plug the power cord into a suitable electrical outlet (220V). The 'WARM' indicator light may illuminate.
7. Press the control switch down to the 'COOK' position. The 'COOK' indicator light will illuminate, indicating that cooking has started.
8. Once cooking is complete, the rice cooker will automatically switch to the 'WARM' function, and the 'COOK' light will turn off, while the 'WARM' light will remain on.
9. Allow the rice to rest on 'WARM' for 5-10 minutes after cooking for best results.
10. Unplug the rice cooker from the outlet when serving is complete or if the 'WARM' function is no longer needed.

Keep Warm Function:

The rice cooker automatically switches to the 'WARM' function after cooking. This function keeps the rice warm and ready to serve without overcooking. The 'WARM' function can be used for extended periods, but for optimal taste and texture, it is recommended not to keep rice warm for more than a few hours.

Preparing Other Foods:

The rice cooker can also be used to prepare other foods such as:

- **Porridge:** Use appropriate grain-to-water ratios as per recipe.
- **Soups:** Add ingredients and water, then set to 'COOK'. Monitor progress.
- **Legumes:** Pre-soak as required, then cook with appropriate water volume.

Always ensure there is sufficient liquid to prevent burning and that the lid is properly placed to allow steam to escape through the valve.

CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your rice cooker.

Cleaning:

- Always unplug the rice cooker and allow it to cool completely before cleaning.
- **Inner Container, Lid, Measuring Cup, and Scoop:** These parts are dishwasher safe or can be hand washed with warm, soapy water. The non-stick coating of the inner container makes cleaning easy; avoid abrasive cleaners or metal scouring pads that could damage the surface.
- **Outer Shell:** Wipe the exterior with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
- Ensure all parts are thoroughly dry before reassembling or storing.

Storage:

Store the rice cooker in a cool, dry place. Ensure the inner container and lid are placed correctly inside the main unit for compact storage.

TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Rice is too hard/undercooked	Not enough water; lid not sealed; power interruption.	Add more water next time; ensure lid is secure; check power connection.
Rice is too soft/mushy	Too much water.	Reduce water amount next time.
Rice sticks to the bottom	Not enough water; inner container not clean; non-stick coating damaged.	Ensure proper water ratio; clean inner container thoroughly; if coating is damaged, consider replacement.
Cooker does not turn on	Not plugged in; power outage; faulty outlet.	Check power cord connection; verify power supply; try a different outlet.
Steam escaping excessively from lid	Lid not properly seated; lid valve blocked.	Ensure lid is securely placed; check and clear any blockages in the steam valve.

SPECIFICATIONS

Technical details for the Lauben Rice Cooker Square 1000WB:

Model Name	Lauben Rice Cooker Square 1000WB
Item Model Number	1000WB
Brand	Lauben
Capacity	1 Liter

Wattage	400 watts
Voltage	220 Volts
Power Source	Corded Electric
Product Dimensions	8.66"D x 11.81"W x 9.84"H
Item Weight	2050 Grams (4.52 pounds)
Color	White
Lid Material	Glass
Product Care Instructions	Dishwasher Safe (removable parts), Hand Wash

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact Lauben customer service. Keep your purchase receipt as proof of purchase. For further assistance, please visit the official Lauben website or contact your local distributor.

© 2025 Lauben. All rights reserved.

Related Documents - 1000WB

 <p>LAUBEN LOW SUGAR RICE COOKER 3000AT LAUBEN LOW SUGAR RICE COOKER 3000WT</p>	<p>Lauben Low Sugar Rice Cooker 3000AT/3000WT User Manual</p> <p>Comprehensive user manual for the Lauben Low Sugar Rice Cooker 3000AT and 3000WT, covering safety instructions, product overview, operating procedures, cleaning, maintenance, and troubleshooting.</p>
 <p>5 zdravých a jednoduchých receptů k Lauben Low Sugar Rice Cooker 1500</p>	<p>Lauben Low Sugar Rice Cooker 1500: 5 Healthy & Simple Recipes</p> <p>Explore five easy and healthy recipes designed for the Lauben Low Sugar Rice Cooker 1500, including Oatmeal Porridge, Hong Kong Clay Pot Rice, Spanish Chicken with Rice, Yellow Pea Soup, and Vegetable Thai Curry.</p>

	<p>Lauben Low Sugar Rice Cooker 1500AT/1500WT Benutzerhandbuch</p> <p>Umfassendes Benutzerhandbuch für den Lauben Low Sugar Rice Cooker 1500AT und 1500WT. Bietet detaillierte Anleitungen, Sicherheitshinweise und Bedienungshilfen in mehreren Sprachen.</p>
	<p>Lauben Low Sugar Rice Cooker 1500AT/1500WT User Manual</p> <p>Comprehensive user manual for the Lauben Low Sugar Rice Cooker models 1500AT and 1500WT, covering safety instructions, product features, operation, maintenance, and troubleshooting.</p>
	<p>Lauben Low Sugar Rice Cooker 1500AT & 1500WT: User Manual & Operating Guide</p> <p>Get the official user manual for Lauben Low Sugar Rice Cooker models 1500AT and 1500WT. This guide covers specifications, safety, operation, maintenance, and troubleshooting for healthier rice cooking. Visit lauben.com for more.</p>
	<p>Lauben Slow Cooker 3500SB User Manual</p> <p>Comprehensive user manual for the Lauben Slow Cooker 3500SB, providing instructions, safety guidelines, and tips for slow cooking. Includes specifications and maintenance information.</p>