

FLEXISPOT 63x55"Top (3-Legged) Black Frame + Rustic Brown Top

FLEXISPOT L Shaped Standing Desk User Manual

Model: 63x55"Top (3-Legged) Black Frame + Rustic Brown Top

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your FLEXISPOT L Shaped Standing Desk. Please read this manual thoroughly before assembly and use to ensure safe and efficient operation. This desk is designed to provide a versatile and ergonomic workspace, allowing seamless transitions between sitting and standing positions.

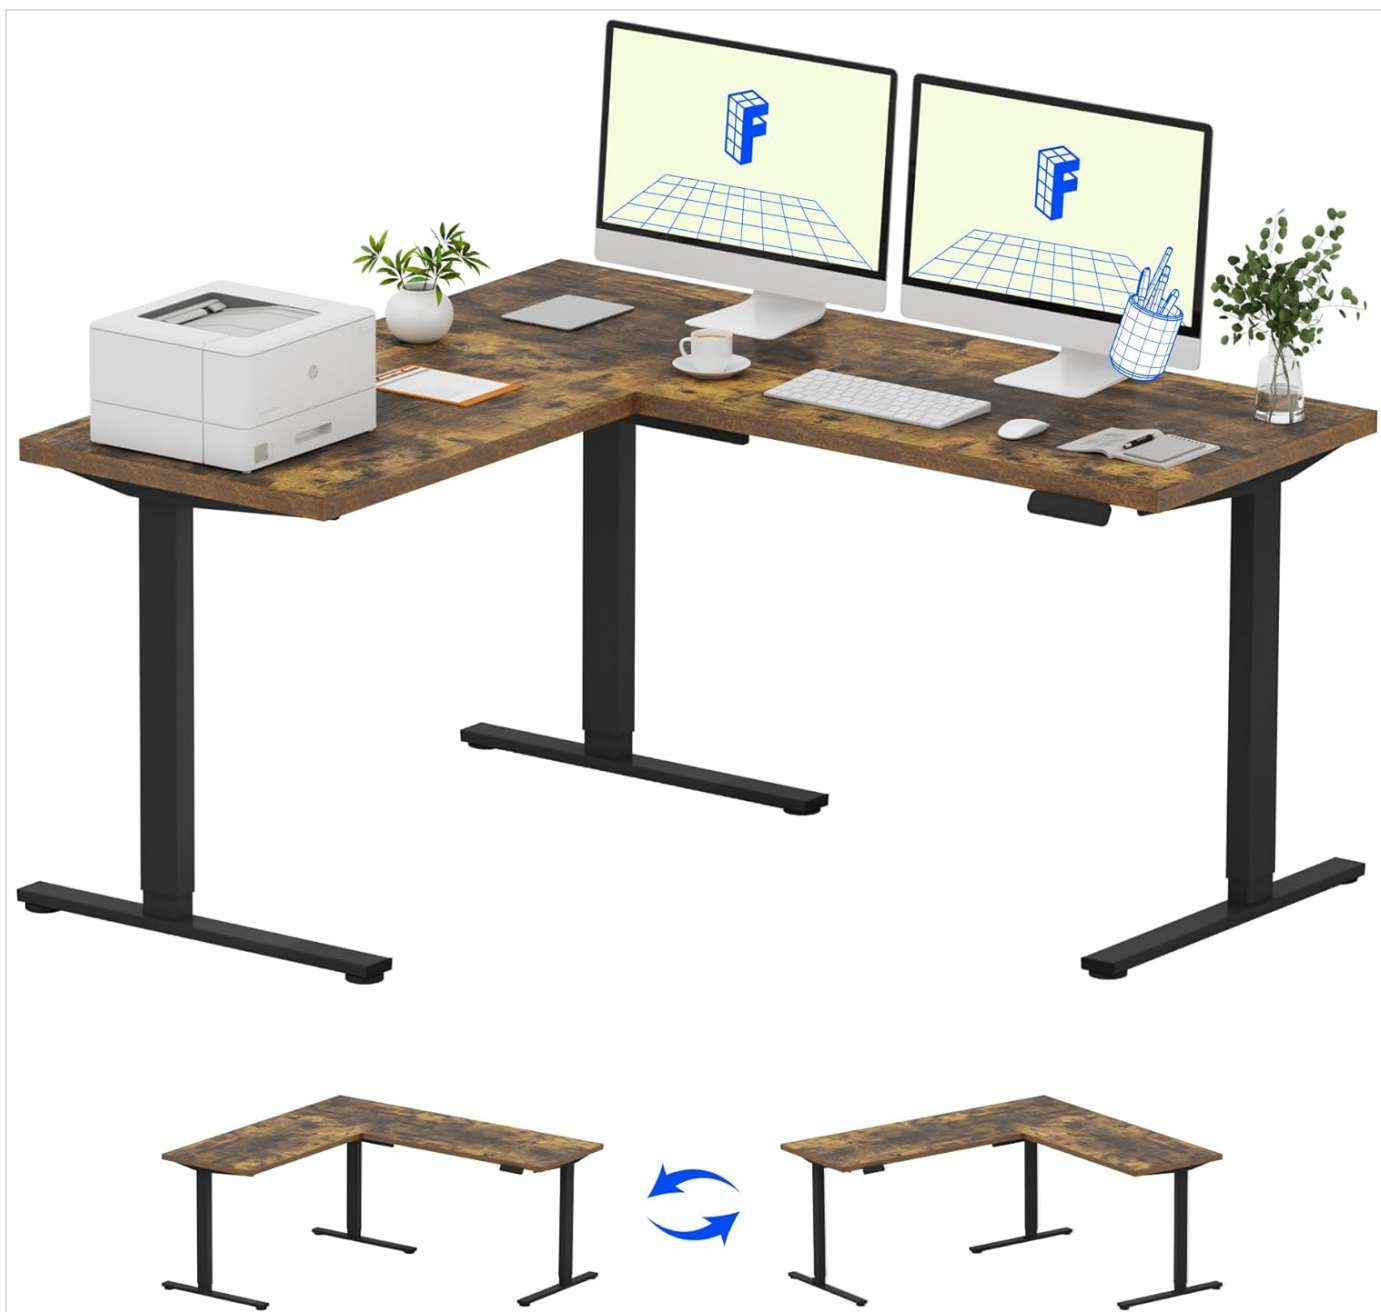 


Image: The FLEXISPOT L Shaped Standing Desk in a home office setting, showcasing its spacious design and ability to accommodate multiple devices like monitors and a printer.

SAFETY INFORMATION

Adherence to the following safety guidelines is crucial for preventing injury and damage to the desk:

- Always assemble the desk on a stable, level surface.
- Keep the desk away from heat sources.
- Do not place heavy objects on the desk when it is in the raised position beyond the specified weight capacity.
- Always use the desk with caution and follow all instructions provided in this manual.
- Ensure no obstructions are present in the desk's path during height adjustments to prevent collision.

ANTI-COLLISION

Rebound immediately



Long-lasting



Environmentally
Friendly



Heavy-duty

Image: Illustration of the desk's anti-collision feature, showing it rebounding when an object is detected underneath, ensuring safety during height adjustments.

PRODUCT FEATURES

- **Spacious Desktop:** The expansive L-shaped work surface is seamlessly crafted with environmentally sourced splice board, measuring 63.0" x 55.1". It provides ample space for ongoing projects and office supplies.
- **Versatile Orientation:** This height-adjustable desk features a wider desktop section that can be positioned on either the left or right side, allowing you to customize the layout to best fit your space.
- **Solid Construction:** The industrial-grade steel frame and solid desktop (1") combine to support a maximum weight capacity of up to 220 lbs, effortlessly handling your ideal work setup.
- **Customizable LED Control Panel:** The LED control pad allows you to customize the desk height with 4 different memory settings, enabling easy switching between your preferred standing and sitting positions.

FLEXIBLE RIGHT/LEFT ORIENTATION

L-shaped standing desk can be left-sided or right-sided, allowing for even more flexibility



Image: An overhead view demonstrating the flexible right/left orientation of the L-shaped standing desk, highlighting its adaptability to various room layouts.

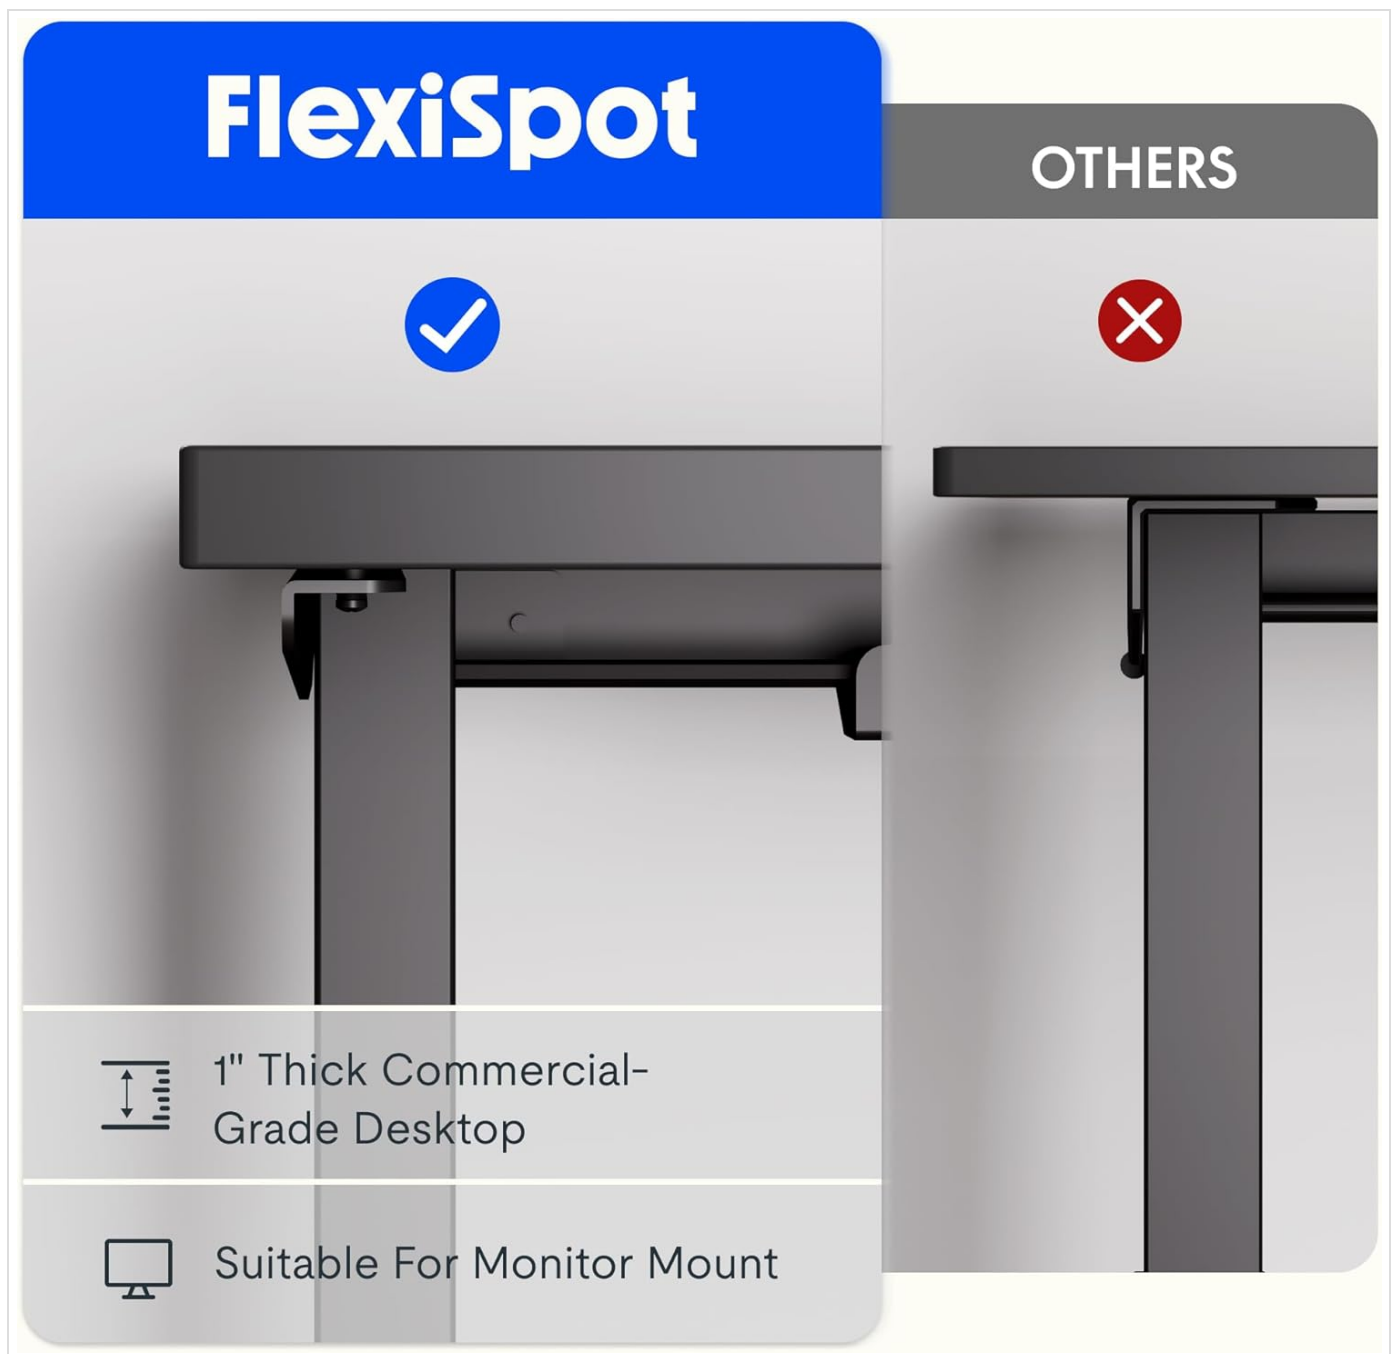 


Image: A close-up view emphasizing the 1-inch thick commercial-grade desktop, indicating durability and suitability for monitor mounts.

SETUP AND ASSEMBLY

Your FLEXISPOT L Shaped Standing Desk ships in two separate packages, which may arrive on different days. Please ensure you have received both packages before beginning assembly.



Image: Visual representation indicating that the desk components are shipped in two separate boxes, which may arrive at different times.

Before You Begin:

- Clear a spacious area for assembly.
- Unpack all components and verify against the parts list (refer to the included assembly guide for a detailed list).
- It is recommended to have two people for assembly due to the weight and size of the components.
- Ensure all necessary tools are available. While some basic tools may be included, additional tools like a drill might be helpful for pre-drilled holes that may be missing (as noted in some customer reviews).

Assembly Steps:

1. Assemble the desk frame according to the provided assembly instructions. Pay close attention to the orientation of the L-shaped sections, as they can be configured for left or right-sided use.
2. Attach the desktop sections to the assembled frame. Ensure all screws are tightened securely.
3. Connect the motor and control panel cables as indicated in the assembly guide.
4. Carefully flip the desk upright with assistance.

5. Plug the desk into a power outlet.

OPERATING INSTRUCTIONS

The FLEXISPOT L Shaped Standing Desk features an intuitive LED control panel for easy height adjustment and memory settings.



Image: A detailed view of the smart control panel, showing the LED display, up/down buttons, four memory preset buttons, and the anti-collision indicator.

Adjusting Desk Height:

- Use the **Up (▲)** and **Down (▼)** arrow buttons on the control panel to manually adjust the desk height. The current height will be displayed on the LED screen.
- The desk has a height range from 28.3 inches (minimum) to 45.9 inches (maximum).

LARGE ADJUSTABLE RANGE

Perfect size for your home office



Image: The desk demonstrating its large adjustable height range, from a minimum of 28.3 inches to a maximum of 45.9 inches, suitable for various user preferences.

Setting Memory Presets:

The control panel allows you to save up to four preferred height settings:

1. Adjust the desk to your desired height using the Up/Down buttons.
2. Press the "M" button (or similar memory set button, if present). The display may flash.
3. Immediately press one of the numbered memory buttons (1, 2, 3, or 4) to save the current height to that preset.
4. To recall a saved height, simply press the corresponding numbered memory button. The desk will automatically move to the saved position.

Anti-Collision Feature:

The desk is equipped with an anti-collision system. If the desk encounters an obstruction during height adjustment, it will automatically stop and rebound slightly to prevent damage. Ensure the area around and under the desk is clear before adjusting height.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your FLEXISPOT L Shaped Standing Desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish. For the rustic brown top, a mild cleaner can be used for smudges.
- **Cable Management:** Periodically check and organize cables to prevent tangling or interference with the desk's movement. The desk includes some small cable management tools.
- **Motor and Frame:** The motor is designed for quiet and smooth operation. No specific user maintenance is required for the motor or frame. If you notice unusual noises or movement, refer to the troubleshooting section or contact customer support.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 220 lbs. Distribute weight evenly across the desktop.

TROUBLESHOOTING

If you encounter issues with your desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk does not move or respond to controls.	Power disconnected, motor cable loose, control panel issue.	Check if the power cord is securely plugged into the wall outlet and the desk. Verify all motor and control panel cables are firmly connected. Try unplugging the desk for 30 seconds and plugging it back in to reset.
Desk stops during adjustment or moves erratically.	Obstruction detected (anti-collision activated), uneven weight distribution, motor overload.	Check for any objects obstructing the desk's movement path. Remove them. Ensure weight is evenly distributed on the desktop and does not exceed 220 lbs. Allow the motor to cool down if it has been used continuously for an extended period.
Memory presets are not saving or recalling correctly.	Incorrect saving procedure, temporary glitch.	Review the "Setting Memory Presets" section in this manual and repeat the steps carefully. Perform a power cycle (unplug and replug) to reset the control panel.

If the problem persists after attempting these solutions, please contact FLEXISPOT customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model	63x55"Top (3-Legged)
Product Dimensions (D x W x H)	55.1"D x 63"W x 45.9"H
Color	Black Frame + Rustic Brown Top
Style	Modern

Feature	Detail
Base Material	Alloy Steel
Top Material Type	Wood
Finish Type	Polished
Special Feature	Corded
Furniture Finish	Walnut
UPC	840460438421
Item Type Name	standing desk
Minimum Height	28.3 Inches
Maximum Height	45.9 Inches
Maximum Weight Recommendation	220 Pounds
Required Assembly	Yes
Warranty Type	Extended

DESK DIMENSION



Image: A detailed diagram illustrating the key dimensions of the L-shaped standing desk, including length, width, and height range.

WARRANTY AND SUPPORT

FLEXISPOT provides a comprehensive warranty for your peace of mind:

 

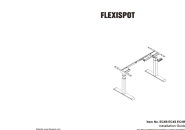 
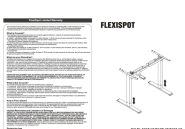 
- **5-Year Coverage:** Applies to the desk frame and motor.
- **2-Year Protection:** Applies to the control panel and electronics.

For warranty claims, technical support, or any inquiries, please contact FLEXISPOT customer support. You can find contact information on the official FLEXISPOT website or through your purchase platform.

Return Policy: This product typically has a 30-day return policy for refund or replacement, subject to the retailer's terms and conditions.

Protection Plans: Extended protection plans are available for purchase, including 2-Year and 3-Year options, as well as a monthly "Complete Protect" plan. These plans offer additional coverage beyond the standard manufacturer's warranty.

Related Documents

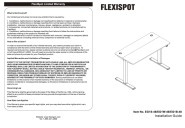	<p>FlexiSpot EG1S/EG1W/EG1B Series Height-Adjustable Desk: Installation Guide & Limited Warranty</p> <p>Comprehensive installation guide and limited warranty details for FlexiSpot EG1S, EG1W, and EG1B series height-adjustable desks, covering setup, specifications, troubleshooting, and warranty coverage.</p>
	<p>FlexiSpot E4B/E4W Electric Standing Desk User Manual</p> <p>Comprehensive user manual for the FlexiSpot E4B/E4W electric standing desk, covering specifications, assembly instructions, keypad operation, troubleshooting, and warranty information.</p>
	<p>FlexiSpot EC4B EC4S EC4W Electric Height-Adjustable Desk Installation Guide</p> <p>This guide provides detailed instructions for installing FlexiSpot EC4B, EC4S, and EC4W electric height-adjustable desk frames. It covers specifications, parts, assembly steps, handset operation, troubleshooting, and warranty information.</p>
	<p>FlexiSpot Height Adjustable Desk EG1B/EG1W/EG1S Series Installation Guide and Limited Warranty</p> <p>Comprehensive guide for installing FlexiSpot height adjustable desks (EG1B/EG1W/EG1S series), including detailed steps, specifications, warranty information, and troubleshooting tips.</p>