

[Manuals.plus](#) /

› [Perlegear](#) /

› Perlegear PGTVS26 Universal Swivel Tabletop TV Stand Instruction Manual

Perlegear PGTVS26

Perlegear PGTVS26 Universal Swivel Tabletop TV Stand Instruction Manual

Model: PGTVS26 | Brand: Perlegear

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Perlegear PGTVS26 Universal Swivel Tabletop TV Stand. Please read this manual thoroughly before installation to ensure safe and correct usage. Keep this manual for future reference.

Safety Information

- Do not exceed the maximum weight capacity of **40 kg (88 lbs)**.
- Ensure your TV's VESA pattern is within the supported range of **100x100mm to 400x400mm**.
- This stand is designed for TVs between **32 and 70 inches**.
- Always ensure all screws are securely tightened before use.
- Do not allow children to climb on or play with the TV stand.
- If you have any doubts about installation, consult a qualified professional.

Holds Your 70" TV and Soundbar

6.6" extra height for more space



Max Load
88 lbs



Min 100x100 mm
Max **400x400** mm

32" – 70"

*** Testing data obtained from TVs
with center-mounted VESA pattern**

Image: The Perlegear PGTVS26 TV Stand supporting a large television and soundbar, highlighting its compatibility with TVs from 32 to 70 inches, a maximum load of 88 lbs (40 kg), and VESA compatibility from 100x100mm to 400x400mm.

PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact Perlegear customer support.

- Base Plate (1)
- Support Column (1)
- TV Plate (1)
- VESA Brackets (2)
- Various TV Screws (M4, M6, M8)

- Washers and Spacers
- Cable Management Clips (2)
- Assembly Tools (Hex Key, Wrench)
- Instruction Manual (1)

SETUP AND INSTALLATION

Follow these steps carefully for proper assembly. No drilling is required for this tabletop stand.

1. **Attach the Support Column to the Base Plate:** Secure the main support column to the glass base plate using the provided screws and tools. Ensure it is firmly attached and stable.
2. **Assemble the TV Plate:** Attach the TV plate to the top of the support column.
3. **Install VESA Brackets to your TV:**
 - Identify the correct size screws (M4, M6, or M8) and spacers for your TV's VESA mounting holes.
 - Attach the VESA brackets to the back of your television, ensuring they are level and securely fastened.
4. **Mount the TV onto the Stand:** Carefully lift your TV and hook the VESA brackets onto the TV plate. Secure the TV to the stand using the safety screws or locking mechanisms provided.
5. **Cable Management:** Use the included cable management clips to route and organize your TV cables along the back of the support column for a tidy appearance.

TV Flexibility, Done in 10 Minutes

Fewer parts, no drilling required



Image: A person demonstrating the process of mounting a television onto the Perlegear PGTVS26 stand, highlighting the straightforward installation that requires no drilling.



Image: A detailed view of the integrated cable management system on the Perlegear PGTVS26 TV stand, showing how cables are neatly routed and secured along the central column.

OPERATING INSTRUCTIONS

The Perlegear PGTVS26 stand offers various adjustments for optimal viewing.

Height Adjustment

The stand features **9 height adjustment options**, allowing you to position your TV between approximately **18 inches (45.7 cm) and 24 inches (61 cm)** from the tabletop to the center of the TV. To adjust the height:

1. Carefully loosen the screws that secure the TV plate to the support column.
2. Adjust the TV to your desired height.

3. Retighten the screws firmly to secure the TV at the new height.



Image: An illustration demonstrating the eye-level comfort provided by the Perlegear PGTVS26 TV stand, showcasing its 9 height adjustment options that allow positioning the TV between 18 and 24 inches.

Swivel Function

The TV plate can swivel up to **±35 degrees** (70 degrees total) left or right, allowing you to achieve the best viewing angle from different positions in your room.

- Gently grasp the sides of your TV and rotate it to the desired angle.
- The swivel mechanism is designed for smooth movement.

Replace Wide & Wobbly TV Feet



☹️	More viewing angles	😊
☹️	Fits on narrow consoles	😊
☹️	Multiple heights	😊
☹️	Sturdy construction	😊

Image: A visual comparison highlighting the stability and swivel capability of the Perlegear PGTVS26 TV stand (shown with $\pm 30^\circ$ swivel), contrasting it with a TV on standard, less stable feet.



Image: The Perlegear PGTVS26 TV stand demonstrating its swivel function, allowing the television to be angled for optimal viewing from various positions in a room.

Tilt Function

The TV can be tilted upwards by up to **+8 degrees** to reduce glare or optimize viewing from a lower position.

- Loosen the tilt adjustment knobs or screws on the VESA brackets.
- Adjust the TV to the desired tilt angle.
- Retighten the knobs or screws to secure the tilt position.



Image: The Perlegear PGTVS26 TV stand showcasing its +8 degree tilt capability, allowing for glare reduction and improved viewing angles.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the stand. Avoid abrasive cleaners or solvents that may damage the finish.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight and secure. Loose connections can lead to instability.
- **Inspection:** Inspect the stand for any signs of wear or damage. If any damage is found, discontinue use and contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
TV is not level.	VESA brackets or TV plate not installed evenly.	Re-adjust the VESA brackets on the TV or the TV plate on the column to ensure they are level. Some stands have a small leveling adjustment.
Stand feels unstable.	Screws are loose; TV weight exceeds capacity; TV size is too large.	Ensure all assembly screws are tightened. Verify your TV's weight and size are within the stand's specifications (max 40 kg / 88 lbs, 32-70 inches).
Difficulty adjusting height/swivel/tilt.	Adjustment screws are too tight; mechanism is stiff.	Loosen adjustment screws slightly before attempting to move. Apply a small amount of silicone lubricant to moving parts if necessary (avoid oil-based lubricants).
Missing parts.	Packaging error.	Contact Perlegear customer support with your purchase details.

SPECIFICATIONS

Feature	Detail
Model Number	PGTVS26
Brand	Perlegear
TV Size Compatibility	32 - 70 inches
Weight Capacity	40 kg (88 lbs)
VESA Compatibility	100x100mm to 400x400mm
Height Adjustment	9 options, 18 - 24 inches (from tabletop to TV center)
Swivel Range	±35 degrees
Tilt Range	+8 degrees
Material	Alloy Steel, Tempered Glass Base
Color	Black

WARRANTY AND SUPPORT

Perlegear products are manufactured with quality and durability in mind. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation for specific warranty terms and duration.

For technical assistance, missing parts, or warranty claims, please contact Perlegear customer support through the retailer where you purchased the product or visit the official Perlegear website.

Contact Information:

- **Website:** www.perlegear.com (Example, actual URL may vary)
- **Email:** support@perlegear.com (Example, actual email may vary)

© 2026 Perlegear. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question