

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lindby](#) /
- › [Lindby Eloretta Outdoor Wall Lamp Instruction Manual](#)

Lindby 10025907

Lindby Eloretta Outdoor Wall Lamp Instruction Manual

Model: 10025907 | Brand: Lindby

1. INTRODUCTION

This manual provides essential information for the safe installation, operation, and maintenance of your Lindby Eloretta Outdoor Wall Lamp. Please read these instructions carefully before installation and retain them for future reference. This outdoor wall lamp is designed for exterior use, offering reliable illumination with an IP44 protection rating.



Image 1: Lindby Eloretta outdoor wall lamp in green, illuminated, mounted on a white wall.

2. SAFETY INFORMATION

- **Electrical Installation:** Installation must be carried out by a qualified electrician in accordance with local wiring regulations.
- **Power Disconnection:** Always ensure the main power supply is switched off at the circuit breaker before performing any installation, maintenance, or bulb replacement.
- **IP44 Rating:** This lamp is rated IP44, meaning it is protected against solid objects larger than 1mm and splashing water from any direction. It is suitable for outdoor use but should not be submerged in water.
- **Bulb Type:** Use only E27 LED bulbs with a maximum wattage of 15W. Do not exceed the specified wattage.
- **Product Modification:** Do not modify the product in any way. Any modifications may compromise safety and void the warranty.
- **Handling:** Handle the glass shade and lamp components with care to prevent breakage.

3. PACKAGE CONTENTS

Carefully unpack the product and check that all components are present and undamaged. If any parts are missing or damaged, do not proceed with installation and contact your retailer.



Image 2: Exploded view of the Lindby Eloretta wall lamp components.

- 1x Lindby Eloretta Wall Lamp Body (with integrated shade)
- 1x Glass Shade
- 1x Wall Mounting Plate
- 1x Terminal Block
- Mounting Screws and Wall Plugs (quantity may vary)

Note: The E27 bulb is not included and must be purchased separately.

4. TECHNICAL SPECIFICATIONS

Model Number	10025907
Brand	Lindby
Dimensions (H x W x D)	31 cm x 22 cm x 24.3 cm
Weight	1.1 kg

Material	Steel, Glass
Color	Green
Bulb Base	E27
Max. Wattage	15W LED
Voltage	230V
Protection Class	I
IP Rating	IP44 (Splash-proof)
Mounting Type	Wall Mount, Semi-flush
Country of Origin	China



Image 3: Dimensions of the Lindby Eloretta wall lamp.

5. SETUP AND INSTALLATION

Follow these steps carefully to install your Lindby Eloretta Outdoor Wall Lamp. If you are unsure about any part of the installation, consult a qualified electrician.

1. **Preparation:** Before starting, ensure the main power supply to the installation area is switched off at the circuit breaker.
2. **Marking Drilling Points:** Hold the wall mounting plate (refer to Image 2) against the desired installation surface. Use a pencil to mark the positions for drilling holes.
3. **Drilling Holes:** Drill holes at the marked positions. Insert appropriate wall plugs (if provided or required for your wall type) into the drilled holes.
4. **Mounting Plate Installation:** Secure the wall mounting plate to the surface using the provided screws. Ensure it is firmly attached.
5. **Wiring Connection:** Connect the household electrical wires to the terminal block. Ensure correct polarity: Live (L), Neutral (N), and Earth (\emptyset). Double-check all connections for security.
6. **Lamp Body Attachment:** Carefully attach the lamp body to the mounting plate. Ensure all wiring is neatly tucked away and not pinched. Secure the lamp body with the appropriate screws.
7. **Bulb Installation:** Screw an E27 LED bulb (max 15W, not included) into the lamp holder.
8. **Glass Shade Attachment:** Carefully attach the glass shade to the lamp body. Ensure it is securely fastened and the seal is properly seated to maintain the IP44 protection rating.
9. **Power Restoration:** Once installation is complete and all components are secure, restore power at the circuit breaker. Test the lamp's functionality.



Image 4: E27 bulb socket inside the lamp.

6. OPERATING INSTRUCTIONS

The Lindby Eloretta Outdoor Wall Lamp is designed for simple operation via an external wall switch (not included). Once installed and powered, the lamp will turn on or off by toggling the connected wall switch.

7. MAINTENANCE

- **Cleaning:** Always disconnect the power supply before cleaning. Clean the lamp with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or glass.
- **Bulb Replacement:**
 - a. Ensure the power supply is switched off.
 - b. Carefully unscrew the glass shade.
 - c. Unscrew the old E27 bulb and replace it with a new E27 LED bulb (max 15W).
 - d. Reattach the glass shade securely, ensuring the seal is correctly positioned to maintain the IP44 rating.
 - e. Restore power and test the lamp.
- **Regular Inspection:** Periodically check the lamp for any signs of damage, loose connections, or wear. If any issues are found, disconnect power and address them promptly.

8. TROUBLESHOOTING

If you encounter issues with your Lindby Eloretta Outdoor Wall Lamp, refer to the following common problems and solutions:

- **Lamp does not light up:**

- Check if the main power supply to the lamp is switched on at the circuit breaker.
- Verify that the external wall switch is in the 'ON' position.
- Ensure the E27 bulb is correctly screwed into the socket and is not faulty. Try replacing the bulb with a known working one.
- Check all electrical connections for security. If you are unsure, consult a qualified electrician.

- **Light flickers or is dim:**

- Ensure the bulb is fully screwed in.
- Replace the bulb, as it may be faulty or nearing the end of its lifespan.
- Check for loose wiring connections (consult a qualified electrician).

- **Water inside the glass shade:**

- Ensure the glass shade is securely attached and the rubber seal is properly seated to maintain the IP44 rating.
- If the issue persists, the seal may be damaged and require replacement.

For problems not listed here, or if troubleshooting steps do not resolve the issue, please contact customer support.

9. WARRANTY AND SUPPORT

Warranty: Warranty information for your Lindby Eloretta Outdoor Wall Lamp is typically provided by your retailer or the manufacturer at the time of purchase. Please refer to your purchase documentation, receipt, or the official Lindby website for detailed warranty terms and conditions.

Support: For technical assistance, spare parts, or any other inquiries regarding your product, please contact your point of purchase or Lindby customer service. Have your model number (10025907) and purchase details ready when contacting support.