

Nostalgia Retro

Nostalgia Retro Microwave Oven

MODEL: RETRO (0.7 CU. FT., 700-WATT)

Instruction Manual

1. Introduction

Thank you for purchasing the Nostalgia Retro Microwave Oven. This appliance combines a classic aesthetic with modern functionality, designed for convenient and efficient heating and cooking. Please read this manual thoroughly before operation to ensure proper use and to maximize the lifespan of your microwave.

2. Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. Ensure the door closes properly and there is no damage to the door, hinges, latches, or sealing surfaces.
- Only qualified service personnel should adjust or repair this appliance.
- Ensure proper ventilation around the microwave.
- Do not heat sealed containers, as they may explode.

Child Safety Lock Feature:

This microwave includes a child safety lock. To prevent unintentional use, especially by children, the door will lock after cooking is complete. To open the door, you must press the 'Pause/Cancel' button to release the lock. This feature provides an added layer of safety in households with young children.

CHILD LOCK

just turn on the lock
feature to protect
your family



The child safety lock feature helps prevent accidental operation.

3. Product Features

- **Powerful 700-Watt Oven:** Ensures meals are ready efficiently.
- **0.7 Cu Ft Capacity:** Compact size suitable for various dishes for reheating, cooking, or defrosting.
- **Rotating Glass Turntable:** Ensures even heating for consistent results.
- **8 Auto Cook Programs & Express Cooking:** Convenient pre-set programs for common dishes and quick start options.
- **10 Power Levels:** Customize cooking for different food types and desired intensity.

0.7 CU. FT

700 W

8 COOKING
SETTINGS

defrost & express start



NOSTALGIA™

The microwave's interior with a bowl of popcorn, highlighting its capacity and features.

4. Setup

Before first use, unpack all components and remove any packaging materials. Place the microwave on a stable, level surface with adequate ventilation. Ensure the rotating glass turntable is correctly seated on its support ring inside the oven cavity.



The Nostalgia Retro Microwave Oven, ready for setup.

The compact footprint of this microwave makes it ideal for smaller counter spaces. Its dimensions are approximately 18 inches wide, 14 inches deep, and 10.25 inches high.

COMPACT FOOTPRINT



Compact dimensions for easy placement on countertops.

5. Operating Instructions

The Nostalgia Retro Microwave Oven features an intuitive control panel with a simple dial and dedicated buttons for various functions.

Setting Cook Time and Power:

1. Use the main dial to set the desired cooking time. The digital display will show the time.
2. Press the 'Micro Power' button to cycle through the 10 available power levels.
3. Press 'Start' to begin cooking.

Express Cooking:

For quick heating, press the 'Express' button. Each press will add 30 seconds to the cooking time and start immediately.

Auto Cook Programs:

The microwave includes 8 pre-set auto cook programs for common food items. Refer to the control panel for specific program options (e.g., Popcorn, Potato, Pizza, Beverage, Meat, Reheat, Bread, Fresh Veg.). Select the desired program using the corresponding button.

Defrost Function:

Use the 'Preset Clock Defrost' button for defrosting food by weight or time. Follow the instructions on the control panel for specific defrosting options.

Pausing/Canceling Operation:

Press the 'Pause/Cancel' button to temporarily stop cooking or to clear the current settings.



The microwave in a kitchen setting, illustrating its practical use for various meals.

6. Maintenance

Regular cleaning and proper care will ensure your microwave remains in excellent condition.

- **Cleaning the Interior:** Wipe the interior cavity, door, and turntable with a damp cloth after each use. For stubborn stains, use a mild detergent.

- **Cleaning the Exterior:** Clean the exterior surface with a soft, damp cloth. Avoid abrasive cleaners.
- **Turntable Care:** The glass turntable can be removed for cleaning and is dishwasher safe.
- **Odor Removal:** To remove odors, combine a cup of water with the juice of one lemon in a microwave-safe bowl. Heat for 5-7 minutes, then wipe the interior clean.

7. Troubleshooting

If you encounter issues with your microwave, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Microwave does not start	Door not closed properly; Power cord unplugged; Fuse blown/circuit breaker tripped.	Ensure door is firmly closed; Check power connection; Reset circuit breaker or replace fuse.
Food heats slowly or unevenly	Low power setting; Incorrect cooking time; Food quantity too large; Turntable not rotating.	Increase power level; Adjust cooking time; Reduce food quantity or cook in batches; Ensure turntable is correctly placed and rotates freely. Note: At 700 watts, heating times may be longer compared to higher wattage microwaves.
Door does not open after cooking	Child safety lock engaged.	Press the 'Pause/Cancel' button to release the door lock.
Unusual noises during operation	Turntable not seated correctly; Foreign object in cavity.	Re-seat turntable; Check and remove any foreign objects.

If problems persist, please contact Nostalgia customer support.

8. Specifications

Attribute	Detail
Brand	Nostalgia
Model Number	Retro
Capacity	0.7 Cubic Feet
Wattage	700 watts
Voltage	120 Volts (AC)
Product Dimensions (D x W x H)	14 x 18 x 10.25 inches
Item Weight	24.9 pounds
Color	White

Attribute	Detail
Material	Painted Metal/Plastic
Installation Type	Countertop
Special Feature	Programmable

9. Warranty and Support

Nostalgia offers various protection plans for your appliance. For detailed warranty information and customer support, please visit the official Nostalgia Store or refer to the documentation included with your purchase. You can find more information and support at the [Nostalgia Store on Amazon](#).