

Nostalgia XTOSDLMC2SS6A

Nostalgia Inspirex Touch Screen Toaster User Manual

Model: XTOSDLMC2SS6A

INTRODUCTION

The Nostalgia Inspirex Touch Screen Toaster is designed to provide precise toasting for various bread types. This manual provides instructions for safe operation, setup, usage, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or any part of the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.

- Do not operate unattended.

SETUP

Before first use, ensure all packaging materials are removed from the toaster. Place the toaster on a stable, heat-resistant surface away from flammable materials. Ensure adequate ventilation around the appliance.



Image: The Inspirex Touch Screen Toaster, showing its compact dimensions of 8.62 inches deep, 5.98 inches wide, and 8.43 inches high. This illustrates the toaster's size for placement in your kitchen.

Plug the power cord into a standard electrical outlet. The touchscreen display will activate, indicating the toaster is ready for use.

OPERATING INSTRUCTIONS

The Inspirex Touch Screen Toaster features an intuitive interface for customized toasting.

1. Powering On and Waking the Display

The display will automatically activate when plugged in. If the display is off, simply tap the screen to wake it up.



Image: A hand tapping the touchscreen of the Inspirex toaster, demonstrating how to wake the display.

2. Inserting Bread

Place your bread, bagel, English muffin, or pastry into the extra-wide slots. Use the smooth motion lever to lower the food into the toaster. The toaster will automatically begin the toasting cycle once settings are selected.

3. Selecting Bread Type and Browning Level

The touchscreen allows you to choose from 5 bread types and 6 browning levels. Each selection utilizes a specific toasting algorithm for optimal results.

- **Bread Types:** Select the icon corresponding to your food item (e.g., Bread, Bagel, Waffle, Pastry, English Muffin).
- **Browning Levels:** Adjust the browning level from 1 (lightest) to 6 (darkest) using the on-screen controls.

MAKE YOUR BREAD EXACTLY HOW YOU LIKE IT



**COUNTDOWN
TIMER**



**SET FAVORITE
SETTING**



**6 BROWNING
LEVELS**



**5 SELECTABLE
BREAD TYPES**



Image: A close-up of the Inspirex toaster's touchscreen, highlighting the options for selecting bread types (e.g., bread, bagel, pastry) and adjusting browning levels, along with a countdown timer and favorite setting.

4. Special Functions

- **Defrost:** Use this setting for frozen items. The toaster will adjust the cycle to thaw and toast.
- **Reheat:** This function warms previously toasted items without further browning.
- **Favorite:** Save your preferred bread type and browning level for quick access.
- **Single Slot:** Activates only one slot for toasting, useful for single servings or specific items like bagels where only one side needs toasting.

Your browser does not support the video tag.

Video: An official product video demonstrating the Inspirex Touch Screen Display Smart Toaster's features, including bread type selection, browning levels, and special functions.

5. Countdown Display

The touchscreen features a visual countdown timer, indicating the remaining time for the toasting cycle. This time adjusts

based on your selected bread type and browning level.

6. Canceling Toasting

To stop the toasting cycle at any time, press the 'CANCEL' button on the touchscreen. The toast will automatically raise.

MAINTENANCE

Regular cleaning ensures the longevity and safe operation of your toaster.

1. Cleaning the Crumb Tray

The toaster is equipped with a removable crumb tray for easy cleaning. After each use, or when crumbs accumulate, slide out the tray from the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Ensure the tray is completely dry before reinserting it.



Image: A close-up of the Inspirex toaster showing the removable crumb tray being pulled out for cleaning.

2. Cleaning Exterior Surfaces

Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish. Ensure the toaster is unplugged and completely cool before cleaning.

3. Cleaning Interior

Never insert metal objects into the toaster slots. If food becomes lodged, unplug the toaster and allow it to cool completely before carefully removing the food. Do not shake the toaster to remove crumbs, as this can damage internal components.

TROUBLESHOOTING

If you encounter issues with your Inspirex Touch Screen Toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not power on.	Not plugged in; power outlet malfunction; display asleep.	Ensure toaster is securely plugged into a working outlet. Tap the screen to wake the display.
Bread does not toast evenly.	Incorrect bread type selected; uneven bread thickness.	Ensure the correct bread type is selected on the touchscreen. Adjust browning level if necessary. Ensure bread is evenly sliced.
Toaster lever does not stay down.	Toaster not powered on; no selection made.	Ensure the toaster is plugged in and the display is active. Select a bread type and browning level before lowering the lever.
Smoke or burning smell.	Crumbs accumulated in tray; food lodged in slots.	Immediately press CANCEL and unplug the toaster. Allow to cool. Clean the crumb tray. Carefully remove any lodged food.

SPECIFICATIONS

- **Brand:** Nostalgia
- **Model Number:** XTOSDLMC2SS6A
- **Color:** Stainless Steel
- **Material:** Stainless Steel
- **Product Dimensions (D x W x H):** 8.62" x 5.98" x 8.43"
- **Wattage:** 1450 watts
- **Slot Count:** 2 (Extra-Wide)
- **Special Features:** Removable Crumb Tray, Touchscreen Display
- **Number of Browning Levels:** 6
- **Number of Bread Types:** 5
- **UPC:** 810140673909

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Nostalgia website. Keep your purchase receipt as proof of purchase for any warranty claims.

Nostalgia Official Website: [Visit the Nostalgia Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question