



Manuals.plus /

› Maxi-Cosi /

› Maxi-Cosi Nesta 3-In-1 Wooden High Chair User Manual

Maxi-Cosi Nesta

Maxi-Cosi Nesta 3-In-1 Wooden High Chair User Manual

Model: Nesta | Brand: Maxi-Cosi

1. INTRODUCTION

The Maxi-Cosi Nesta 3-In-1 Wooden High Chair is designed to adapt to your child's growth, transitioning from an infant highchair to a child chair and eventually a sleek adult seat. Crafted from durable Beechwood with minimal plastics and premium recycled fabrics, this chair offers ergonomic support and comfort through various stages of life. This manual provides essential information for the safe assembly, operation, and maintenance of your Nesta high chair.

Important Safety Information

- Always read all instructions before assembly and use of the product.
- Keep this instruction manual for future reference.
- Never leave your child unattended in the high chair.
- Always use the restraint system.
- Ensure the high chair is placed on a flat, stable surface.
- Regularly check all components for wear, damage, or missing parts. Discontinue use if any part is damaged.

2. COMPONENTS LIST

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, do not assemble the product and contact customer support.

- Wooden Chair Frame (Main structure)
- Seat Unit (with integrated harness)
- Adjustable Footrest
- Removable Snack Tray
- Machine-Washable Padded Seat Pad
- Assembly Hardware (screws, Allen key)

3. ASSEMBLY INSTRUCTIONS

Assembly is straightforward and requires minimal tools. An Allen key is typically provided with the hardware.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble the Frame:** Connect the main wooden frame pieces using the provided screws and Allen key. Ensure all connections are secure but do not overtighten.
3. **Attach the Seat Unit:** Slide the seat unit into the designated slots on the chair frame. Ensure it clicks securely into place.
4. **Install the Footrest:** Insert the adjustable footrest into the desired height slots on the frame. It should slide in and be stable.
5. **Attach the Padded Seat Pad:** Secure the padded seat pad to the seat unit, ensuring all straps and buckles are correctly threaded and fastened.
6. **Attach the Snack Tray:** Align the snack tray with the attachment points on the seat unit and push until it locks into place.
7. **Final Check:** Before first use, double-check all screws and connections to ensure they are tight and secure. Verify that the seat unit, footrest, and snack tray are properly installed and locked.

4. OPERATING THE NESTA HIGH CHAIR

4.1. 3-in-1 Functionality

The Nesta high chair is designed to grow with your family, offering three distinct modes:

- **Infant Highchair Mode:** For babies from 6 months (or when they can sit unassisted) up to approximately 3.5 years. Use with the full seat unit, padded seat pad, harness, and snack tray.
- **Child Chair Mode:** For children from approximately 3.5 years up to 14 years. The snack tray and infant insert can be removed, allowing the child to sit closer to the family table.
- **Adult Seat Mode:** For individuals from 14 years up to 99 years. The chair can be configured as a comfortable and stylish adult seat by removing the seat unit and adjusting the footrest/seat base.

Lasts a lifetime

Transitions effortlessly from an infant highchair to a child chair and into a sleek adult seat



Dure toute une vie

Passe sans effort de chaise haute pour bébé à chaise pour enfant et à siège élégant pour adulte

Figure 4.1: The Nesta high chair in its three configurations: infant highchair, child chair, and adult seat, demonstrating its long-term adaptability.

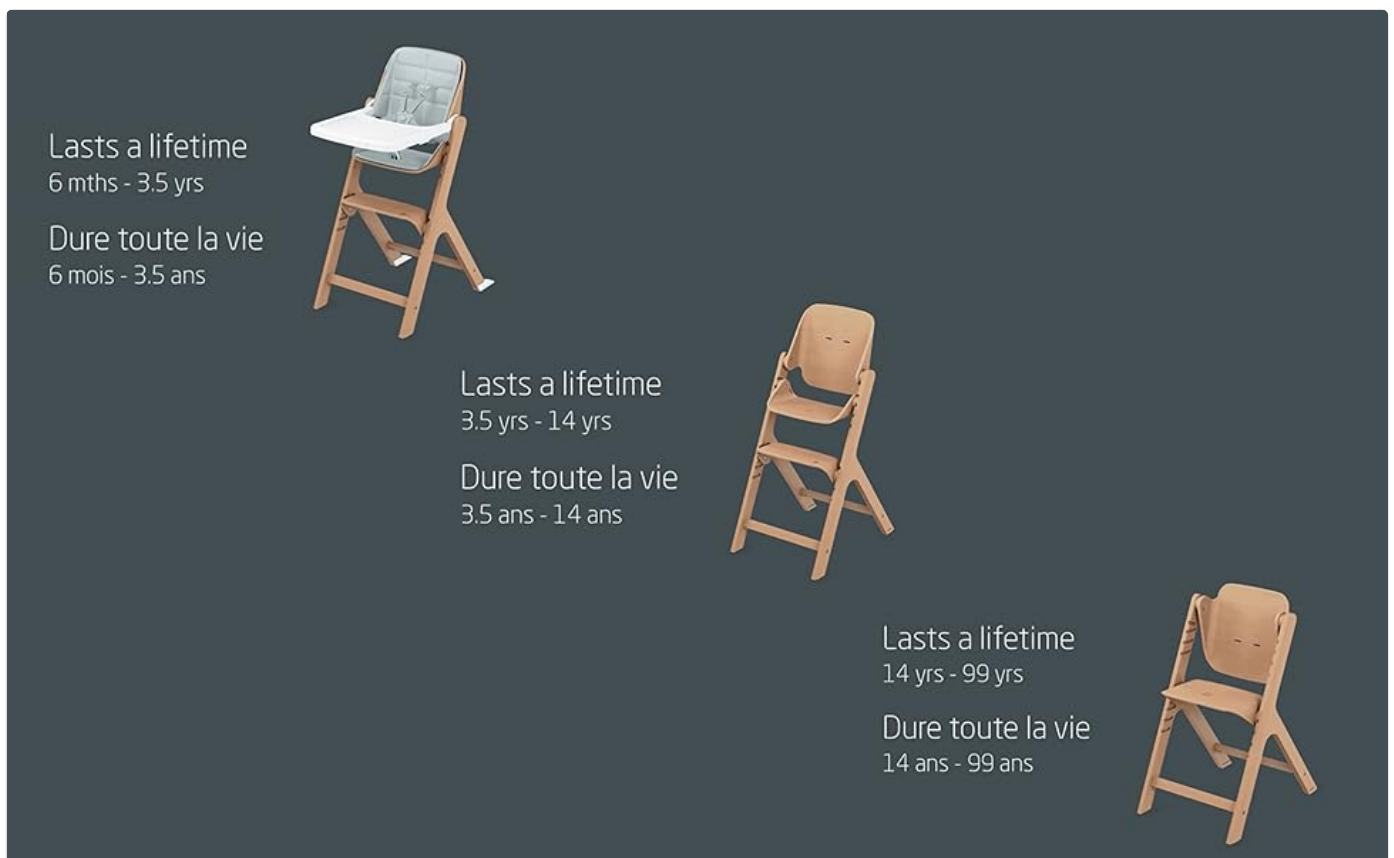


Figure 4.2: Visual representation of the Nesta high chair's age suitability across its three modes, highlighting its lifetime usability.

4.2. Adjusting Seat and Footrest

The Nesta high chair features an adjustable footrest and multiple seat positions to ensure ergonomic support as your child grows.

- To adjust the footrest, locate the adjustment mechanism on the side of the chair frame. Press the release buttons (if applicable) and slide the footrest to the desired height. Ensure it locks securely into place.
- The seat unit can also be adjusted or removed by pressing the release buttons located underneath or on the sides of the seat. Slide the seat to the appropriate position or remove it entirely for the adult chair configuration.

Featuring an adjustable footrest and seat positions, Nesta provides

versatile seating options

Dotée d'un repose-pieds et d'un siège réglables, la Nesta offre de

multiples possibilités



Figure 4.3: The adjustable footrest of the Nesta high chair, illustrating how it can be positioned to provide optimal support for different ages.

4.3. Using the Snack Tray

The removable snack tray offers added convenience and is easy to clean.

- To attach the tray, align it with the guides on the seat unit and push firmly until it clicks into place.
- To remove the tray, locate the release buttons or levers underneath the tray and press them while pulling the tray away from the seat.

Removable snack tray

offers added convenience with its easy-to-clean design



Le plateau amovible

offre un confort supplémentaire avec sa facilité de nettoyage

Figure 4.4: The Nesta high chair with its removable snack tray, designed for easy attachment and detachment for meal times and cleaning.

5. CARE AND MAINTENANCE

Proper care ensures the longevity and hygiene of your Nesta high chair.

- **Cleaning the Frame:** Wipe the wooden frame and plastic components with a damp cloth and mild soap. Dry thoroughly. Avoid abrasive cleaners or harsh chemicals.
- **Cleaning the Seat Pad:** The padded seat pad is machine-washable. Refer to the care label on the pad for specific washing instructions (typically cold water, gentle cycle). Air dry only.
- **Cleaning the Snack Tray:** The snack tray can be easily removed and washed by hand with warm, soapy water or placed in the dishwasher (top rack recommended).
- **Water-Repellent Fabrics:** The fabrics are water-repellent, making spills easy to wipe away.

Water-repellent fabrics, smooth surfaces, and a seamless design make

cleaning quick and easy

Les tissus imperméables, les surfaces lisses et la conception sans joints permettent

un nettoyage rapide et facile



Figure 5.1: The water-repellent fabric of the Nesta high chair, designed to resist spills and simplify cleaning.

Machine washable seat pad

for hassle-free cleaning

Coussin du siège lavable en machine

pour un nettoyage sans tracas



Figure 5.2: The machine-washable seat pad of the Nesta high chair, allowing for thorough and convenient cleaning.

6. TROUBLESHOOTING

If you encounter any issues with your Nesta high chair, please refer to the following common solutions:

Problem	Possible Cause / Solution
Seat unit or tray not locking securely.	Ensure the component is correctly aligned with the slots/guides. Apply firm, even pressure until you hear a click. Check for any obstructions.
Chair feels unstable or wobbly.	Verify that all assembly screws are tightened. Ensure the chair is on a flat, level surface. Check that the footrest and seat unit are fully engaged in their respective positions.
Harness straps are difficult to adjust or buckle.	Ensure straps are not twisted. Refer to the assembly instructions for correct threading. Clean any food debris from the buckle mechanism.
Difficulty removing snack tray.	Ensure both release buttons/levers are pressed simultaneously and firmly. Pull the tray straight out.

7. SPECIFICATIONS

- **Product Dimensions (D x W x H):** 65.5 x 99 x 46 cm (25.8 x 39 x 18.1 inches)
- **Product Weight:** 12.64 kg (27.87 lbs)
- **Material:** Beech Wood, Recycled Fabrics, Minimal Plastics
- **Color:** Classic Oat
- **Manufacturer:** Dorel Juvenile Canada
- **Country of Origin:** China
- **UPC:** 884392004279



Figure 7.1: Key dimensions of the Nesta high chair for reference.

8. WARRANTY AND SUPPORT

Specific warranty information was not provided in the product data. For warranty details, product support, or to purchase replacement parts, please contact Maxi-Cosi customer service or visit the official Maxi-Cosi website.

You can visit the Maxi-Cosi Store on Amazon:[Maxi-Cosi Store](#)