

Waterpik WF-30CD010

Waterpik Cordless 1100 Water Flosser Instruction Manual

Model: WF-30CD010

Brand: Waterpik

1. OVERVIEW AND KEY FEATURES

The Waterpik Cordless 1100 (WF-30CD) is a rechargeable portable water flosser designed for effective teeth cleaning and flossing, suitable for travel and home use. It is particularly beneficial for braces care and promoting healthier gums.

- **Rechargeable and Portable:** Ideal for on-the-go use, travel, and compact spaces. Can be safely used in the shower.
- **Easy to Use:** Features an ergonomically designed non-slip hand grip for comfortable and easy handling, along with quiet water flossing technology.
- **Dentist Recommended:** Waterpik is the #1 water flosser brand recommended by dental professionals and holds the American Dental Association (ADA) Seal of Acceptance for safety and effectiveness.
- **PrecisionPulse Technology:** Delivers a combination of water pressure and pulsations, clinically proven to remove up to 99.9% of plaque bacteria from treated areas, which cause gingivitis, cavities, and bad breath.
- **Settings:** Offers 2 safe and effective pressure settings (low/high).
- **Reservoir:** Includes a 6 oz removable reservoir, which is top-rack dishwasher safe, providing up to 45 seconds of flossing time.
- **Battery:** Equipped with a lithium-ion battery with a recharge indicator. USB charger included (wall adapter not included).

2. SAFETY INFORMATION

Use this product only for its intended purpose as described in this manual or as recommended by your dental professional.

3. SETUP AND OPERATING INSTRUCTIONS

Follow these steps for proper setup and operation of your Waterpik Cordless 1100 Water Flosser:

1. **Attach Tip:** Press the flossing tip firmly into the unit until it clicks securely into place.
2. **Fill Reservoir:** Fill the removable reservoir with lukewarm water.
3. **Position and Start:** Lean over the sink, place the flossing tip in your mouth, and turn the unit on using the power switch.
4. **Floss:** Guide the flossing tip along your gumline, pausing briefly between teeth to allow water to flow from your mouth into the sink.

NOTE: If water does not flow on first use, prime the unit by turning the power off and drawing water through the flossing tip as if it were a straw, just until water flows through. The reservoir should contain at least 1 inch of water before attempting to prime. Then, use the product as instructed.



Fill the reservoir with lukewarm water.



Lean over sink, place flossing tip in mouth.



Turn the unit on to begin flossing.

4. MAINTENANCE

Proper maintenance ensures the longevity and effectiveness of your Waterpik Cordless 1100.

- **Reservoir Cleaning:** The 6 oz removable reservoir is top-rack dishwasher safe for easy cleaning.
- **Tip Replacement:** Replace flossing tips every 3 months for optimal performance and hygiene.

- **General Cleaning:** Wipe the exterior of the unit with a soft cloth and mild non-abrasive cleaner as needed. Do not submerge the main unit in water beyond its waterproof rating.

5. TROUBLESHOOTING

If you encounter issues with your Waterpik Cordless 1100, refer to the following common solutions:

- **No Water Flow:** If water does not flow on first use, prime the unit by turning the power off and drawing water through the flossing tip as if it were a straw, just until water flows through. Ensure the reservoir contains at least 1 inch of water before attempting to prime.
- **Low Pressure:** Ensure the reservoir is adequately filled and the tip is securely seated. Check the battery indicator to confirm sufficient charge.
- **Battery Not Charging:** Verify that the USB charger is properly connected to the unit and a working power source. Ensure the charging port cover is fully open to allow proper connection.

6. SPECIFICATIONS

Attribute	Detail
Product Dimensions	3.75 x 2.5 x 11.75 inches
Item Model Number	WF-30CD010
Weight	15.52 ounces
Batteries	2 Nonstandard Battery batteries required (included)
Power Source	Battery Powered
Special Features	Non-Slip Grip, Lightweight, Multiple Pressure Settings, Rechargeable, Battery Indicator
Product Benefits	Prevents Bad Breath, Prevents Cavities, Removes Plaque, Gum Health
Unit Count	1.0 Count
Manufacturer	Waterpik
Country of Origin	China
Wattage	5 watts

7. WARRANTY AND SUPPORT

The Waterpik Cordless 1100 is backed by a 1-year limited manufacturer’s warranty. Please refer to the full manual for complete details regarding warranty coverage.

Waterpik’s Colorado support team is available to assist with any product questions or needs. For further assistance, you may also refer to the official [User Guide \(PDF\)](#).

8. PRODUCT VISUALS



Waterpik Cordless 1100 Water Flosser and its packaging.



Key features of the Waterpik Cordless 1100.



What's included in the box.



Ergonomic hand grip for easy control.



Waterproof design for shower use.



Precision Tip for everyday use.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question