

Manuals.plus /

› Broonel /

› Broonel Fine Point Digital Active Stylus Pen for DOOGEE U11 11" Tablet User Manual

Broonel Fine Point Digital Active Stylus Pen

Broonel Fine Point Digital Active Stylus Pen User Manual

Model: Fine Point Digital Active Stylus Pen

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Broonel Fine Point Digital Active Stylus Pen. Designed for precision and compatibility, this stylus enhances your interaction with compatible iOS and Android tablet PCs and smartphones, including the DOOGEE U11 11" Tablet.



Figure 1: The Broonel Fine Point Digital Active Stylus Pen, showcasing its sleek design and fine tip.

PACKAGE CONTENTS

- Broonel Fine Point Digital Active Stylus Pen
- 1 x AAA Battery

SETUP

1. Battery Installation

1. Unscrew the top cap of the stylus pen.
2. Insert the provided AAA battery into the battery compartment, ensuring correct polarity (+/-).
3. Securely screw the top cap back onto the stylus.



Figure 2: The stylus pen with its top cap detached, revealing the internal compartment for battery insertion.

2. Initial Use

The Broonel Digital Active Stylus Pen does not require Bluetooth pairing. Once the battery is correctly installed, the stylus is ready for immediate use.

OPERATING INSTRUCTIONS

1. Powering On/Off

The stylus typically activates automatically upon contact with a compatible screen. Some models may

feature a power button; refer to the specific design of your stylus. To conserve battery, the stylus may enter a low-power state after a period of inactivity.

2. Adjusting the Nib

The stylus features an adjustable 2.3mm nib designed for varying sensor depth, which contributes to enhanced accuracy. Gently rotate or extend the nib as needed to achieve optimal responsiveness and precision for your specific device and task.

ACTIVE SENSE TECHNOLOGY

Adjust the nib for
maximum accuracy.



Figure 3: A detailed view of the stylus nib, illustrating the mechanism for adjustment to achieve maximum accuracy.

3. Usage with Devices

The stylus is compatible with both iOS and Android tablet PCs and smartphones. Simply touch the stylus nib to the screen to begin interacting with your device. It is suitable for writing, drawing, navigating, and other touch-based inputs.

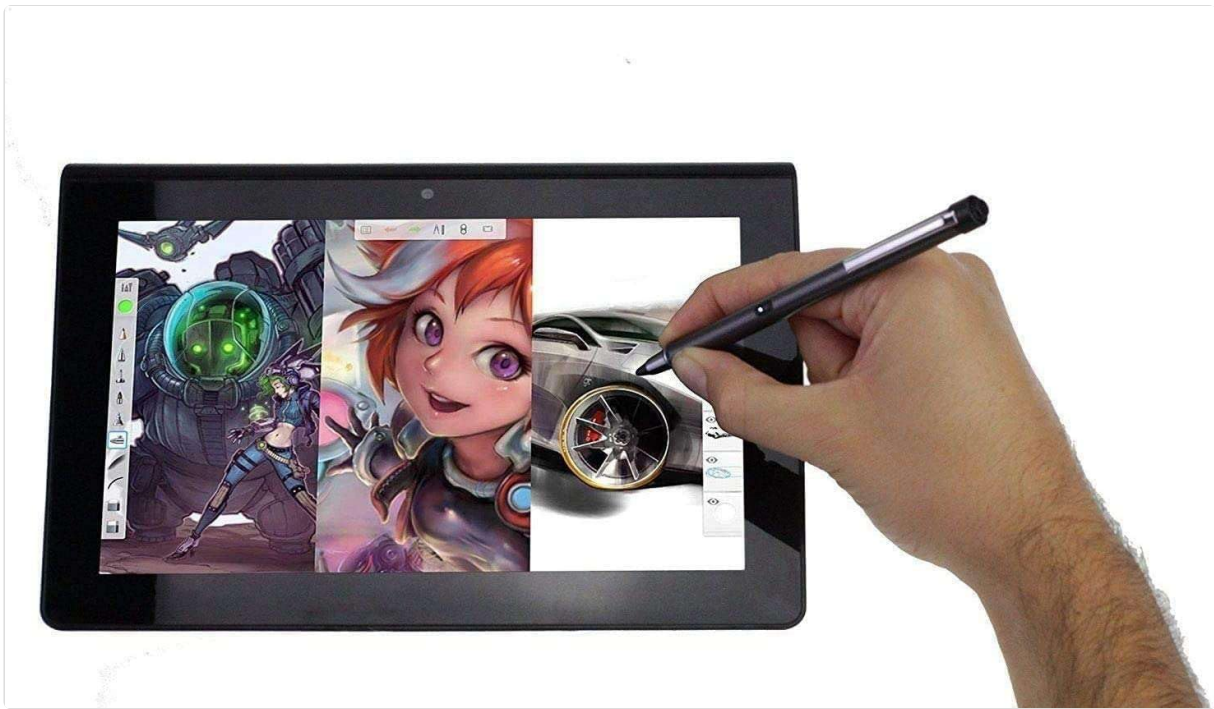


Figure 4: The Broonel stylus in active use, demonstrating its application for creative tasks on a tablet device.

MAINTENANCE

1. Cleaning

To maintain optimal performance, gently wipe the stylus body and nib with a soft, dry, lint-free cloth. Avoid using abrasive cleaners or solvents.

2. Battery Replacement

When the stylus performance diminishes or it ceases to function, replace the AAA battery. Follow the battery installation steps outlined in the "Setup" section.

TROUBLESHOOTING

- **Stylus not responding:** Ensure the AAA battery is correctly installed and has sufficient charge. Replace the battery if necessary.
- **Inaccurate input:** Try adjusting the nib as described in the "Operating Instructions" section. Ensure your device screen is clean.
- **Intermittent connection:** Verify the battery connection. Ensure the stylus nib is clean and free from debris.

SPECIFICATIONS

Model Name	Fine Point Digital Active Stylus Pen
Brand	Broonel
Nib Size	2.3mm (Adjustable)
Power Source	1 x AAA Battery
Compatibility	iOS & Android Tablet PCs & Smartphones (e.g., DOOGEE U11 11" Tablet)
ASIN	B0DV9M3243

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Broonel website. Keep your proof of purchase for warranty claims.