

[Manuals.plus](#) /

› [Broonel](#) /

› Broonel Active Fine-Tip Digital Stylus User Manual

Broonel AXETOP 10"

Broonel Active Fine-Tip Digital Stylus User Manual

Model: AXETOP 10"

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Broonel Active Fine-Tip Digital Stylus. Please read this manual thoroughly before using the stylus to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW AND FEATURES

The Broonel Active Fine-Tip Digital Stylus is designed to provide a precise and natural writing and sketching experience on compatible iOS and Android tablets and smartphones. Its advanced features ensure accuracy and ease of use.



Image 1: The Broonel Active Fine-Tip Digital Stylus, showcasing its sleek design and fine tip.

Key Features:

- **Universal Compatibility:** Designed to work with iOS and Android tablets and smartphones.
- **Precision Fine Tip:** Features a 2.3mm tip for accurate writing and sketching.
- **Adjustable Nib:** Allows for varying sensor depth, leading to more precise field depth.
- **No Bluetooth Required:** Ready to use by simply connecting the included battery.
- **Battery Powered:** Operates with one AAA battery (included).

3. PACKAGE CONTENTS

Please verify that all items listed below are present in your package:

- Broonel Active Fine-Tip Digital Stylus
- 1 x AAA Battery



Image 2: The stylus with its end cap removed, revealing the battery compartment for the AAA battery.

4. SETUP

4.1 Installing the Battery

1. Unscrew the end cap of the stylus.
2. Insert one AAA battery into the compartment, ensuring correct polarity (+/-).
3. Screw the end cap back on securely.

4.2 Initial Activation

The stylus does not require Bluetooth pairing. Once the battery is installed, it is ready for immediate use.

- Press the power button located on the side of the stylus to turn it on. A small indicator light will illuminate.
- The stylus is now active and ready to interact with your device's screen.

5. OPERATING INSTRUCTIONS

5.1 Using the Stylus

Hold the stylus as you would a regular pen. The fine tip allows for precise input on your touchscreen device.

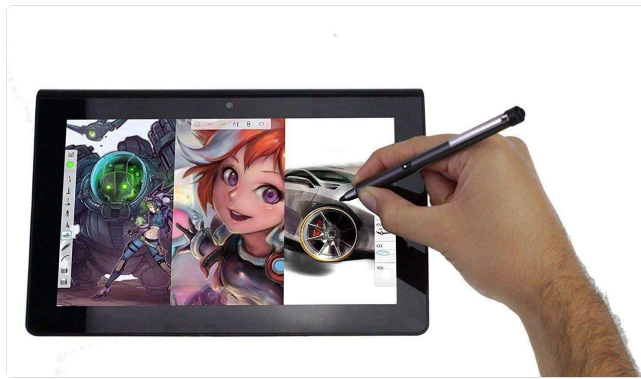


Image 3: A hand holding the Broonel stylus, actively drawing or writing on a tablet screen.

5.2 Adjusting the Nib

The stylus features an adjustable nib to optimize accuracy for different screen types or user preferences.



Image 4: Diagram illustrating how to adjust the stylus nib for maximum accuracy, showing the tip extending or retracting.

Gently twist the tip of the stylus to extend or retract the nib slightly. Experiment with different settings to find the optimal responsiveness for your device.

5.3 Power Management

- To conserve battery life, press the power button again to turn off the stylus when not in use.
- The stylus may have an automatic shut-off feature after a period of inactivity.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the stylus body. Do not use abrasive cleaners or solvents.
- **Tip Care:** Avoid pressing the tip excessively hard on the screen. If the tip becomes worn, replacement tips may be available from the manufacturer.
- **Storage:** Store the stylus in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stylus not responding	Battery is dead or incorrectly installed. Stylus is off. Device screen is dirty.	Replace the AAA battery. Ensure correct polarity. Press the power button to turn on. Clean your device's screen.
Inaccurate or inconsistent input	Nib adjustment needed. Screen protector interference. Device compatibility issue.	Gently adjust the stylus nib. Try removing the screen protector temporarily. Ensure your device is compatible with active styluses.
Indicator light not turning on	Battery issue. Stylus malfunction.	Check or replace the AAA battery. If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Broonel
Model	AXETOP 10" (Inferred)
Tip Size	2.3 mm
Power Source	1 x AAA Battery
Connectivity	No Bluetooth required
Color	Grey
ASIN	B0DV9P28TG

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Broonel website or contact their customer service directly. Keep your purchase receipt for warranty claims.

Manufacturer: Broonel

ASIN: B0DV9P28TG

Date of Listing on Amazon.com.be: January 28, 2025

For further assistance, please visit: www.broonel.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DV9P28TG>

More documents and user manuals: **<https://manuals.plus/>**