

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Braun](#) /
- › [Braun Air Styler AS4.3 BRAS430E Instruction Manual](#)

Braun BRAS430E

Braun Air Styler AS4.3 BRAS430E Instruction Manual

Model: BRAS430E

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Keep the power plug and cord away from heated surfaces.
- Clean the air filter regularly to prevent overheating and maintain performance.
- Always unplug the hair styler when not in use.
- Keep the appliance out of reach of children.
- Do not use this appliance near water or in wet environments.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

2. PRODUCT OVERVIEW

The Braun Air Styler AS4.3 is designed to provide efficient drying, volumizing, and straightening for various hair types. It features a 1000W HTDC motor for powerful airflow and Super IONTEC technology to reduce frizz and enhance shine. The styler includes multiple attachments for versatile styling.



Image 2.1: Braun Air Styler AS4.3 main unit with thermal brush attachment.

Key Features:

- **1000W HTDC Motor:** Provides fast drying and styling at lower temperatures.
- **Super IONTEC Technology:** Releases up to 32 million ions per minute to reduce static, control frizz, and enhance hair smoothness and shine.
- **Three Styling Modes:** Includes heat/speed settings and a cool shot function for versatile styling and long-lasting results.
- **Precision-Engineered Attachments:** Easy to swap and secure with a switch-lock mechanism.
- **Detachable Air Filter:** Facilitates easy cleaning to prevent overheating and ensure prolonged performance.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Braun Air Styler AS4.3 Main Unit
- Volumising Thermal Brush Attachment
- Straightening Paddle Brush Attachment
- Drying Nozzle Attachment



Image 3.1: Packaging of the Braun Air Styler AS4.3 showing the main unit and attachments.



Image 3.2: Close-up of the Volumising Thermal Brush and Straightening Paddle Brush attachments.

4. SETUP

4.1 Attaching and Detaching Accessories

1. Ensure the styler is unplugged and cool before attaching or detaching accessories.
2. To attach an accessory, align the attachment with the main unit and push it firmly until it clicks into place. The switch-lock mechanism ensures a secure fit.
3. To detach an accessory, press the release button (if present, refer to your specific model's design) and pull the attachment away from the main unit.

4.2 Connecting to Power

Plug the power cord into a suitable electrical outlet. Ensure the voltage matches the specifications of the appliance.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off and Mode Selection





Image 5.1: Close-up of the control switch for power and styling modes.

The styler features a slide switch for power and mode selection:

- **0 (Off):** The appliance is turned off.
- **I (Low Heat/Speed):** Gentle setting for delicate hair or light styling.
- **II (High Heat/Speed):** Powerful setting for faster drying and styling.
- *** (Cool Shot):** Activates a burst of cool air to set your style. Press and hold the button for cool air.

5.2 Using the Drying Nozzle

Attach the drying nozzle for focused airflow to quickly dry hair or prepare it for styling.



Image 5.2: User holding the Braun Air Styler with the drying nozzle attached.



Image 5.3: Model demonstrating the use of the drying nozzle for initial hair drying.

5.3 Using the Volumising Thermal Brush

The thermal brush is designed to add volume and shape to your hair. Ideal for creating soft curls or waves.

1. Ensure hair is towel-dried or partially dry.
2. Section your hair.
3. Place the brush under a section of hair near the roots and slowly pull it through to the ends, rotating the brush as you go to create volume or curl.
4. For extra volume, hold the brush at the roots for a few seconds before pulling through.



Image 5.4: User holding the Braun Air Styler with the volumising thermal brush attached.



Image 5.5: Model demonstrating the use of the volumising thermal brush for styling.

5.4 Using the Straightening Paddle Brush

The paddle brush is designed for gentle smoothing and straightening, leaving hair sleek and shiny.

1. Ensure hair is towel-dried or partially dry.
2. Section your hair.
3. Place the brush over a section of hair near the roots and slowly glide it down to the ends, maintaining tension for a smooth finish.



Image 5.6: User holding the Braun Air Styler with the straightening paddle brush attached.

5.5 Super IONTEC Technology

The Super IONTEC technology works automatically when the styler is turned on. It releases millions of active ions that envelop each hair strand, reducing static electricity, combating frizz, and restoring moisture balance for visibly smoother, shinier, and healthier-looking hair.

6. MAINTENANCE

6.1 Cleaning the Air Filter

Regular cleaning of the air filter is crucial for optimal performance and to prevent overheating.

1. Ensure the appliance is unplugged and completely cool.
2. Locate the detachable air filter at the back of the main unit.
3. Gently twist or pull to remove the filter cover.
4. Clean any accumulated dust or hair from the filter using a soft brush or cloth.
5. Reattach the filter cover securely.

6.2 General Cleaning and Storage

- Wipe the main unit and attachments with a damp cloth. Do not use abrasive cleaners or immerse the appliance in water.
- Ensure all parts are completely dry before storing.
- Store the styler and its attachments in a dry, safe place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your Braun Air Styler, consider the following:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a functional outlet and the power switch is set to 'I' or 'II'.
- **Reduced airflow or overheating:** Check if the air filter is clean and free from obstructions. Refer to Section 6.1 for cleaning instructions.
- **Attachments not securing:** Ensure the attachment is correctly aligned and pushed firmly until it clicks into place.
- **Hair not styling as expected:** Ensure hair is adequately towel-dried before styling. Experiment with different heat/speed settings and styling techniques.

If problems persist, please contact Braun customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	BRAS430E
Power (Wattage)	1000 watts
Motor Type	HTDC Motor
Technology	Super IONTEC
Styling Modes	3 (Low, High, Cool Shot)
Product Dimensions	5.5 x 31 x 5 cm
Weight	762 g
Power Source	Corded Electric
Material	Plastic

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Braun website. For technical support, replacement parts, or service inquiries, please contact Braun customer service through their official channels.

You can find more information and support at the [Braun Store](#).

10. LEGAL DISCLAIMER

Actual product packaging and materials may contain more and different information than what is presented in this manual. We recommend that you do not rely solely on the information presented here and that you always read labels, warnings, and directions before using or consuming a product.