

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Gourmia](#) /

› [Gourmia 5 Quart Digital Electric Stand Mixer \(Model GSM508\) Instruction Manual](#)

Gourmia GSM508

Gourmia 5 Quart Digital Electric Stand Mixer

MODEL: **GSM508 - INSTRUCTION MANUAL**

Introduction

This manual provides essential information for the safe and efficient operation of your Gourmia 5 Quart Digital Electric Stand Mixer, Model GSM508. Please read all instructions carefully before first use and retain this manual for future reference.



Figure 1: Gourmia 5 Quart Digital Electric Stand Mixer (Model GSM508)

Important Safety Instructions

- Read all instructions before operating the appliance.
- Do not immerse the motor unit in water or other liquids.
- Supervise children closely when the appliance is in use.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Use only attachments recommended or sold by the manufacturer.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.

Product Overview and Components

Your Gourmia Stand Mixer comes with several components designed for various mixing tasks:

- **Main Unit:** Houses the motor, speed controls, and tilt-head mechanism.
- **5-Quart Stainless Steel Bowl:** For mixing ingredients.
- **Dough Hook:** For kneading heavy doughs like bread or pizza.
- **Whisk:** For whipping eggs, cream, and light batters.
- **Beater:** For general mixing of batters, cookies, and cakes.
- **Splash Guard:** Helps prevent splatters during mixing.



Figure 2: Digital Display with Timer and Compact Design

Setup

1. **Placement:** Place the mixer on a clean, dry, and stable countertop. Ensure the suction cups on the base are securely attached to prevent movement during operation.
2. **Tilt-Head:** Press the tilt-lock release button and lift the motor head until it locks into place.

- Attach Bowl:** Place the 5-quart stainless steel mixing bowl onto the base and turn it clockwise until it locks securely.
- Insert Attachment:** Select the desired attachment (dough hook, whisk, or beater). Insert the attachment shaft into the port on the underside of the motor head and twist to secure.
- Lower Head:** Press the tilt-lock release button again and gently lower the motor head until it clicks into the locked position.
- Splash Guard:** If desired, attach the splash guard to the mixing bowl.



Figure 3: Tilt-Back Head and Bowl Features

Operating Instructions

The Gourmia Stand Mixer features 10 adjustable speeds and a digital timer for precise control.

- Add Ingredients:** Ensure the mixer is off and unplugged. Add your ingredients to the mixing bowl.
- Power On:** Plug the mixer into a standard electrical outlet. The LED display will illuminate.
- Set Speed:** Use the speed control dial to select one of the 10 speeds. Refer to the 'Attachments Usage' section for recommended speeds for different tasks.
- Timer Function:** To use the timer, press the 'SET' button. Use the '+' and '-' buttons to adjust the

desired mixing time (from 10 seconds to 15 minutes). The mixer will automatically stop when the timer reaches zero.

5. **Start/Pause:** Press the Play/Pause button to start or pause mixing.
6. **Stop:** To stop the mixer manually, turn the speed dial to '0' or press the Play/Pause button. Unplug the mixer from the outlet after use.



Figure 4: 10 Speed Control Guide

Attachments Usage

The mixer includes three versatile attachments:

- **Dough Hook:** Ideal for kneading yeast doughs for bread, pizza, or pasta. Use speeds 1-3.
- **Whisk:** Perfect for incorporating air into ingredients, such as whipping egg whites, cream, or making meringues. Use speeds 7-10.
- **Beater:** Suitable for mixing cake batters, cookie doughs, frostings, and mashed potatoes. Use speeds 4-6.



Figure 5: Versatile Attachments for Various Tasks

Cleaning and Maintenance

Proper cleaning and maintenance will ensure the longevity of your stand mixer.

- **Before Cleaning:** Always unplug the mixer from the power outlet.
- **Mixing Bowl:** The stainless steel mixing bowl is dishwasher safe. For best results, wash with warm, soapy water and dry thoroughly.
- **Attachments:** The dough hook, whisk, and beater are recommended for handwashing to preserve their finish and integrity. Wash with warm, soapy water and rinse well.
- **Main Unit:** Wipe the exterior of the motor unit with a damp cloth. Do not use abrasive cleaners or immerse the motor unit in water.
- **Storage:** Store the mixer and its attachments in a dry place.

Troubleshooting

If you encounter issues with your Gourmia Stand Mixer, refer to the following common solutions:

- **Mixer does not turn on:** Ensure the power cord is securely plugged into a working outlet. Check if the motor head is fully lowered and locked into place.
- **Attachments not mixing properly:** Ensure the attachment is correctly inserted and locked into the shaft. Verify the mixing bowl is securely locked to the base.
- **Excessive noise or vibration:** This may occur with very heavy loads. Reduce the amount of ingredients or ensure the mixer is on a stable, flat surface. Check that all parts are correctly assembled.
- **Motor overheating:** If the motor feels hot or emits a burning smell, turn off the mixer immediately and unplug it. Allow it to cool down for at least 30 minutes before resuming use. Avoid continuous operation for extended periods with heavy loads.

Specifications

Feature	Detail
Brand	Gourmia
Model Name	GSM508
Color	Grey
Capacity	5 Quarts
Controls Type	Touch
Special Feature	Tilt Head
Number of Speeds	10
Wattage	300 watts
Voltage	120 Volts
Material	ABS Plastic, Aluminum, Stainless Steel
Item Weight	6 pounds
Product Dimensions	9"D x 14"W x 10.5"H
Dishwasher Safe	Yes (Bowl)

Official Product Videos

POWWA 6.5 QT 10 Speeds Tilt-Head Electric Stand Mixer Overview

Your browser does not support the video tag.

Video 1: Demonstrates the features and operation of a similar 10-speed tilt-head electric stand mixer.

Howork Stand Mixer: More Explore in Kitchen

Your browser does not support the video tag.

Video 2: Showcases various uses and capabilities of a stand mixer in a kitchen setting.

VIVOHOME 8 Speed Kitchen Stand Mixer with 4.75 Quart Bowl

Your browser does not support the video tag.

Video 3: Highlights the features and operation of an 8-speed kitchen stand mixer.

Warranty and Support

Your Gourmia 5 Quart Digital Electric Stand Mixer is backed by a 1-Year Gold Standard Warranty. You can extend this warranty by an additional 2 years upon product registration.

For technical support, troubleshooting assistance, or warranty claims, please contact Gourmia Customer Service:

- **Website:** www.gourmia.com
- **Email:** support@gourmia.com
- **Phone:** 1-888-GOURMIA (1-888-468-7642)

Please have your model number (GSM508) and proof of purchase ready when contacting support.