

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kalorik](#) /

› [Kalorik Designer Series 2-Slice Toaster with LED Display Instruction Manual](#)

Kalorik TO52789BKS13

Kalorik Designer Series 2-Slice Toaster with LED Display Instruction Manual

Model: TO52789BKS13

[Important Safeguards](#) [Parts Description](#) [Setup](#) [Operating Instructions](#) [Maintenance & Cleaning](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for choosing the Kalorik Designer Series 2-Slice Toaster. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- Do not use with food that has been spread with butter, jelly, or jam.
- This appliance is for household use only.

PARTS DESCRIPTION



Figure 1: Front view of the Kalorik Designer Series 2-Slice Toaster, highlighting the LED display, shade setting buttons, and function buttons (Cancel, Bagel, Defrost, Reheat).

1. Toasting Slots (2)
2. High-Lift Lever
3. LED Digital Display
4. Shade Setting Buttons (+/-)
5. Cancel Button
6. Bagel Function Button

7. Defrost Function Button
8. Reheat Function Button
9. Removable Crumb Tray
10. Cord Wrap (underneath)



Figure 2: Top view of the toaster, showing the two extra-wide toasting slots designed to accommodate various bread types, including

bagels.



Figure 3: Rear view of the toaster, illustrating the removable crumb tray for easy cleaning. The tray slides out from the back.

SETUP

1. Unpack the toaster and remove all packaging materials.
2. Place the toaster on a stable, heat-resistant surface, away from flammable materials.
3. Ensure the crumb tray is properly inserted into the back of the toaster.
4. Unwind the power cord from the cord wrap located underneath the unit.
5. Plug the power cord into a standard 120V AC electrical outlet.
6. Before first use, operate the toaster without bread on the highest setting (6) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal.

7. Allow the toaster to cool completely before its first actual use with food.

OPERATING INSTRUCTIONS

General Toasting

1. Insert slices of bread or other items into the toasting slots.
2. Use the **+-** buttons on the LED display to select your desired shade setting (1-6). Setting 1 is the lightest, 6 is the darkest.
3. Press the high-lift lever down until it locks into place. The toaster will begin toasting, and the digital countdown timer will display the remaining time.
4. When the toasting cycle is complete, the toast will automatically pop up.
5. If the toast is not done to your preference, you can lower the lever again for a short additional cycle, or use the Reheat function.

Special Functions

- **Bagel Function:** Insert bagels into the slots. Select your desired shade setting. Press the **BAGEL** button. The indicator light for Bagel will illuminate. Press the high-lift lever down. This function toasts the cut side of the bagel while gently warming the outer side.
- **Defrost Function:** Insert frozen bread into the slots. Select your desired shade setting. Press the **DEFROST** button. The indicator light for Defrost will illuminate. Press the high-lift lever down. This function thaws and then toasts frozen items.
- **Reheat Function:** Insert already toasted but cooled bread into the slots. Press the **REHEAT** button. The indicator light for Reheat will illuminate. Press the high-lift lever down. This function warms toast without further browning.
- **Cancel Function:** To stop the toasting cycle at any time, press the **CANCEL** button. The toast will immediately pop up.

Digital Countdown Timer

The integrated digital countdown timer on the LED display shows the remaining time for the current toasting cycle. This allows you to monitor the progress of your toast and plan your meal accordingly.

Your browser does not support the video tag.

Video 1: Demonstration of the Kalorik 2-Slice Toaster with LCD Display in use, showing the digital countdown timer and various functions.
This video illustrates how to operate the toaster for different items.

Your browser does not support the video tag.

Video 2: A user review demonstrating the toaster's features, including the wide slots and ease of use. This video provides a practical overview of the toaster's functionality.

MAINTENANCE & CLEANING

Always unplug the toaster from the electrical outlet and allow it to cool completely before cleaning.

Cleaning the Crumb Tray

1. Locate the removable crumb tray at the back of the toaster.
2. Pull the tray out to remove it.
3. Discard accumulated crumbs.
4. Wipe the tray clean with a damp cloth and dry thoroughly.

5. Slide the crumb tray back into the toaster until it locks securely.

Note: For thorough cleaning, you may also gently shake the toaster upside down over a trash can to remove any crumbs that may have fallen outside the tray.

Cleaning the Exterior

- Wipe the exterior of the toaster with a soft, damp cloth.
- Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface.
- Ensure the toaster is completely dry before plugging it back in or storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure toaster is securely plugged into a working outlet. Check household circuit breaker.
Toast is too light/dark.	Shade setting is too low/high.	Adjust the shade setting using the +- buttons. Experiment to find your preferred setting.
Food stuck in slots.	Oversized food item.	Unplug the toaster and allow it to cool. Carefully remove the food using non-metallic utensils. Do not force.
Smoke coming from toaster.	Crumbs accumulated; food item burning.	Immediately press CANCEL and unplug. Clean the crumb tray. If food is burning, remove it carefully once cooled.

SPECIFICATIONS

- **Brand:** Kalorik
- **Model Number:** TO52789BKS13
- **Color:** Black
- **Material:** Plastic
- **Product Dimensions:** 10.83"D x 6.89"W x 7.76"H
- **Wattage:** 850 watts
- **Number of Slices:** 2
- **Shade Settings:** 6 (Variable Browning Control)
- **Voltage:** 120 Volts
- **Item Weight:** 2.87 Pounds
- **UPC:** 848052005716

WARRANTY & SUPPORT

This Kalorik product is covered by a 1-year limited warranty from the date of purchase. This warranty covers defects in material and workmanship. For warranty claims or technical support, please refer to the contact information provided on the official Kalorik website or your purchase documentation.

For further assistance, please visit the [Kalorik Store on Amazon](#).

