

[Manuals.plus](#) /

> [ACTIVLIFE](#) /

> ACTIVLIFE 3' Shaft Pole Extension for RYOBI 18V Cordless Pole Saw P4360 User Manual

ACTIVLIFE 99988002034

ACTIVLIFE 3' Shaft Pole Extension User Manual

For RYOBI 18V Cordless Pole Saw P4360

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your ACTIVLIFE 3' Shaft Pole Extension, designed specifically for the RYOBI 18V Cordless Pole Saw P4360. Please read this manual thoroughly before use to ensure safe and efficient operation.

PRODUCT OVERVIEW

The ACTIVLIFE 3' Shaft Pole Extension is an accessory designed to increase the reach of your RYOBI 18V Cordless Pole Saw P4360, allowing you to trim higher branches without the need for a ladder. It is constructed for durability and seamless integration with the specified pole saw model.



Image: The ACTIVLIFE 3-foot pole extension, a black cylindrical shaft with white connectors at both ends.

SETUP AND INSTALLATION

Follow these steps to properly attach the pole extension to your RYOBI 18V Cordless Pole Saw P4360:

1. **Ensure Safety:** Before beginning, ensure the RYOBI 18V Cordless Pole Saw P4360 is turned off and the battery pack is removed to prevent accidental startup.
2. **Prepare Pole Saw:** Locate the connection point on your RYOBI pole saw where extensions are typically attached. This is usually at the base of the saw head or the top of the main pole.
3. **Align Extension:** Take the ACTIVLIFE 3' Shaft Pole Extension. Align the male end of the extension with the female receptacle on the pole saw. The connectors are designed for a secure fit.
4. **Connect Securely:** Push the extension firmly into place until it clicks or locks. Some models may require twisting a collar or tightening a screw mechanism. Refer to your RYOBI pole saw's original manual for specific connection details if unsure.
5. **Verify Connection:** Gently pull on the extension to ensure it is securely fastened and does not wobble. A stable connection is crucial for safe operation.

6. **Attach Lower Pole (if applicable):** If your pole saw has a modular design, attach the lower pole section to the other end of the ACTIVLIFE extension, following the same secure connection procedure.
7. **Reinsert Battery:** Once the extension is securely installed, reinsert the battery pack into your RYOBI pole saw.

Always ensure all connections are tight and secure before operating the pole saw with the extension.

OPERATING INSTRUCTIONS

The ACTIVLIFE 3' Shaft Pole Extension integrates seamlessly with your RYOBI 18V Cordless Pole Saw P4360. Operate the combined unit as you would the pole saw alone, keeping the increased length in mind.

- **Maintain Balance:** The added length will shift the center of gravity. Hold the pole saw firmly with both hands, maintaining a balanced stance.
- **Clear Work Area:** Ensure the area around and beneath the cutting zone is clear of people, pets, and obstacles.
- **Proper Cutting Technique:** Use smooth, controlled movements. Avoid forcing the saw. Let the saw's speed do the work.
- **Overhead Work:** Be especially cautious when cutting overhead. Watch for falling branches and debris. Wear appropriate personal protective equipment (PPE), including a hard hat, safety glasses, gloves, and hearing protection.
- **Electrical Hazards:** Never operate near power lines or electrical wires. The extension increases your reach, making accidental contact more likely if not careful.
- **Weather Conditions:** Avoid using the pole saw in wet conditions or during strong winds.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your pole extension.

- **Cleaning:** After each use, wipe down the extension shaft with a clean, damp cloth to remove sap, dirt, and debris. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Regularly inspect the extension for any signs of damage, cracks, or wear, especially around the connection points. Ensure all locking mechanisms are functioning correctly.
- **Storage:** Store the pole extension in a clean, dry place, away from direct sunlight and extreme temperatures. If detaching from the pole saw, store it in a manner that prevents bending or damage.
- **Lubrication:** The extension itself typically does not require lubrication. Refer to your RYOBI pole saw manual for maintenance of the saw unit.

TROUBLESHOOTING

If you encounter issues with your ACTIVLIFE 3' Shaft Pole Extension, consider the following:

- **Extension Wobbles After Connection:**
 - Ensure the extension is fully inserted and the locking mechanism (if any) is engaged.
 - Check for debris in the connection points that might prevent a secure fit.
 - Inspect the connectors on both the extension and the pole saw for damage or wear.
- **Difficulty Attaching/Detaching:**

- Ensure alignment is correct. Do not force the connection.
- Check for any obstructions or bent components.

- **Reduced Performance of Pole Saw:**

- The extension itself does not affect the saw's motor performance. Check the pole saw's battery charge, chain sharpness, and other factors as per its own manual.
- Ensure the connection is secure, as a loose connection might cause instability during operation.

For issues not resolved by these steps, or for problems related to the RYOBI pole saw itself, consult the RYOBI pole saw's user manual or contact RYOBI customer support.

SPECIFICATIONS

Brand	ACTIVLIFE
Model Number	99988002034
ASIN	B0DVC6K6BT
Compatibility	RYOBI 18V Cordless Pole Saw P4360
Length	3 feet (approx. 0.91 meters)

WARRANTY AND SUPPORT

Specific warranty details for the ACTIVLIFE 3' Shaft Pole Extension are not provided within this manual. For warranty information, product support, or to inquire about replacement parts, please refer to the product packaging or visit the official ACTIVLIFE website. You may also contact the seller directly through the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DVC6K6BT>

More documents and user manuals: <https://manuals.plus/>