

[Manuals.plus](#) /

› [Canon](#) /

› Canon PIXMA MegaTank G4780 All-in-One Printer Instruction Manual

Canon G4780

Canon PIXMA MegaTank G4780 All-in-One Printer Instruction Manual

Model: G4780

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Canon PIXMA MegaTank G4780 All-in-One Printer. This device is designed for home and office use, offering print, scan, copy, and fax functionalities with high-yield ink tanks and wireless connectivity. Please read this manual thoroughly before using the printer and keep it for future reference.



Image: Front view of the Canon PIXMA MegaTank G4780 All-in-One Printer, showing its compact design and front control panel.

1. SETUP

1.1 Unboxing and Initial Preparation

Carefully remove the printer and all accessories from the packaging. Ensure all protective tapes and packing materials are removed from the printer's exterior and interior. Refer to the quick start guide for visual instructions on tape removal.

1.2 Ink Filling

The PIXMA G4780 uses high-yield ink bottles. Follow these steps to fill the ink tanks:

1. Open the ink tank covers located on the front of the printer.
2. Uncap the corresponding color ink bottle (Black, Cyan, Magenta, Yellow).
3. Align the bottle nozzle with the inlet of the correct ink tank and gently insert it. The ink will flow automatically. Do not squeeze the bottle.
4. Once the tank is full, remove the bottle and recap it. Close the ink tank cover securely.

5. Repeat for all colors.



Image: The Canon PIXMA G4780 printer displayed with its four high-yield ink bottles (Black, Cyan, Magenta, Yellow) ready for filling.

1.3 Power On and Initial Configuration

Connect the power cord to the printer and a wall outlet. Press the power button. Follow the on-screen instructions on the printer's display for initial setup, including language selection and date/time settings.

1.4 Software and Driver Installation

Insert the provided installation CD into your computer or download the latest drivers and software from the official Canon website. Follow the on-screen prompts to install the necessary software for printing, scanning, and faxing functions.

1.5 Wireless Connection

To connect your printer to a Wi-Fi network:

1. On the printer's control panel, navigate to the Wi-Fi setup menu.
2. Select your wireless network (SSID) from the list.

3. Enter the network password (WPA/WPA2 key).
4. Confirm the connection. The Wi-Fi indicator on the printer will illuminate when connected.

The printer supports various wireless printing options including AirPrint, Mopria, Canon Print Service (Android), and Direct Wireless.



Image: A graphic illustrating three simple steps to get the printer ready: Establish Connection, Install Driver, and Ready To Print.

2. OPERATING THE PRINTER

2.1 Printing Documents

Load paper into the rear tray or front cassette. From your computer or mobile device, select the Canon G4780 printer. Adjust print settings such as paper size, type, and quality. For double-sided printing, enable the **Auto Duplex Printing** option in your printer settings to save paper and time.



Image: The Canon PIXMA G4780 printer with paper loaded in the rear tray and a printed document emerging from the front output tray.

2.2 Scanning Documents

The printer features both a flatbed scanner and an Automatic Document Feeder (ADF).

- **Flatbed Scanning:** Place the document face-down on the scanner glass. Use the Canon IJ Scan Utility software on your computer or the printer's control panel to initiate a scan.
- **ADF Scanning:** For multiple pages, load up to 35 sheets into the ADF tray. The ADF allows for quick batch scanning, copying, or faxing without manual page turning.



Image: The Canon PIXMA G4780 printer with multiple sheets of paper loaded into the Automatic Document Feeder (ADF) for scanning or copying.



Auto Document Feeder (ADF)

Easily load up to 35 sheets of document originals for batch scanning and copying, eliminating the need for repeated lid opening and closing.



Auto Duplex Printing

Enjoy heightened productivity and ease of use by printing on both sides of paper automatically.

Image: A graphic highlighting the Auto Document Feeder (ADF) for batch scanning and Auto Duplex Printing for automatic double-sided printing.

2.3 Copying Documents

Place your document on the scanner glass or in the ADF. On the printer's control panel, select the "Copy" function. Adjust settings such as number of copies, paper size, and copy quality. Press the Start button to begin copying.

2.4 Faxing Documents

Load the document into the ADF or place it on the scanner glass. On the printer's control panel, select the "Fax" function. Enter the recipient's fax number and press the Start button. Ensure your printer is connected to a telephone line for fax functionality.

2.5 Mobile and Cloud Printing

Utilize the Canon PRINT Inkjet/SELPHY app for seamless printing and scanning from your smartphone or tablet. The printer also supports cloud services, allowing you to print directly from various online platforms.

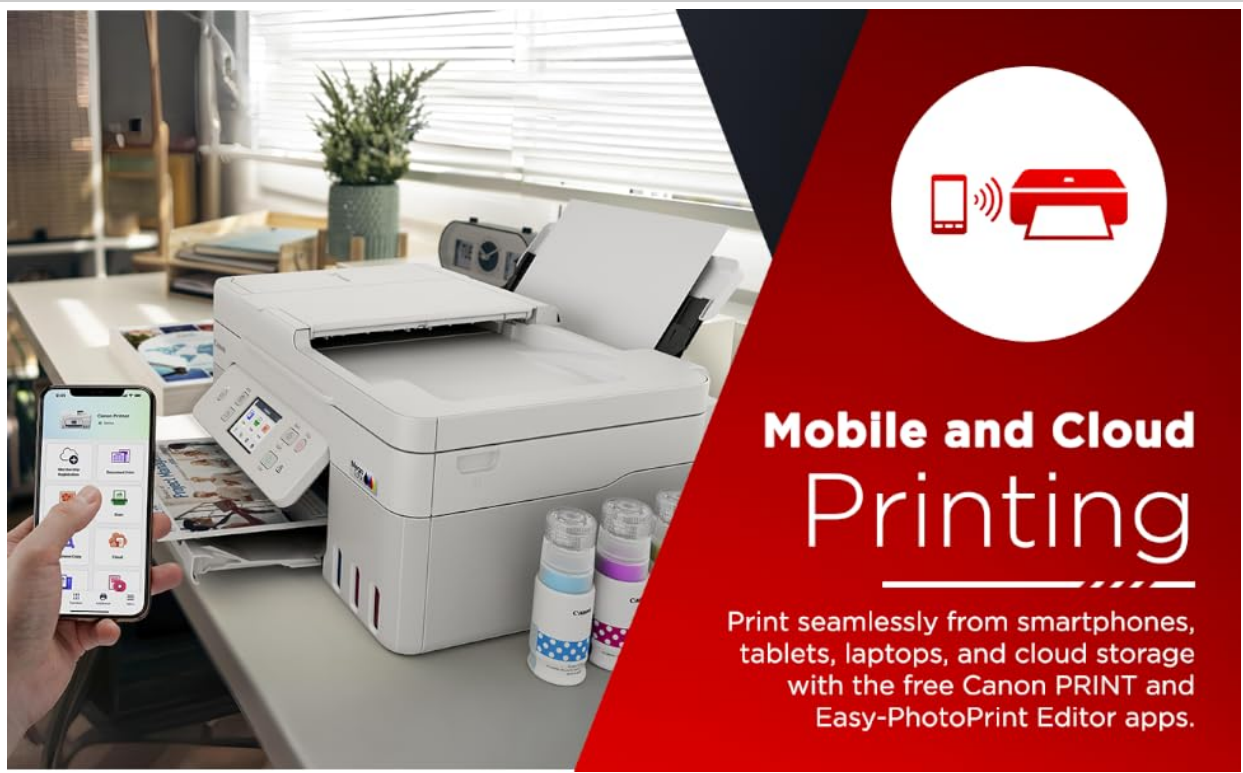


Image: A graphic illustrating the mobile and cloud printing capabilities, showing a smartphone connected wirelessly to the printer.

3. MAINTENANCE

3.1 Checking Ink Levels

Regularly check the ink levels through the printer's display panel or the Canon PRINT app. Refill ink tanks promptly when levels are low to prevent air from entering the ink tubes, which can affect print quality.



Image: A graphic showcasing the high page yield ink bottles and stacks of printed pages, emphasizing cost-effective printing.

3.2 Print Head Cleaning

If print quality declines (e.g., streaks, faded colors), perform a print head cleaning. This can be done from the printer's maintenance menu or through the printer driver on your computer. A deep cleaning may be required for more stubborn clogs.

3.3 Paper Jam Resolution

If a paper jam occurs, the printer's display will show an error message. Carefully open the printer covers and remove any jammed paper following the instructions on the screen or in the online manual. Avoid tearing the paper to prevent small pieces from remaining inside.

3.4 General Cleaning

Wipe the exterior of the printer with a soft, damp cloth. Clean the scanner glass regularly to ensure clear scans and copies. Avoid using abrasive cleaners or solvents.

4. TROUBLESHOOTING

This section addresses common issues you might encounter with your Canon PIXMA G4780 printer.

4.1 Printer Not Responding

- Ensure the printer is powered on and connected to the computer or network.
- Check all cable connections (USB, power, network).
- Restart both the printer and your computer/router.
- Verify that the correct printer is selected in your application's print dialog.

4.2 Poor Print Quality

- Check ink levels and refill if necessary.
- Perform a print head cleaning and nozzle check from the printer's maintenance menu.
- Ensure you are using the correct paper type and quality settings for your print job.
- If lines or streaks persist, a print head alignment may be required.

4.3 Paper Feed Issues

- Ensure paper is loaded correctly and not exceeding the maximum capacity of the tray.
- Fan the paper stack before loading to prevent sheets from sticking together.
- Check for any foreign objects or small paper scraps in the paper path.

4.4 Network Connection Problems

- Verify your Wi-Fi router is functioning correctly.
- Ensure the printer is within range of your Wi-Fi router.
- Re-enter the Wi-Fi password on the printer.
- Try connecting via USB temporarily to ensure the printer itself is functional.

5. SPECIFICATIONS

Feature	Detail
---------	--------

Model Name	PIXMA G4780
Functions	Print, Scan, Copy, Fax
Connectivity Technology	USB, Wi-Fi
Printing Technology	Inkjet
Printer Output	Colour
Max Print Resolution (Color)	4800 x 1200 dpi
Max Print Speed (Monochrome)	11 ppm
Max Print Speed (Colour)	6 ppm
Duplex Printing	Automatic
Auto Document Feeder (ADF)	Yes
Scanner Type	Sheetfed
Item Weight	7500 Grams
Item Dimensions (D x W x H)	36.3D x 41.6W x 21.2H Centimeters
Box Contents	Ink Bottles

6. WARRANTY AND SUPPORT

6.1 Warranty Information

Your Canon PIXMA MegaTank G4780 printer comes with a **2-year or 30,000 prints** (whichever is earlier) onsite warranty from the date of purchase. This warranty covers manufacturing defects only and includes print heads. Please retain your purchase receipt for warranty claims.

For warranty service, contact Canon India Pvt Limited. Their contact information is: 214-218, 2nd floor, Narain Manzil, Barakhamba Road, Connaught Place, New Delhi-110001, India.

6.2 Customer Support

For technical assistance, troubleshooting, or service requests, please visit the official Canon support website or contact their customer service. Online resources often include FAQs, driver downloads, and detailed digital manuals.