

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Philips](#) /

> Philips HD2582/90 Two Slice Pop-Up Toaster with Bun Warmer Instruction Manual

## Philips HD2582/90

# Philips HD2582/90 Two Slice Pop-Up Toaster with Bun Warmer Instruction Manual

Model: HD2582/90

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Philips HD2582/90 Two Slice Pop-Up Toaster with Bun Warmer. Please read this manual thoroughly before using the appliance and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

- Always connect the appliance to a grounded wall socket.
- Do not immerse the toaster in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not operate the appliance with a damaged cord or plug.
- Ensure the crumb tray is properly inserted before use.
- Never insert metal objects into the toaster slots.
- Unplug the toaster when not in use and before cleaning.
- Do not cover the toaster during operation.
- Avoid placing the toaster near flammable materials.

## PRODUCT COMPONENTS

Familiarize yourself with the parts of your Philips HD2582/90 toaster:

- Toasting Slots (2)
- Browning Control Dial (8 settings)
- Cancel Button
- High Lift Lever
- Bun Warmer Rack

- Removable Crumb Tray
- Power Cord



Image: The Philips HD2582/90 toaster in black, featuring two toasting slots with bread inserted, a control dial, and a separate bun warmer rack. This image illustrates the main components of the toaster.

## SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the toaster and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from curtains or other flammable materials. Ensure adequate ventilation around the appliance.
3. **Initial Operation (Burn-off):** Before toasting bread for consumption, operate the toaster empty for a few cycles at the highest browning setting. This helps burn off any manufacturing residues and odors. A slight smell or smoke is normal during this process. Ensure the room is well-ventilated.
4. **Crumb Tray:** Ensure the removable crumb tray is correctly inserted at the bottom of the toaster.
5. **Power Connection:** Plug the power cord into a suitable grounded electrical outlet (240V, 830W).

## OPERATING INSTRUCTIONS

### Toasting Bread

1. **Insert Bread:** Place up to two slices of bread into the toasting slots. The self-centering feature will hold the bread in

place for even browning.

2. **Select Browning Level:** Turn the browning control dial to your desired setting (1-8). Setting 1 is for light toast, and setting 8 is for dark toast.
3. **Start Toasting:** Press the high lift lever down until it locks into place. The toaster will begin toasting.
4. **Stop Toasting:** The toast will automatically pop up when the selected browning level is reached. To stop toasting at any time, press the "STOP" button.



**Stop at any moment you like  
by pressing the stop button**

Image: A hand pressing the "STOP" button on the side of the Philips HD2582/90 toaster. This demonstrates how to manually stop the toasting process.

5. **Remove Toast:** Use the high lift lever to safely raise smaller pieces of toast for easy removal without touching hot surfaces.



## High lift function to easily remove small pieces of bread

Image: A hand operating the high lift lever on the Philips HD2582/90 toaster, showing how to safely retrieve smaller items from the toasting slots.

### Using the Bun Warmer

1. **Attach Bun Warmer:** Place the bun warmer rack onto the top of the toaster slots.
2. **Place Items:** Place buns, pastries, or rolls on the bun warmer rack.
3. **Activate:** Set the browning control to a low setting (e.g., 1 or 2) and press the high lift lever down.
4. **Monitor:** Monitor the warming process closely to prevent burning. The bun warmer is designed for gentle warming, not toasting.
5. **Remove:** Once warmed, carefully remove the items from the rack.

### CARE AND MAINTENANCE

- **Cleaning the Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Cleaning the Crumb Tray:**

- a. Unplug the toaster and allow it to cool completely.
- b. Pull out the removable crumb tray from the bottom of the toaster.
- c. Discard crumbs and wipe the tray clean with a damp cloth.
- d. Ensure the tray is completely dry before reinserting it.



## Removable crumb tray for easy cleaning

Image: A hand pulling out the removable crumb tray from the bottom of the Philips HD2582/90 toaster, illustrating the cleaning process.

- **Storage:** When not in use, store the toaster in a clean, dry place. The included dust cover can be used to protect the appliance.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet not working; circuit breaker tripped.	Ensure the toaster is securely plugged in. Test the outlet with another appliance. Check your household circuit breaker.

Problem	Possible Cause	Solution
Toast is too light or too dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
Smoke or burning smell.	Crumbs accumulated in the toaster; food stuck in slots.	Unplug the toaster and let it cool. Remove and clean the crumb tray. Carefully remove any stuck food (do not use metal objects).
Lever does not stay down.	Toaster is not plugged in; internal mechanism issue.	Ensure the toaster is plugged into a live outlet. If the issue persists, contact customer support.

## SPECIFICATIONS

<b>Brand</b>	Philips
<b>Model Number</b>	HD2582/90
<b>Type</b>	Two Slice Pop-Up Toaster with Bun Warmer
<b>Wattage</b>	830 Watts
<b>Voltage</b>	240 Volts
<b>Material</b>	Plastic
<b>Color</b>	Black
<b>Product Dimensions (D x W x H)</b>	18.4D x 30.4W x 21.4H Centimeters
<b>Item Weight</b>	1.14 kg (1140 Grams)
<b>Special Features</b>	Warming Rack, 8 Browning Settings, Cancel Button, High Lift Function, Removable Crumb Tray, Self-Centering Slots
<b>Included Components</b>	Pop-up toaster, Dust cover

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Philips website. Keep your purchase receipt as proof of purchase for warranty claims.

You can also find more information and support on the [Philips Store on Amazon](#).

