

100012589/N24067-CH

# Instruction Manual

Original TV Base Stand Legs for ONN Roku Smart TV

Model: 100012589/N24067-CH

## 1. INTRODUCTION

---

This manual provides essential information for the proper installation and use of your new TV base stand legs. These legs are designed specifically for select ONN Roku Smart TV models to provide stable tabletop support.

Please read this manual thoroughly before installation to ensure correct assembly and to prevent damage to your television or the stand.

## 2. COMPATIBILITY

---

These TV base stand legs are specifically compatible with the **ONN Roku Smart TV 32" Model 100012589/N24067-CH**.

**Important:** To verify your TV model, locate the sticker on the back of your television or navigate to the 'Settings' menu and find the 'About TV' option. Ensure your model number matches **100012589/N24067-CH** for proper fit and stability.

If your TV model is not listed or you are unsure about compatibility, please contact the manufacturer or seller for assistance before attempting installation.

## 3. PACKAGE CONTENTS

---

Please check the package to ensure all components are present and undamaged:

- 1 x Left TV Base Stand Leg
- 1 x Right TV Base Stand Leg
- Required mounting screws



Image: The two TV base stand legs included in the package, shown from a top-down perspective. One leg is slightly lighter in shade, indicating a potential left/right distinction or manufacturing variation.

## 4. SETUP AND INSTALLATION

---

A Phillips head screwdriver is required for installation (not included).

1. **Prepare the TV:** Carefully place your ONN Roku Smart TV face down on a soft, clean, and stable surface (e.g., a blanket or towel on a table) to prevent screen damage. Ensure the surface is large enough to support the entire TV.
2. **Identify Leg Orientation:** Each stand leg is designed for a specific side (left or right). Observe the shape and screw holes on the top of each leg to match them with the corresponding mounting slots on the bottom of your TV. The legs typically angle outwards from the TV.



Image: A pair of black TV stand legs, viewed from an angle that clearly shows the top mounting plates with screw holes. This helps in identifying the correct orientation for installation.

3. **Attach the Legs:** Align the screw holes on the top of each stand leg with the corresponding screw holes on the bottom of your TV.



Image: A close-up view of the mounting points on the TV stand legs, highlighting the precise alignment of screw holes for secure attachment to the television.

4. **Secure with Screws:** Insert the provided screws into the aligned holes and tighten them securely with a

Phillips head screwdriver. Do not overtighten, as this may strip the screws or damage the TV/stand. Ensure both legs are firmly attached and do not wobble.

5. **Position the TV:** Carefully lift the TV and place it upright on a flat, stable surface, such as a TV stand or entertainment center. Ensure the TV is balanced and stable before releasing it.



Image: A side profile of a television with the base stand legs successfully installed. The legs are circled in red to highlight their position and appearance when attached to the TV.

## 5. OPERATING CONSIDERATIONS

---

Once installed, the TV stand legs provide a fixed tabletop mount for your television. There are no adjustable or moving parts.

- Ensure the TV is placed on a level and sturdy surface to prevent tipping.
- Do not place heavy objects on the TV or stand.
- Keep the TV and stand away from sources of heat or direct sunlight.
- For safety, consider securing the TV to the wall using an anti-tip strap, especially in households with children or pets.

## 6. MAINTENANCE

---

The TV base stand legs require minimal maintenance.

- **Cleaning:** Wipe the legs with a soft, dry cloth to remove dust. For stubborn marks, a slightly damp cloth can be used, followed by drying. Avoid abrasive cleaners or solvents.

- **Inspection:** Periodically check the screws securing the legs to the TV to ensure they remain tight. Retighten if necessary, but do not overtighten.

## 7. TROUBLESHOOTING

| Problem                         | Possible Cause   | Solution   |
|---------------------------------|--|--|
| Legs do not fit the TV.         | Incorrect TV model or leg orientation.                   | Verify your TV model number (100012589/N24067-CH). Ensure the left and right legs are correctly oriented and aligned with the TV's mounting holes. |
| TV feels unstable on the stand. | Screws are loose or not fully tightened. Uneven surface. | Ensure all screws are securely tightened. Place the TV on a flat, level, and sturdy surface.   |
| Missing parts.                  | Packaging error.   | Contact the seller or manufacturer immediately to report missing components.   |

## 8. SPECIFICATIONS

|                            |   |
|----------------------------|---|
| <b>Brand:</b>              | Generic   |
| <b>Model Number:</b>       | 100012589/N24067-CH   |
| <b>Compatible TV Size:</b> | 32 - 40 Inches (specifically ONN Roku Smart TV 32" Model 100012589/N24067-CH) |
| <b>Mounting Type:</b>      | Tabletop Mount  |
| <b>Movement Type:</b>      | Fixed   |
| <b>Material:</b>           | Acrylonitrile Butadiene Styrene (ABS)   |
| <b>Color:</b>              | Black   |
| <b>Item Weight:</b>        | Approximately 1 pound   |

## 9. WARRANTY AND SUPPORT

Information regarding warranty coverage for this product is typically provided by the seller or manufacturer at the time of purchase. Please refer to your purchase documentation or contact the seller directly for specific warranty terms and conditions.

For technical support, compatibility inquiries, or assistance with missing/damaged parts, please contact the seller or manufacturer through the platform where the product was purchased. Provide your order number and TV model number for faster service.