

[Manuals.plus](#) /

> [XOKOTAKI](#) /

> XOKOTAKI Double Coat Rack with Wheels Instruction Manual

XOKOTAKI B0DVGXLBP7

XOKOTAKI Double Coat Rack Instruction Manual

Model: B0DVGXLBP7

Brand: [XOKOTAKI](#)

PRODUCT OVERVIEW

The XOKOTAKI Double Coat Rack is a freestanding, expandable, and sturdy clothes rack designed for efficient organization in hallways and homes. It features a double top bar for hanging garments and lower bars for additional storage. Equipped with wheels, it offers easy mobility, and its height and length are adjustable to suit various needs.



Image: The XOKOTAKI Double Coat Rack, showcasing its dual hanging bars and lower storage shelf, fully assembled and in use.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. The package should contain the following items:

- Main vertical support poles (4 pieces)
- Horizontal top bars (2 pieces)
- Lower horizontal support bars (2 pieces)
- Base frames with wheels (2 pieces)

- Connecting joints and fasteners
- Assembly instructions (if included separately)



360° WHEELS ROTATING

They feature a **brake** to keep them from moving.

Image: A visual representation of the coat rack's individual parts and how they connect during assembly.

SETUP INSTRUCTIONS

Assembly

Follow these steps for quick and easy assembly:

1. Unpack all components and lay them out on a clean, flat surface.
2. Attach the wheels to the base frames. Ensure they are securely fastened.
3. Insert the lower vertical support poles into the base frames.
4. Connect the lower horizontal support bars between the two base frames.
5. Slide the upper vertical support poles into the lower ones.
6. Attach the two top horizontal bars to the upper vertical poles. Ensure the anti-fall stoppers are correctly

positioned at the ends of the top bars.

7. Adjust the height and length as desired (refer to Operating Instructions).
8. Ensure all connections are tight and the rack is stable before use.



EXTENSIBLE

Its extendable structure allows you to adjust the height and length according to your needs.



Image: The coat rack demonstrating its extendable structure, with dimensions for both closed and open configurations.

OPERATING INSTRUCTIONS

Adjusting Height and Length

The XOKOTAKI Double Coat Rack is designed with an extendable structure, allowing you to customize its dimensions. To adjust the height, locate the locking mechanisms on the vertical poles, release them, extend or retract the poles to the desired height, and then secure the locks. Similarly, to adjust the length of the top bars, release the locking mechanisms, slide the bars to the desired width, and re-secure the locks. Always ensure the rack is stable after adjustment.

Using the Wheels

The rack is equipped with 360-degree rotating wheels for easy movement. To move the rack, simply push or pull it to the desired location. Some wheels may include a brake mechanism. To lock the wheels and prevent movement, press down on the brake lever. To unlock, lift the lever.



STAINLESS STEEL CLAD

LOWER STORAGE



ANTI-FALL STOP

Image: Detail of the rack's wheels, showing their rotational capability and the integrated brake for stability.

MAINTENANCE

To ensure the longevity and optimal performance of your XOKOTAKI Double Coat Rack, follow these maintenance guidelines:

- **Cleaning:** Wipe down the rack periodically with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as they may damage the finish.
- **Inspection:** Regularly check all screws, bolts, and connecting joints to ensure they are tight. Re-tighten if necessary to maintain stability.

- **Weight Distribution:** Distribute the weight of garments evenly across both hanging bars to prevent tipping or strain on the frame.
- **Wheel Care:** Keep the wheels free of dust and debris to ensure smooth movement.

TROUBLESHOOTING

If you encounter any issues with your coat rack, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rack is wobbly or unstable	Loose connections; uneven weight distribution; damaged part	Check and tighten all screws and joints. Redistribute clothes evenly. Inspect for damaged parts and contact support if necessary.
Wheels not rolling smoothly	Debris in wheels; brake engaged	Clean any hair or debris from the wheels. Ensure the wheel brakes are disengaged.
Height/length adjustment is difficult	Locking mechanism not fully released; dirt in poles	Ensure locking mechanisms are fully disengaged. Clean the inner and outer surfaces of the adjustable poles.
Clothes slipping off ends of bars	Anti-fall stoppers not installed or missing	Ensure the anti-fall stoppers are securely in place at the ends of the top bars.

SPECIFICATIONS

Key specifications for the XOKOTAKI Double Coat Rack:

Feature	Detail
Brand	XOKOTAKI
Model Number (ASIN)	B0DVGXLBP7
Product Dimensions (Max)	155D x 145W x 43H centimetres
Product Dimensions (Min)	90D x 105W x 43H centimetres
Load Capacity	Up to 60 hangers
Assembly Required	Yes
Wheels	360-degree rotating with brake



MINIMALIST DESIGN

Give you a touch of modernity

Image: A detailed view of the rack's features, including the stainless steel clad bars, the functional lower storage, and the anti-fall stoppers designed to keep hangers in place.

WARRANTY AND SUPPORT

XOKOTAKI is committed to providing quality products. For information regarding warranty coverage, returns, or technical support, please refer to the purchase platform or contact XOKOTAKI customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the product page on Amazon: [XOKOTAKI Double Coat Rack](#)