

[Manuals.plus](#) /

> [ONN](#) /

> ONN. 10.4" Tablet Pro, Gen 3, 2023, MTK Octa-Core, 64GB eMMC, 4GB RAM, 10.4" (2000x1200) Touchscreen, Android Tablet, Wi-Fi, Dual Cameras, Gray, TBMMS100110603 User Manual

ONN TBMMS100110603

ONN. 10.4" Tablet Pro, Gen 3 User Manual

Model: TBMMS100110603

INTRODUCTION

Welcome to the user manual for your new ONN. 10.4" Tablet Pro, Gen 3. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. Designed for seamless performance and entertainment, this tablet features a powerful Octa-Core processor, a vibrant 10.4-inch touchscreen, dual cameras, and runs on Android 13. Please read this manual thoroughly to ensure optimal use and longevity of your tablet.

WHAT'S IN THE BOX

 
Upon unboxing your ONN. 10.4" Tablet Pro, Gen 3, please verify that all the following items are included:

- ONN. 10.4" Tablet Pro, Gen 3
- USB-C Charger
- USB-C Cable
- Memory Card Ejection Pin

PRODUCT OVERVIEW

Familiarize yourself with the physical components and general appearance of your tablet.

9:00 AM



Google



Google



Calendar



Kids Space



Play Store



Duo



Figure 1: Front view of the ONN 10.4" Tablet Pro, showing the display with various app icons and the Google search bar.

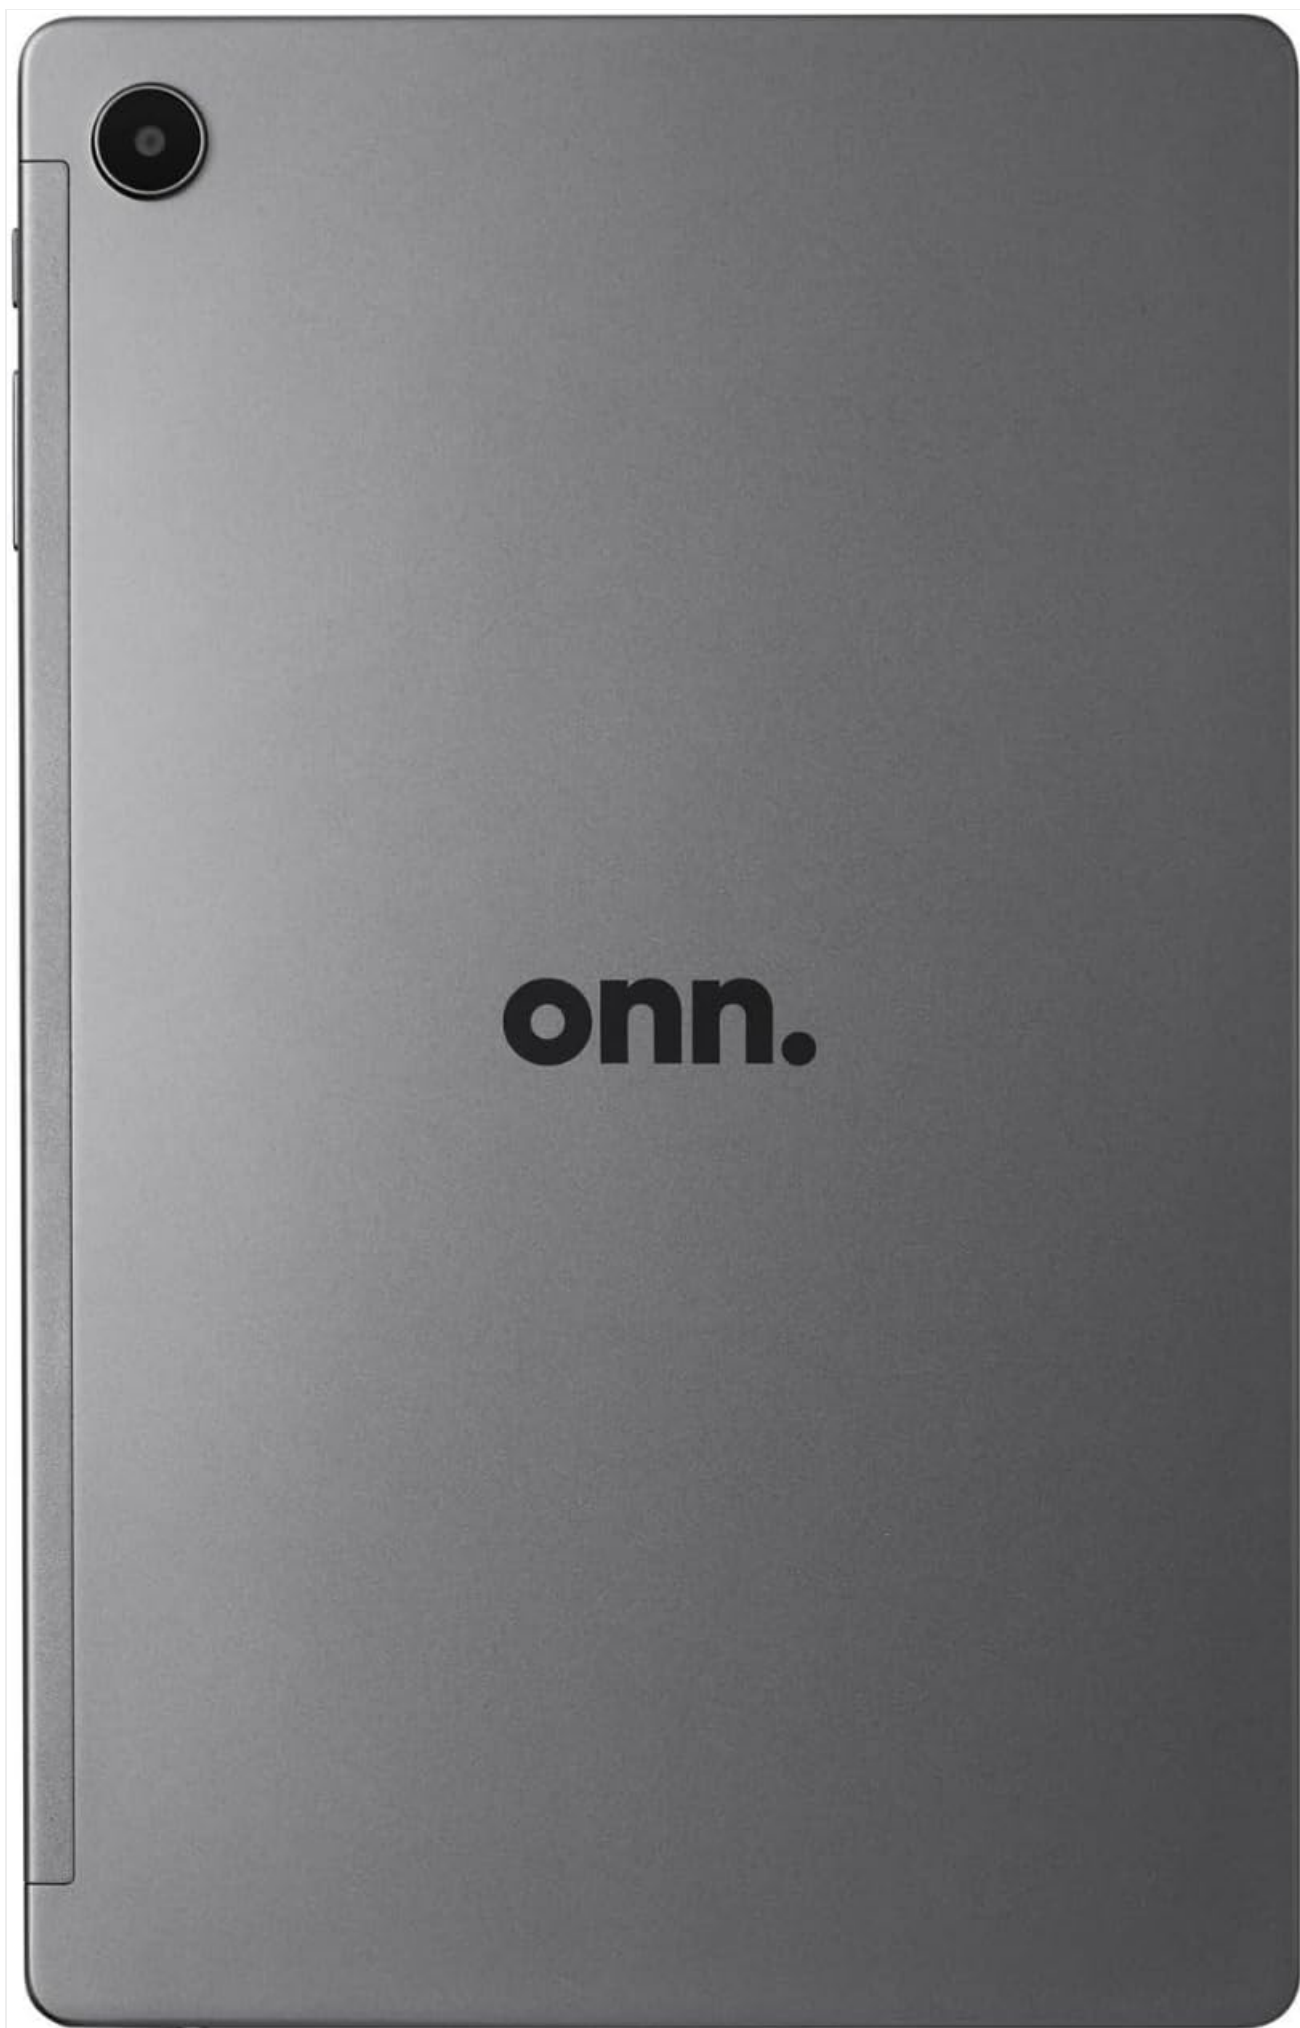


Figure 2: Rear view of the ONN 10.4" Tablet Pro, highlighting the 'onn.' brand logo and the placement of the rear camera.



Figure 3: The ONN 10.4" Tablet Pro in landscape mode, showing the wider view of the home screen interface.

SETUP

Initial Charge

Before first use, it is recommended to fully charge your tablet. Connect the provided USB-C cable to the tablet's charging port and the other end to the USB-C charger. Plug the charger into a power outlet. The charging indicator on the screen will show the charging status.

Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the ONN logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power menu appears. Select "Power off" from the options.
- **To Restart:** From the power menu, select "Restart".

Initial Configuration

The first time you power on your tablet, you will be guided through a setup wizard. Follow the on-screen prompts to:

1. Select your language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one. This is necessary to download apps from the Google Play Store.
4. Set up screen lock (PIN, pattern, or password).
5. Review and accept terms and conditions.

OPERATING YOUR TABLET

Navigation

Your tablet uses a touchscreen for all interactions. Common gestures include:

- **Tap:** To select an item or open an app.
- **Tap and Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through pages or lists.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.

Connecting to Wi-Fi

To connect to the internet:

1. Go to *Settings > Network & internet > Internet*.
2. Turn on Wi-Fi.
3. Select your desired Wi-Fi network from the list.
4. Enter the network password if prompted, then tap *Connect*.

Using Cameras

Your tablet is equipped with dual 5MP cameras (front and rear). Open the Camera app to capture photos or record videos. You can switch between the front and rear cameras within the app interface.

Storage Management

The tablet comes with 64GB of internal storage. If you need more space, you can expand it using a MicroSD card (sold separately). Insert the MicroSD card into the designated slot using the provided ejection pin if necessary. You can manage your storage in *Settings > Storage*.

Google Kids Space & Entertainment Space

Your tablet comes pre-installed with Google Kids Space and Entertainment Space. Google Kids Space offers a safe and engaging environment for children with curated apps, books, and videos. Entertainment Space provides a personalized hub for movies, TV shows, games, and books, making it easy to find content you love.

MAINTENANCE

Cleaning

To clean your tablet, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid using harsh chemicals, abrasive materials, or excessive moisture, as these can damage the screen or internal components.

Software Updates

Periodically check for software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to *Settings > System > System update* to check for and install available updates.

Battery Care

To maximize battery life:

- Avoid extreme temperatures.
- Do not let the battery fully drain frequently.
- Use the original charger and cable.
- Adjust screen brightness to a comfortable level.
- Close unused apps running in the background.

TROUBLESHOOTING

This section addresses common issues you might encounter with your tablet.

Issue	Possible Solution
Tablet won't turn on.	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect.
Apps crashing or slow performance.	Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Restart the tablet. Check available storage.
Screen is unresponsive.	Perform a forced restart by holding the Power button for about 10-15 seconds until the tablet reboots.
Battery drains quickly.	Reduce screen brightness. Close background apps. Disable unnecessary features like GPS or Bluetooth when not in use.

SPECIFICATIONS

Key technical specifications for the ONN. 10.4" Tablet Pro, Gen 3:

Feature	Detail
Model Name	TBMMS100110603
Display Size	10.4 Inches
Screen Resolution	1200 x 2000 Pixels
Processor	MediaTek MTK 8768WA Octa-Core, 2.0 GHz
RAM	3GB
Internal Storage	64GB (expandable via MicroSD)
Operating System	Android 13
Cameras	Front 5MP, Rear 5MP
Battery Life	Up to 17 Hours
Connectivity	2.4G & 5G Wi-Fi
Dimensions (LxWxH)	9.7 x 6.15 x 0.31 inches
Weight	1.35 lbs
Color	Gray

WARRANTY AND SUPPORT

Your ONN. 10.4" Tablet Pro, Gen 3 is covered by a limited warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the duration of coverage and what is covered. For technical support, troubleshooting assistance beyond this manual, or to inquire about warranty claims, please visit the official ONN website or contact their customer service. Keep your proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What type of charger does the ONN TBMMS100110603 10.4-inch Tablet Pro use?

The ONN 10.4" Tablet Pro (Model TBMMS100110603) uses a USB-C charger and a USB-C cable.According to the product manual, the following items are included in the box for charging:USB-C Charger (Power Adapter)USB-C CableTo charge...

[Read full answer](#)