

Strong LEAP-S3+V2

STRONG Android TV 4K UHD Streaming Box

Model: LEAP-S3+V2

Brand: Strong

[Overview](#)[What's in the
Box](#)[Setup](#)[Operating](#)[Support](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)

1. OVERVIEW

The compact STRONG LEAP-S3+ V2 transforms your television into a Smart TV, providing direct access to the Google Play Store. Running on Android 11, this device offers seamless access to a wide array of applications, streaming services, and more, including popular platforms such as Netflix, YouTube, Prime Video, and Disney+.

Its innovative remote control features numeric keys, ideal for convenient IPTV channel selection. Experience stunning 4K UHD resolution, efficient H.265 decoding, and reliable Dual Band Wi-Fi 5 connectivity. The integrated Google Cast functionality allows for easy content sharing from compatible devices. With Dolby Vision Atmos support, the LEAP-S3+ V2 delivers breathtaking image and sound quality. Furthermore, the built-in Google Assistant enables voice control for playback management and content browsing. Connectivity options include USB, Bluetooth 5.0, HDMI 2.1, and an Ethernet port, making this an exceptional entertainment hub.



Image 1.1: The STRONG LEAP-S3+ V2 Streaming Box and its accompanying remote control. The box is white and compact, with the remote control resting on top, showcasing its layout and dedicated app buttons.

2. WHAT'S IN THE BOX

Please check the contents of your package. It should include the following items:

- STRONG LEAP-S3+ V2 Streaming Box
- Remote Control (requires 2 AAA batteries, not included)
- Power Adapter
- HDMI Cable
- Quick Start Guide
- Safety Instructions

3. SETUP

3.1. Connecting the Device

1. **Connect to TV:** Plug one end of the HDMI cable into the HDMI OUT port on the STRONG LEAP-S3+ V2 and the

other end into an available HDMI IN port on your television. Note the HDMI port number (e.g., HDMI 1, HDMI 2) for later selection on your TV.

2. **Connect to Power:** Connect the power adapter to the DC IN port on the streaming box and then plug the adapter into a wall outlet.
3. **(Optional) Connect to Internet via Ethernet:** For a stable wired connection, connect an Ethernet cable from your router to the Ethernet port on the streaming box. If using Wi-Fi, this step can be skipped.
4. **Insert Batteries into Remote:** Open the battery compartment on the back of the remote control and insert 2 AAA batteries, ensuring correct polarity (+/-).



Image 3.1: Visual representation of the setup process, showing the streaming box connected to a TV and an internet source. The steps are: 1) Connect to your TV, 2) Connect to your Internet Box, 3) Start Streaming.

3.2. Initial Setup Wizard

Once connected, turn on your TV and select the correct HDMI input. The STRONG LEAP-S3+ V2 will power on and guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Pair Remote Control:** Follow the on-screen instructions to pair your remote control via Bluetooth. This usually involves pressing specific buttons simultaneously.
3. **Set up with Android Phone (Optional):** You can quickly set up your device using an Android phone. If you choose not to, proceed with manual setup.
4. **Connect to Wi-Fi:** Select your Wi-Fi network from the list and enter the password. If you connected via Ethernet, this step might be skipped.
5. **Google Account Sign-in:** Sign in with your Google account. This is necessary to access the Google Play Store, download apps, and use Google Assistant.
6. **Accept Terms of Service:** Review and accept the Google Terms of Service and Privacy Policy.
7. **Install Recommended Apps:** The system may suggest installing popular apps like Netflix, YouTube, etc. You can

choose which ones to install.

8. **Finish Setup:** Once all steps are completed, you will be taken to the Android TV home screen.

4. OPERATING THE DEVICE

4.1. Remote Control Overview

The remote control is your primary interface for navigating the STRONG LEAP-S3+ V2. Familiarize yourself with its key functions:

- **Power Button:** Turns the device on or off (standby).
- **Navigation Pad (Directional Buttons & OK):** Used to move through menus and select items.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Returns to the Android TV home screen.
- **Google Assistant Button:** Activates voice commands. Press and hold to speak your command.
- **Volume Buttons (+/-):** Adjusts the volume.
- **Mute Button:** Mutes or unmutes the audio.
- **App Shortcut Buttons:** Dedicated buttons for popular streaming services like Netflix, YouTube, Prime Video, and Disney+.
- **Numeric Keys (0-9):** Useful for direct channel selection in IPTV applications.



Image 4.1: The remote control highlighting dedicated buttons for popular streaming applications and the Google Play Store, indicating access to over 5000 applications.

4.2. Navigating Android TV

The Android TV home screen is organized into rows of content. Use the navigation pad on your remote to to:

- Move **Up/Down** to browse different content rows (e.g., "For You", "Your Apps", "Movies", "Shows").
- Move **Left/Right** to select specific apps or content within a row.
- Press the **OK** button to launch an app or select content.

To access all installed applications, navigate to the "Apps" section on the home screen or use the dedicated "Apps" button if available on your remote.

4.3. Streaming Services and Google Play Store

The STRONG LEAP-S3+ V2 provides access to a vast library of streaming content:

- **Pre-installed Apps:** Popular services like Netflix, YouTube, Prime Video, and Disney+ are often pre-installed or easily accessible.
- **Google Play Store:** To download new applications, games, or other content, navigate to the Google Play Store icon on your home screen. You can search for specific apps or browse by category.



Image 4.2: The STRONG LEAP-S3+ V2 transforming a regular TV into a Smart TV, displaying various streaming application icons on the screen, including Netflix, YouTube, Prime Video, and Disney+.

4.4. Chromecast Built-in

The device features Chromecast built-in, allowing you to cast content from your smartphone, tablet, or computer directly to your TV. Ensure your casting device is connected to the same Wi-Fi network as your STRONG LEAP-S3+ V2. Look for the Cast icon (**a square with a Wi-Fi signal in the bottom left corner**) within compatible apps (e.g., YouTube, Netflix mobile apps) to initiate casting.

4.5. Google Assistant

Use Google Assistant for hands-free control and quick content search:

1. Press and hold the **Google Assistant button** on your remote control.

2. Speak your command clearly into the remote's microphone.

Examples of commands:

- "Open Netflix"
- "Play [Movie Title]"
- "Search for action movies"
- "What's the weather?"



Image 4.3: A living room setting with a TV displaying "Dolby Vision Atmos" and "4K UHD" logos, emphasizing the powerful audio and video technology supported by the device.

5. MAINTENANCE

5.1. Cleaning

To maintain the performance and appearance of your device:

- Always unplug the device from the power outlet before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces.
- Do not use liquid cleaners, aerosols, or abrasive cleaning agents, as they may damage the device.
- Keep ventilation openings clear of dust and debris.

5.2. Software Updates

Regular software updates provide new features, performance improvements, and security enhancements. Your device is designed to receive over-the-air (OTA) updates:

- The device will typically notify you when an update is available.

- To manually check for updates, navigate to **Settings > Device Preferences > About > System update**
- Ensure your device is connected to the internet during the update process. Do not power off the device during an update.

6. TROUBLESHOOTING

If you encounter issues with your STRONG LEAP-S3+ V2, refer to the following common solutions:

Problem	Possible Cause / Solution
No Power / Device Not Turning On	◦ Ensure the power adapter is securely connected to the device and the wall outlet. ◦ Try a different power outlet.
No Picture / No Signal on TV	◦ Verify the HDMI cable is securely connected to both the device and the TV. ◦ Ensure your TV is set to the correct HDMI input source. ◦ Try a different HDMI cable or HDMI port on your TV.
Remote Control Not Responding	◦ Check if the batteries are inserted correctly and are not depleted. Replace if necessary (2 AAA batteries). ◦ Ensure the remote is paired with the device. If not, re-pair it via Settings. ◦ Remove any obstructions between the remote and the device.
Wi-Fi Connection Issues	◦ Check your Wi-Fi password. ◦ Restart your router and the streaming box. ◦ Ensure the device is within range of your Wi-Fi router. ◦ Consider using a wired Ethernet connection for stability.
Apps Crashing or Freezing	◦ Close and reopen the app. ◦ Clear the app's cache and data (Settings > Apps > [App Name] > Clear cache/Clear data). ◦ Ensure the app and the device's system software are up to date. ◦ Restart the streaming box.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Name	LEAP-S3+V2
Brand	Strong
Color	White
Product Type	TV Decoder / Streaming Media Player
Operating System	Android 11 (as per description)
Resolution	4K UHD
Video Decoding	H.265 (as per description)
HDR Support	HDR, Dolby Vision
Audio Support	Dolby Atmos
Connectivity Technology	HDMI, USB, Wi-Fi 5 Dual Band, Bluetooth 5.0, Ethernet
HDMI Version	HDMI 2.1 (as per description)
Compatible Devices	Television, Laptop, Tablet, Smartphone
Internet Services Supported	Netflix, Prime Video, Disney+, YouTube, Google Play Store
Special Features	Chromecast Built-in, Google Assistant Voice Control
Product Dimensions	9.6L x 9.6W x 2H centimeters
Remote Control Batteries	2 AAA batteries (not included)
ASIN	B0DVH3ZWGV
Manufacturer Model Number	9120072379208

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Strong website. Keep your purchase receipt as proof of purchase for any warranty claims. If you require further assistance or have questions not covered in this manual, please contact Strong customer support through their official channels.

© 2024 Strong. All rights reserved.
Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question